VS-606V7 Series INSTRUCTION MANUAL

COMPACT GENERAL-PURPOSE INVERTER (VOLTAGE VECTOR CONTROL)

Upon receipt of the product and prior to initial operation, read these instructions thoroughly and retain them for future reference.



PREFACE

Yaskawa's VS-606V7 is a small and simple Inverter; as easy to use as a contactor. This instruction manual describes installation, maintenance, inspection, troubleshooting, and specifications of the VS-606V7. Read this instruction manual thoroughly before operation.

YASKAWA ELECTRIC CORPORATION

General Precautions

- Some drawings in this manual are shown with protective covers or shields removed in order to show detail with more clarity. Make sure all covers and shields are replaced before operating the product.
- This manual may be modified when necessary because of improvements to the product, modifications, or changes in specifications.
 Such modifications are indicated by revising the manual number.
- To order a copy of this manual, or if your copy has been damaged or lost, contact your Yaskawa representative.
- Yaskawa is not responsible for any modification of the product made by the user, since that will void the guarantee.

NOTATION FOR SAFETY PRECAUTIONS

Read this instruction manual thoroughly before installation, operation, maintenance, or inspection of the VS-606V7. In this manual, safety precautions are classified as either warnings or cautions and are indicated as shown below.

⚠ WARNING

Indicates a potentially hazardous situation which, if not avoided, may result in death or serious injury.

⚠ CAUTION

Indicates a potentially hazardous situation which, if not avoided, may result in minor or moderate injury or damage to equipment.

It may also be used to alert against unsafe practices.

Even items classified as cautions may result in serious accidents in some situations. Always follow these important precautions.



: Indicates information to insure proper operation.

PRECAUTIONS FOR UL/cUL MARKING

- Do not connect or disconnect wiring, or perform signal checks while the power supply is turned ON.
- The Inverter internal capacitor is still charged even after the power supply is turned OFF. To prevent electric shock, disconnect all power before servicing the Inverter, and then wait at least one minute after the power supply is disconnected. Confirm that all indicators are OFF before proceeding.
- Do not perform a withstand voltage test on any part of the Inverter. The Inverter is an electronic device that uses semiconductors, and is thus vulnerable to high voltage.
- Do not remove the Digital Operator or the blank cover unless the power supply is turned OFF. Never touch the printed circuit board (PCB) while the power supply is turned ON.
- This Inverter is not suitable for use on a circuit capable of delivering more than 18,000 RMS symmetrical amperes, 250 V maximum (200 V Class Inverters) or 18,000 RMS symmetrical amperes, 480 V maximum (400 V Class Inverters).

⚠ CAUTION

• Use 75°C copper wire or equivalent.

PRECAUTIONS FOR CE MARKINGS

- Only basic insulation to meet the requirements of protection class 1 and overvoltage category II is provided with control circuit terminals.
 Additional insulation may be necessary in the end product to conform to CE requirements.
- For 400 V Class Inverters, make sure to ground the supply neutral to conform to CE requirements.
- For conformance to EMC directives, refer to the relevant manuals for the requirements.

Document No. EZZ008389 for Japanese version, Document No. EZZ008390 for English version

RECEIVING THE PRODUCT

| ⚠ CAUTION | |
|--|-------------|
| | (Ref. page) |
| Do not install or operate any Inverter that is damaged or has missing parts. Failure to observe this caution may result in injury or equipment damage. | 20 |

MOUNTING

| ⚠ CAUTION | |
|---|-------------|
| | (Ref. page) |
| Lift the Inverter by the heatsinks. When moving the Inverter, never lift it by the plastic case or the terminal cover. Otherwise, the main unit may fall and be damaged. | 26 |
| Mount the Inverter on nonflammable material (i.e., metal). Failure to observe this caution may result in a fire. | 25 |
| When mounting Inverters in an enclosure, install a fan or other cooling device to keep the intake air temperature below 50°C for IP20 (open chassis type), or below 40°C for NEMA 1 (TYPE 1). Overheating may cause a fire or damage the Inverter. | 25 |
| The VS-606V7 generates heat. For effective cooling, mount it vertically. Refer to the figure in <i>Mounting Dimensions</i> on page 26. | 26 |

WIRING

(Ref. page) Only begin wiring after verifying that the power 30 supply is turned OFF. Failure to observe this warning may result in an electric shock or a fire Wiring should be performed only by qualified 30 personnel. Failure to observe this warning may result in an electric shock or a fire • When wiring the emergency stop circuit, check 30 the wiring thoroughly before operation. Failure to observe this warning may result in injury. 36 Always ground the ground terminal according to the local grounding code. Failure to observe this warning may result in an electric shock or a fire. • For 400 V class, make sure to ground the sup-30 ply neutral. Failure to observe this warning may result in an electric shock or a fire. If the power supply is turned ON during the 39 FWD (or REV) RUN command is given, the motor will start automatically. Turn the power supply ON after verifying that the RUN signal is OFF. Failure to observe this warning may result in injury. 92 • When the 3-wire sequence is set, do not make the wiring for the control circuit unless the multifunction input terminal parameter is set. Failure to observe this warning may result in injury.

▲ CAUTION

| | (Ref. page) |
|--|-------------|
| Verify that the Inverter rated voltage coincides with the AC power supply voltage. Failure to observe this caution may result in personal injury or a fire. | 30 |
| Do not perform a withstand voltage test on the Inverter. Performing withstand voltage tests may damage semiconductor elements. | 30 |
| To connect a Braking Resistor, Braking Resistor Unit, or Braking Unit, follow the procedure described in this manual. Improper connection may cause a fire. | 37 |
| Always tighten terminal screws of the main circuit and the control circuits. Failure to observe this caution may result in a malfunction, damage, or a fire. | 30 |
| Never connect the AC main circuit power supply to output terminals U/T1, V/T2, W/T3, B1, B2, -, +1, or +2. The Inverter will be damaged and the guarantee will be voided. | 30 |
| Do not connect or disconnect wires or connectors while power is applied to the circuits. Failure to observe this caution may result in injury. | 30 |
| • Do not perform signal checks during operation. The machine or the Inverter may be damaged. | 30 |
| To store the constant with an ENTER command by communications, be sure to take measures for an emergency stop by using the external ter- minals. Delayed response may cause injury or damage the machine. | 121 |
| | |

OPERATION

| <u></u> MARNING | | |
|---|-------------|--|
| | (Ref. page) | |
| Only turn ON the input power supply after confirming that the Digital Operator or blank cover (optional) are in place. Do not remove the Digital Operator or the covers while current is flowing. Failure to observe this warning may result in an electric shock. | 40 | |
| Never operate the Digital Operator or DIP switches with wet hands. Failure to observe this warning may result in an electric shock. | 40 | |
| Never touch the terminals while current is flow- ing, even if the Inverter is stopping. Failure to observe this warning may result in an elec- tric shock. | 40 | |
| When the fault retry function is selected, stand clear of the Inverter or the load. The Inverter may restart suddenly after stopping. (Construct the system to ensure safety, even if the Inverter should restart.) Failure to observe this warning may result in injury. | 77 | |
| When continuous operation after power recovery is selected, stand clear of the Inverter or the load. The Inverter may restart suddenly after stopping. (Construct the system to ensure safety, even if the Inverter should restart.) Failure to observe this warning may result in injury. | 72 | |
| The Digital Operator stop button can be disabled by a setting in the Inverter. Install a separate emergency stop switch. Failure to observe this warning may result in injury. | 86 | |

| <u></u> WARNING | |
|---|-------------|
| | (Ref. page) |
| If an alarm is reset with the operation signal ON, the Inverter will restart automatically. Reset an alarm only after verifying that the operation signal is OFF. Failure to observe this warning may result in injury. | 39 |
| When the 3-wire sequence is set, do not make the wiring for the control circuit unless the multi- function input terminal parameter is set. Failure to observe this warning may result in injury. | 92 |
| If n001=5, a Run command can be received even while changing a constant. If sending a Run command while changing a constant, such as during a test run, be sure to observe all safety precautions. Failure to observe this warning may result in injury. | 48, 55 |

| ⚠ CAUTION | |
|---|-------------|
| | (Ref. page) |
| Never touch the heatsinks, which can be extremely hot. Failure to observe this caution may result in harmful burns to the body. | 40 |
| It is easy to change operation speed from low to high. Verify the safe working range of the motor and machine before operation. Failure to observe this caution may result in injury and machine damage. | 40 |
| Install a holding brake separately if necessary. Failure to observe this caution may result in injury. | 40 |

| ⚠ CAUTION | |
|--|-------------|
| | (Ref. page) |
| If using an Inverter with an elevator, take safety measures on the elevator to prevent the eleva- tor from dropping. Failure to observe this caution may result in injury. | 155 |
| Do not perform signal checks during operation. The machine or the Inverter may be damaged. | 40 |
| All the constants set in the Inverter have been preset at the factory. Do not change the settings unnecessarily. The Inverter may be damaged. | 40 |

MAINTENANCE AND INSPECTION

| <u></u> WARNING | | |
|--|-------------|--|
| | (Ref. page) | |
| Never touch high-voltage terminals on the Inverter. Failure to observe this warning may result in an electrical shock. | 160 | |
| Disconnect all power before performing maintenance or inspection, and then wait at least one minute after the power supply is disconnected. For 400 V Class Inverters, confirm that all indicators are OFF before proceeding. If the indicators are not OFF, the capacitors are still charged and can be dangerous. | 160 | |
| Do not perform withstand voltage test on any part of the VS-606V7. The Inverter is an electronic device that uses semi- conductors, and is thus vulnerable to high voltage. | 160 | |
| Only authorized personnel should be permitted to perform maintenance, inspection, or parts replacement. (Remove all metal objects (watches, bracelets, etc.) before starting work.) (Use tools which are insulated against electrical shock.) Failure to observe these warnings may result in an electric shock. | 160 | |

⚠ CAUTION

(Ref. page)

 The control PCB employs CMOS ICs. Do not touch the CMOS elements.
 They are easily damaged by static electricity. 160

 Do not connect or disconnect wires, connectors, or the cooling fan while power is applied to the circuit. 160

Failure to observe this caution may result in injury.

OTHERS

⚠ WARNING

 Never modify the product.
 Failure to observe this warning may result in an electrical shock or injury and will void the guarantee.


▲ CAUTION

 Do not subject the Inverter to halogen gases, such as fluorine, chlorine, bromine, and iodine, at any time even during transportation or installation.

Otherwise, the Inverter can be damaged or interior parts burnt.

WARNING LABEL

A warning label is provided on the front cover of the Inverter, as shown below. Follow the warnings when handling the Inverter.

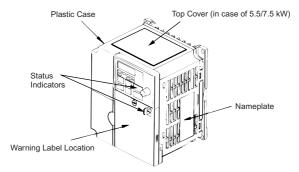

Warning Labels RUN ALARM FPST31042-R NG - Risk of electric shock Read manual before installing Wait 1 minute for capacitor discharge after disconnecting power supply. To conform to **CC** requirements, make sure to ground the supply neutral for 400V class, Risque de décharge ▲ AVERTISSEMENT ělectrique, · Lisez manuel avant d'installer. · Attendez 1 minute apres d'étachment d'électricité. Juscequ'à les condensateurs sont decharges. Pour répondre aux exigences ce , s'assurer que le neutre est à la masse Pour la sêrie 400V.

Example of 5.5 kW for 400 V

WARRANTY INFORMATION

■ Free Warranty Period and Scope

□ Warranty Period

This product is warranted for twelve months after being delivered to Yaskawa's customer or if applicable eighteen months from the date of shipment from Yaskawa's factory, whichever comes first.

□ Scope of Warranty

Inspections

Periodic inspections must be conducted by the customer. However, upon request, Yaskawa or one of Yaskawa's Service Centers can inspect the product for a fee. In this case, if after conferring with the customer, a Yaskawa product is found to be defective due to Yaskawa workmanship or materials and the defect occurs during the warranty period, then this fee will be waived and the problem remedied free of charge.

Repairs

If a Yaskawa product is found to be defective due to Yaskawa workmanship or materials and the defect occurs during the warranty period, Yaskawa will provide a replacement, repair the defective product, and provide shipping to and from the site free of charge.

However, if the Yaskawa Authorized Service Center determines that the problem with a Yaskawa product is not due to defects in Yaskawa's workmanship or materials, then the customer will be responsible for the cost of any necessary repairs. Some problems that are outside the scope of this warranty are:

- Problems due to improper maintenance or handling, carelessness, or other reasons where the customer is determined to be responsible.
- Problems due to additions or modifications made to a Yaskawa product without Yaskawa's understanding.
- Problems due to the use of a Yaskawa product under conditions that do not meet the recommended specifications.
- · Problems caused by natural disaster or fire.
- Or other problems not due to defects in Yaskawa workmanship or materials.

Warranty service is only applicable within Japan.

However, after-sales service is available for customers outside of Japan for a reasonable fee. Contact your local Yaskawa representative for more information

Exceptions

Any inconvenience to the customer or damage to non-Yaskawa products due to Yaskawa's defective products whether within or outside the warranty period are NOT covered by this warranty.

RESTRICTIONS

- The VS-606V7 was not designed or manufactured for use in devices or systems that may directly affect or threaten human lives or health.
- Customers who intend to use the product described in this manual for devices or systems relating to transportation, health care, space aviation, atomic or electric power, or underwater use must contact their Yaskawa representatives or the nearest Yaskawa sales office beforehand.
- This product has been manufactured under strict quality-control guidelines. However, if this product is to be installed in any location where failure of this product could involve or result in a life-and-death situation or loss of human life or in a facility where failure may cause a serious accident or physical injury, safety devices must be installed to minimize the likelihood of any accident.

CONTENTS

| NOT | ATION FOR SAFETY PRECAUTIONS | 2 |
|--------|--|--|
| 1. Re | eceiving the Product | - 20 |
| | Checking the Nameplate | 21 |
| 2. Ide | entifying the Parts | - 22 |
| 3. M | ounting | - 25 |
| | Mounting/Removing Components Removing the Front Cover Mounting the Front Cover Removing the Terminal Cover | 26 27 27 27 27 28 28 28 |
| 4. W | iring | - 30 |
| • | Wire and Terminal Screw Sizes | 36 38 |
| 5. O | perating the Inverter | - 40 |
| | Test Run | 43 43 44 |

| | | Function Indicator Description MNTR Multi-function Monitoring | 48 50 50 |
|----|----|--|----------------|
| 6. | Pr | ogramming Features | - 54 |
| | | Hardware | 54 |
| | | Software (Constant) | 54 |
| | | Constant Setup and Initialization | 55 |
| | | Constant Selection/Initialization (n001) | 55 |
| | | Using V/f Control Mode | 57 |
| | | Adjusting Torque According to Application | 57 |
| | | Using Vector Control Mode | 60 |
| | | Precautions for Voltage Vector Control Application | 60 |
| | | Motor Constant Calculation | |
| | | V/f Pattern during Vector Control | 62 |
| | | | |
| | | How to Select LOCAL/REMOTE Mode | |
| | | Selecting RUN/STOP Commands | 64 |
| | _ | LOCAL Mode | |
| | | REMOTE Mode | |
| | | Operating (RUN/STOP Commands) by Communications | |
| | | Selecting Frequency Reference | 65 |
| | _ | LOCAL Mode | |
| | | REMOTE Mode | |
| | | Setting Operation Conditions | 67 |
| | | Reverse Run Prohibit (n006) | 67 |
| | | Multi-step Speed Selection | |
| | | Operating at Low Speed | |
| | | Adjusting Speed Setting Signal | 69 |
| | | Adjusting Frequency Upper and Lower Limits | |
| | | Using Four Acceleration/Deceleration Times | |
| | | Momentary Power Loss Ridethrough Method (n081) S-curve Selection (n023) | |
| | | Torque Detection | 74 |
| | | Frequency Detection Level (n095) | |
| | _ | i requeries between the series of the series | - 10 |

| | 6 |
|--|--|
| (n082)7 | 7 |
| Operating a Coasting Motor without Tripping 7 | 7 |
| Holding Acceleration/Deceleration Temporarily 78 | 8 |
| • , , | |
| • , , | 0 |
| | ^ |
| | U |
| Frequency Selection (n080) 8 | 3 |
| Operator Stop Key Selection (n007) 8 | 6 |
| Selecting the Stopping Method8 | 7 |
| Stopping Method Selection (n005) 8 | 7 |
| Applying DC Injection Braking 8 | 8 |
| Building Interface Circuits with External Devices 90 | 0 |
| Using Input Signals 9 | |
| | |
| | |
| | |
| | |
| Preventing the Motor from Stalling (Current Limit) 10: | 2 |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| Message Format 112 | |
| Storing Constants [ENTER Command] (can be written only.)- 12 | 1 |
| Performing Self-test 12 | 4 |
| | Continuing Operation Using Automatic Retry Attempts (n082) 7 Operating a Coasting Motor without Tripping 7 Holding Acceleration/Deceleration Temporarily 7 Using Frequency Meter or Ammeter (n066) 7 Using Frequency Meter or Ammeter (n067) 8 Using Analog Output (AM-AC) as a Pulse Train Signal Output (n065) 8 Reducing Motor Noise or Leakage Current Using Carrier Frequency Selection (n080) 8 Operator Stop Key Selection (n007) 8 Selecting the Stopping Method 8 Stopping Method Selection (n005) 8 Applying DC Injection Braking 8 Building Interface Circuits with External Devices - 9 Using Input Signals 9 Using Output Signals (n057, n058, n059) 9 Using Output Signals (n057, n058, n059) - 9 Setting Frequency by Current Reference Input - 9 Frequency Reference by Pulse Train Input - 10 Preventing the Motor from Stalling (Current Limit) - 10 Stall Prevention during Operation - 10 Motor Protection 10 Motor Protection - 10 Motor Protection - 10 Selecting Cooling Fan Operation - 10 Using MEMOBUS (MODBUS) Communications - 10 Using MEMOBUS (MODBUS) Communications - 10 MEMOBUS (MODBUS) Communications - 10 Communications specified - 11 Communications Specified - 11 Setting Constants Necessary for Communication - 11 Message Format - 11 Storing Constants [ENTER Command] (can be written only.) - 12 |

| | | Using Energy-saving Control Mode | 125 |
|----|----|---|-----|
| | | Energy-saving Control Selection (n139) | 125 |
| | | Energy-saving Search Operation | 126 |
| | | Motor Code | |
| | | Using PID Control Mode | 130 |
| | | PID Control Selection (n128) | 131 |
| | | Using Constant Copy Function | |
| | | Constant Copy Function | 138 |
| | | READ Function | 140 |
| | | COPY Function | 141 |
| | | VERIFY Function | |
| | | Inverter Capacity Display | 145 |
| | | Software No. Display | 147 |
| | | Display List | 147 |
| | | Unit Selection for Frequency Reference Setting/Display | 149 |
| | | coloculing i recocoling for i requestoy i telefolice zeco | |
| | | (n064) | |
| | | pat output opop.iaco zototto | 152 |
| | | Chacherque Detection | |
| | | Using Inverter for Elevating Machines | 155 |
| | | Brake ON/OFF Sequence | |
| | | Stall Prevention During Deceleration | |
| | | Settings for V/f Pattern and Motor Constants | |
| | | Momentary Power Loss Restart and Fault Restart | |
| | | I/O Open-phase Protection and Overtorque Detection | |
| | | Carrier Frequency | 157 |
| | | External Baseblock Signal | |
| | | Acceleration/Deceleration Time | |
| | | Contactor on the Inverter's Output-side | |
| | | Using MECHATROLINK-II Communications | 159 |
| 7. | Ma | aintenance and Inspection | 160 |
| | | Periodic Inspection | 161 |
| | | Part Replacement | |
| | | Replacement of Cooling Fan | |
| | | | |

| 8. | Fa | ault Diagnosis | 165 |
|----|----|--|---|
| | | Protective and Diagnostic Functions Corrective Actions of Models with Blank Cover Corrective Actions of Models with Digital Operator Troubleshooting | - 165 - 166 |
| 9. | Sp | pecifications | 180 |
| | | Standard Specifications (200 V Class) | - 184 - 188 - 192 - 194 - 197 |
| 10 | C | onformance to CE Markings | 213 |
| | | CE Markings | - 213 - 213 |

1. Receiving the Product

CAUTION

Do not install or operate any Inverter that is damaged or has missing parts.

Failure to observe this caution may result in injury or equipment damage.


After unpacking the VS-606V7, check the following.

- Verify that the model number matches your purchase order or packing slip.
- Check the Inverter for physical damage that may have occurred during shipping.


If any part of VS-606V7 is missing or damaged, call for service immediately.

■ Checking the Nameplate

Example for 3-phase, 200-VAC, 0.1-kW Inverter for Asian standards

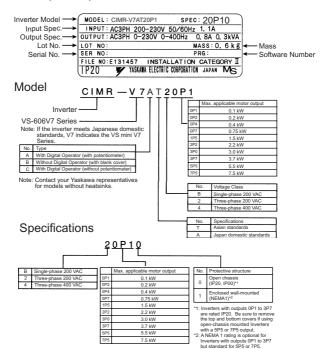

2. Identifying the Parts

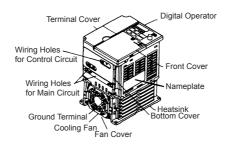



Digital operator (with potentiometer) JVOP-140 Used for setting or changing constants. Frequency can be set using potentiometer.




Digital operator (without potentiometer) JVOP-147 Used for setting or changing constants.




Blank cover In models without a Digital Operator, the blank cover is mounted in place of the Digital Operator.

VS-606V7 Inverters with the Covers Removed

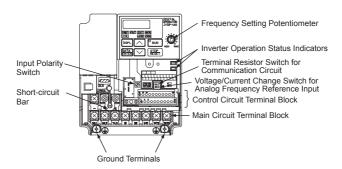

Example for 3-phase (200 V Class, 1.5 kW) Inverter

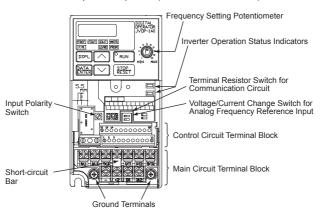

Example for 3-phase (200 V Class, 0.1 kW) Inverter


Main Circuit Terminal Arrangement

The terminal arrangement of the main circuit terminals depends on the Inverter model.


CIMR-V7*T20P1 to 20P7, B0P1 to B0P4




CIMR-V7*T21P5, 22P2, B0P7, B1P5, 40P2 to 42P2

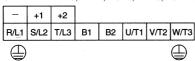

CIMR-V7*T23P7, B2P2, 43P0, 43P7

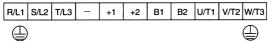

CIMR-V7*TB3P7

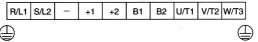

CIMR-V7*T25P5, 27P5, 45P5, 47P5



3. Mounting


Choosing a Location to Mount the Inverter


Be sure the Inverter is protected from the following conditions.

- Extreme cold and heat. Use only within the specified ambient temperature range:
 - -10 to 50°C for IP20 (open chassis type), -10 to 40°C for NEMA 1 (TYPE 1)
- · Rain and moisture
- · Oil sprays and splashes
- · Salt spray
- · Direct sunlight (Avoid using outdoors.)
- · Corrosive gases (e.g., sulfurized gas) or liquids
- · Dust or metallic particles in the air
- · Physical shock or vibration
- Magnetic noise (Examples: Welding machines, power devices, etc.)
- · High humidity
- · Radioactive substances
- · Combustibles, such as thinner or solvents

■ Mounting Dimensions

To mount the VS-606V7, the dimensions shown below are required.

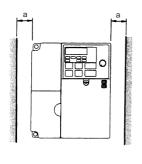

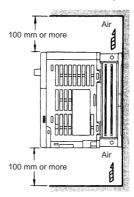

| Voltage Class (V) | Max. Applicable Motor Capacity (kW) | Length a |
|--|---|-----------------|
| 200 V Single-phase 3-phase 400 V 3-phase | 3.7 kW or less | 30 mm min. |
| 200 V 3-phase | 5.5 kW | 50 mm min. |
| 400 V 3-phase | 7.5 kW | 30 11111 11111. |

CAUTION

- Lift the Inverter by the heatsinks. When moving the Inverter, never lift it by the plastic case or the terminal cover.
 - Otherwise, the main unit may fall and be damaged.
- The VS-606V7 generates heat. For effective cooling, mount it vertically.



- The same space is required horizontally and vertically and right and left for both Open Chassis (IP00, IP20) and Enclosed Wall-mounted (NEMA 1) Inverters.
- Always remove the top and bottom covers before installing a 200 or 400 V Class Inverter with an output of 5.5/7.5 kW in a panel.

■ Mounting/Removing Components

Removing and Mounting the Digital Operator and Covers

☐ Removing the Front Cover

Use a screwdriver to loosen the screw (section A) on the front cover. (This screw can not be removed to prevent loss.) Then press the right and left sides in direction 1 and lift the front cover in direction 2.


□ Mounting the Front Cover

Mount the front cover by reversing the order of the above procedure for removal.

□ Removing the Terminal Cover

 Inverters with Width of 108 mm, 140 mm or 170 mm


After removing the front cover, press the right and left sides of the terminal cover in direction 1 and lift the terminal cover in direction 2.

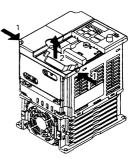

Inverters with Width of 180 mm

Use a screwdriver to loosen the screw (section B) on the terminal cover surface. (This screw can not be removed to prevent loss.) Then press the right and left sides in direction 1 and lift the terminal cover in direction 2.


☐ Mounting the Terminal Cover Mount the terminal cover by reversing the order of the above procedure for removal.

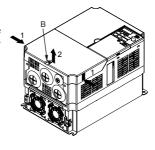

☐ Removing the Digital Operator

After removing the front cover, (follow the procedure on page 27) lift the upper and lower sides (section C) of the right side of the Digital Operator in direction 1.


Mounting the Digital Operator Mount the Digital Operator by reversing the order of the above procedure for removal.

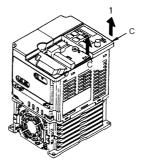

□ Removing the Bottom Cover


 Inverters with Width of 108 mm, 140 mm or 170 mm

After removing the front cover and the terminal cover, tilt the bottom cover in direction 1 with section A as a supporting point.

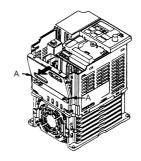

Inverters with Width of 180 mm

After removing the terminal cover, use a screwdriver to loosen the mounting screw in direction 1.

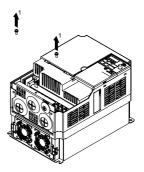

☐ Mounting the Bottom Cover Mount the bottom cover by reversing the order of the above procedure for removal

4. Wiring

MARNING

- Only begin wiring after verifying that the power supply is turned OFF.
 - Failure to observe this warning may result in an electric shock or a fire.
- Wiring should be performed only by qualified personnel.
 - Failure to observe this warning may result in an electric shock or a fire.
- When wiring the emergency stop circuit, check the wiring thoroughly before operation.
 - Failure to observe this warning may result in injury.
- For 400 V class, make sure to ground the supply neutral.
 - Failure to observe this warning may result in an electric shock or a fire.

CAUTION

- Verify that the Inverter rated voltage coincides with the AC power supply voltage.
 - Failure to observe this caution may result in personal injury or a fire.
- Do not perform a withstand voltage test on the Inverter.
 - Performing withstand voltage tests may damage semiconductor elements.
- Always tighten terminal screws of the main circuit and the control circuits.
 - Failure to observe this caution may result in a malfunction, damage, or a fire.
- Never connect the AC main circuit power supply to output terminals U/T1, V/T2, W/T3, B1, B2, -, +1, or +2.
 - The Inverter will be damaged and the guarantee will be voided.
- Do not connect or disconnect wires or connectors while power is applied to the circuits.
 Failure to observe this caution may result in injury.
- Do not perform signal checks during operation.
 The machine or the Inverter may be damaged.
- To store the constant with an ENTER command by communications, be sure to take measures for an

emergency stop by using the external terminals. Delayed response may cause injury or damage the machine



Wiring Instructions

 Always connect the power supply for the main circuit inputs to the power input terminals R/L1, S/L2, and T/L3 (R/L1, S/L2 for single-phase power) via a molded-case circuit breaker (MCCB) or a fuse. Never connect the power supply to terminals U/T1, V/T2, W/T3, B1, B2, -, +1, or +2. The Inverter may be damaged.
 For single-phase Inverters, always use terminals R/L1 and S/L2. Never connect terminal T/L3. Fuses must be of ULclass RK5 fuse or an equivalent.

Refer to page 197 for recommended peripheral devices.

Inverter Power Supply Connection Terminals

| 200-V 3-phase Input | 200-V Single Input | 400-V 3-phase Input |
|----------------------------------|---------------------------|---------------------|
| Power Supply Speci- | Power Supply Speci- | Power Supply Speci- |
| fication Inverters | fication Inverters | fication Inverters |
| CIMR-V7□□2□□□ | CIMR-V7□□B□□□ | CIMR-V7□□4□□□ |
| Connect to R/L1, S/L2, and T/L3. | Connect to R/L1 and S/L2. | |

- If the wiring distance between Inverter and motor is long, reduce the Inverter carrier frequency. For details, refer to Reducing Motor Noise or Leakage Current Using Carrier Frequency Selection (n080) on page 83.
- Control wiring must be less than 50 m in length and must be separated from power wiring. Use shielded twisted-pair cable when inputting the frequency signal externally.
- Only basic insulation to meet the requirements of protection class 1 and overvoltage category II is provided with control circuit terminals. Additional insulation may be necessary in the end product to conform to CE requirements
- Closed-loop connectors should be used when wiring to the main circuit terminals.
- 6. Voltage drop should be considered when determining the

wire size.

Voltage drop can be calculated using the following equation:

Phase-to-phase voltage drop (V)

= $\sqrt{3}$ × wire resistance (Ω /km) × wiring distance (m) × current

$$(A) \times 10^{-3}$$

Select a wire size so that voltage drop will be less than 2% of the normal rated voltage.

7. If the Inverter is connected to a power transformer exceeding 600 kVA, excessive peak current may flow into the input power supply circuit, and break the converter section. In this case, attach an AC reactor (optional) to the Inverter input side, or a DC reactor (optional) to the DC reactor connection terminal.

■ Wire and Terminal Screw Sizes

1 Control Circuits

| Model | Terminal | Screws | Tightening | Wires | | | | | |
|-----------------|--|--------|---------------|--|-----------------------|-----------------|------|---------------------------|--|
| | Symbols | | Torque N•m | Applicable Size | Recom- mended Size | | Туре | | |
| | | | | mm ² | AWG | mm ² | AWG | | |
| Same for all | MA, MB, MC | M3 | 0.5 to 0.6 | Twisted wires: 0.5 to 1.25, Single: 0.5 to 1.25 | 20 to 16, 20 to 16 | 0.75 | 18 | Shielded or equivalent | |
| models | S1 to S7, P1, P2, SC, PC, R+, R-, S+, S-, FS, FR, FC, AM, AC, RP | M2 | 0.22 to 0.25 | Twisted wires: 0.5 to 0.75, Single: 0.5 to 1.25 | 20 to 18, 20 to 16 | 0.75 | 18 | | |

2. Main Circuits

200 V Class 3-phase Input Inverters

| Nem Applicable Size Recommended Type Size Recommended Type Size Recommended Type Type Type Recommended Type Typ | Model | Terminal Symbols | Screws | Tightening | | | Wires | | |
|---|-----------------------|---|--------|---------------|-----------------|----------|-----------------|-----|---|
| CIMR- V7-T 20P1 F.1. S.1.2. T/L.3. | | | | Torque N•m | Applica | ble Size | | | Туре |
| V7-T 20P1 √1, ½, 81, 82, UT1, VT2, WT3 wheeled by the equivale sheather equivale sheather equivale sheather equivale sheather equivale with the equivale sheather equi | | | | | mm ² | AWG | mm ² | AWG | |
| CIMR- V7-T 20P2 UT1, VT12, WT3 | V7∗T | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | 600 V vinyl- sheathed or equivalent |
| V7+T 20P2 √1, 1, 2, 81, 82, UT1, VT2, WT3 CIMR- V7+T 20P4 RL1, SL2, TL3, V7+T 20P4 M3.5 0.8 to 1.0 0.75 to 2 18 to 14 2 14 CIMR- V7+T 20P4 RL1, SL2, TL3, V7+T 20P4 M3.5 0.8 to 1.0 0.75 to 2 18 to 14 2 14 CIMR- V7+T 20P7 RL1, SL2, TL3, V12, W13 M3.5 0.8 to 1.0 0.75 to 2 18 to 14 2 14 CIMR- V7+T 20P7 Y1-1, V12, W13 M4 1.2 to 1.5 2 to 5.5 14 to 10 2 14 CIMR- RL1, SL2, TL3, V7+T 22P2 U7T1, V712, W173 M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- RL1, SL2, TL3, V1-1, V12, W173 W1-1, V2, B1, B2, U711, V712, W173 W1-1, V2, B1, B2, U711, W12, W173 W1-1, V2, B1, B2, W12, W13, W13, | | (| | | | | | | |
| CIMR- V7-T 2-11-2, B1, B2, U71, V712, W73 CIMR- V7-T 2-11-12, B1, B2, U713, V713, V7-T 2-11-12, B1, B2, U713, V7-T 2-11-12, B1, B2, U713, W745 CIMR- V1-12, B1, B2, W13, W14, W15, W15, W15, W15, W15, W15, W15, W15 | V7*T | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | |
| V7+T 20P4 -,+1,+2, 81, 82, U71, V712, W73 20P4 ± CIMR- V7+T 2,+1,+2, 81, 82, U71, V712, W73 M3.5 0.8 to 1.0 0.75 to 2 18 to 14 2 14 14 CIMR- V7+T 2,+1,+2, 81, 82, U71, V712, W73 M4 1.2 to 1.5 2 to 5.5 14 to 10 2 14 to 10 3.5 12 CIMR- V7+T 2, V12, W13 M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- V7+T 3, +1, +2, 81, 82, U713, W13 M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- RAL1, SL2, TL3, W13, W4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 | | (| | | | | | | |
| V7-T 20P7 -, +1, +2, 81, 82, 2 U/1, V/T2, W/T3 CIMR- V7-T 21P5 RJL1, SIL2, T/L3, N4 U/1, V/T2, W/T3 M4 M4 M2 1.2 to 1.5 2 to 5.5 14 to 10 2 14 CIMR- V7-T 27P3 RJL1, SIL2, T/L3, N2 U/1, V/T2, W/T3 M4 M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- V7-T 22P2 RJL1, SIL2, T/L3, M4 U/1, V/T2, W/T3 M4 U/1, V/T2, W/T3 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- V7-T V7-T V7-T V7-T V7-T V7-T V7-T V7- | CIMR- V7*T 20P4 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | |
| V7-T 20P7 -, +1, +2, 81, 82, 2 U/1, V/T2, W/T3 CIMR- V7-T 21P5 RJL1, SIL2, T/L3, N4 U/1, V/T2, W/T3 M4 M4 M2 1.2 to 1.5 2 to 5.5 14 to 10 2 14 CIMR- V7-T 27P3 RJL1, SIL2, T/L3, N2 U/1, V/T2, W/T3 M4 M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- V7-T 22P2 RJL1, SIL2, T/L3, M4 U/1, V/T2, W/T3 M4 U/1, V/T2, W/T3 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- V7-T V7-T V7-T V7-T V7-T V7-T V7-T V7- | | (| | | | | | | |
| CIMR- V7-T 2.11, S.12, T/L3, V1, V172, W173 CIMR- V7-T 2.11, S.12, T/L3, V171, V172, W173 CIMR- V7-T 2.21, S.1, B.2, U711, V172, W173 CIMR- V7-T 2.21, S.1, B.2, U711, V172, W173 CIMR- V7-T 2.21, S.1, B.2, U711, V172, W173 CIMR- V7-T 2.11, V2, B.1, B.2, U711, V172, W173 CIMR- V7-T 2.11, V2, B.1, B.2, U711, V172, W173 CIMR- V7-T 2.11, V2, B.1, B.2, U711, V172, W173 CIMR- V1, V2, B.1, B.2, U711, W173, W173 CIMR- V1, V2, V2, V3, W173 CIMR- V1, V2, V3, V4, V4, V4, V4, V4, V4, V4, V4, V4, V4 | V7∗T | -, +1, +2, B1, B2, | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | |
| V7+T 21P5 -, +1, +2, B1, B2, U71, V712, W73 ⊕ 3.5 CIMR- V7+T 22P2 R/L1, S/L2, T/L3, U711, V712, W173 M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 CIMR- 22P2 W171, V712, W173 ⊕ CIMR- 3.5 R/L1, S/L2, T/L3, U711, V712, W173 W1 1.2 to 1.5 2 to 5.5 14 to 10 5.5 10 | | (| | | | | | | |
| CIMR- R/L1, S/L2, T/L3, M4 1.2 to 1.5 2 to 5.5 14 to 10 3.5 12 2P2 U/T1, V/T2, W/T3 | V7∗T | -, +1, +2, B1, B2, | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| V7-T -,+1,+2,B1,B2, 22P2 U/T1,V/T2,W/T3 CIMR- RL1, SL2, T/L3, M4 1.2 to 1.5 2 to 5.5 14 to 10 5.5 10 V7-T -,+1,+2,B1,B2, | | (| | | | | 3.5 | 12 | |
| V7*T -, +1, +2, B1, B2, | CIMR- V7*T 22P2 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 3.5 | 12 | |
| V7*T -, +1, +2, B1, B2, | | (| | | | | | | |
| | V7∗T | -, +1, +2, B1, B2, | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 5.5 | 10 | |
| | | (| | | | | | | |
| CIMR- R.L.1, SIL2, T/L3, V7-T -,+1,+2, B1, B2, V7-T -,+1,+2, B1, B2, UT/1, V/T2, W/T3 | V7∗T | - +1 +2 B1 B2 | M5 | 2.5 | 5.5 to 8 | 10 to 8 | 8 | 8 | |
| | | (| | | | | | | |
| CIMIR- RJ.1. SIL1.2. T.L3. V7-T -,+1,+22. B1, B2. U71. V/T2. W/T3 | CIMR- V7*T 27P5 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M5 | 2.5 | 5.5 to 8 | 10 to 8 | 8 | 8 | |
| | | ⊕ | | | | | | | |

Note: The wire size is given for copper wire at 75°C.

200 V Class Single-phase Input Inverters

| Model | Terminal Symbols | Screws | Tightening Torque | | | Wires | | | |
|-----------------------|---|--------|----------------------|-----------------|----------|-----------------|---------------|---|--|
| | | | N•m | Applical | ble Size | | mended ize | Туре | |
| | | | | mm ² | AWG | mm ² | AWG | | |
| CIMR- V7*T B0P1 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | 600 V vinyl- sheathed or equivalent | |
| | (| | | | | | | | |
| CIMR- V7*T B0P2 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | | |
| | (| | | | | | | | |
| CIMR- V7*T B0P4 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M3.5 | 0.8 to 1.0 | 0.75 to 2 | 18 to 14 | 2 | 14 | | |
| | (a) | | | | | | | | |
| CIMR- V7*T B0P7 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 3.5 | 12 | | |
| | (4) | | | | | | | | |
| CIMR- V7*T B1P5 | R/L1, S/L2, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 5.5 | 10 | | |
| | (| | | | | | | | |
| CIMR- V7*T B2P2 | R/L1, S/L2, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 5.5 | 10 | | |
| | (4) | | | | | | | | |
| CIMR- V7*T B3P7 | R/L1, S/L2, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M5 | 3.0 | 3.5 to 8 | 12 to 8 | 8 | 8 | | |
| | (a) | M4 | 1.2 to 1.5 | 2 to 8 | 14 to 8 | | | | |

Note: 1. The wire size is given for copper wire at 75°C.


2. Do not use terminal T/L3 on Inverters with single-phase input.

400 V Class 3-phase Input Inverters

| Model | Terminal Symbols | Screws | Tightening | | | Wires | | |
|-----------------------|---|--------|---------------|-----------------|-----------------|-----------------|----------------|---|
| | | | Torque N•m | Applica | Applicable Size | | mended lize | Туре |
| | | | | mm ² | AWG | mm ² | AWG | |
| CIMR- V7*T 40P2 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | 600 V vinyl- sheathed or equivalent |
| | (| | | | | | | |
| CIMR- V7*T 40P4 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| | (| | | | | | | |
| CIMR- V7*T 40P7 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| | (| | | | | | | |
| CIMR- V7*T 41P5 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| | (| | | | | | | |
| CIMR- V7*T 42P2 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| | (| | | | | | | |
| CIMR- V7*T 43P0 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| | ⊕ | | | | | 3.5 | 12 | |
| CIMR- V7*T 43P7 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.2 to 1.5 | 2 to 5.5 | 14 to 10 | 2 | 14 | |
| | (| | | | | 3.5 | 12 | |
| CIMR- V7*T 45P5 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M4 | 1.4 | 3.5 to 5.5 | 12 to 10 | 5.5 | 10 | |
| | (| | | | | | | |
| CIMR- V7*T 47P5 | R/L1, S/L2, T/L3, -, +1, +2, B1, B2, U/T1, V/T2, W/T3 | M5 | 2.5 | 5.5 to 8 | 10 to 8 | 5.5 | 10 | |
| | (a) | | | | 4.7500 | | | |

Note: The wire size is given for copper wire at 75°C.

Wiring the Main Circuits

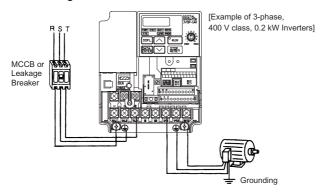

· Main Circuit Input Power Supply

Always connect the power supply line to input terminals R/L1, S/L2, and T/L3 (R/L1, S/ L2 for single-phase Inverters). Never connect them to terminals U/T1, V/T2, W/T3, B1, B2, -, +1, or +2. The Inverter may be damaged if the wrong terminals are connected.



For single-phase Inverters, always use terminals R/L1 and S/L2. Never connect terminal $\ensuremath{T/L3}$.

• Grounding (Use ground terminal 4).)


↑WARNING

Always ground the ground terminal according to local grounding codes.

Failure to observe this warning may result in an electric shock or a fire.

Never ground the VS-606V7 to the same ground as welding machines, motors, or other electrical equipment.

When several VS-606V7 Inverters are used side by side, ground each as shown in examples. Do not loop the ground wires.

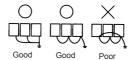

• Braking Resistor Connection (Optional)

↑WARNING

To connect the braking resistor, cut the protector on terminals B1 and B2

To protect the braking resistor from overheating, install a thermal overload relay between the braking resistor and the Inverter. This provides a sequence that turns OFF the power supply with thermal relay trip contacts.

Failure to observe this warning may result in a fire.

Use this same procedure when connecting a Braking Resistor Unit. Refer to page 189.

· Inverter Output

Connect the motor terminals to U/T1, V/T2, and W/T3.

Wiring the Main Circuit Terminals

Pass the cables through wiring hole to connect them. Always mount the cover in its original position.



Connect with a Phillips screwdriver.


■ Wiring the Control Circuits

Only basic insulation is provided for the control circuit terminals.

Additional insulation may be necessary in the end product.

Control Circuit Terminals

Pass the cable through wiring hole to connect it. Always mount the cover in its original position.

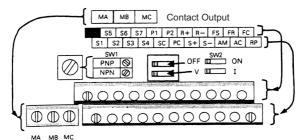

SW1 can be changed according to sequence input signal (S1 to S7) polarity.

- 0 V common: NPN side (Factory setting)
- +24 V common: PNP side
- Refer to pages 192 and 193 for SW1.

Refer to pages 99 and 110 for SW2.

Wiring the Control Circuit Terminals

Screwdriver Blade Width



Insert the wire into the lower part of the terminal block and connect it tightly with a screwdriver.



- · Keep the screwdriver vertical to the Inverter.
- Refer to Page 32 for tightening torques.



The wire sheath strip length must be 5.5 mm.

Open the front cover and verify that the strip length is 5.5 mm.



■ Wiring Inspection

After completing wiring, check the following.

- · Wiring is proper.
- · Wire clippings or screws are not left in the Inverter.
- · Screws are securely tightened.
- · Bare wires in the terminals do not contact other terminals.



If the power supply is turned ON during the FWD (or REV) RUN command is given, the motor will start automatically.

Turn the power supply ON after verifying that the RUN signal is OFF.

Failure to observe this warning may result in injury.



- If the FWD (or REV) RUN command is given when the RUN command from the control circuit terminal is selected (n003 = 1), the motor will start automatically after the main circuit input power supply is turned ON.
- 2. To set the 3-wire sequence, set terminal S3 (n052) to 0.

Operating the Inverter

The Control Mode Selection (n002) is initially set to V/f control mode.

↑WARNING

- Only turn ON the input power supply after confirming that the Digital Operator or blank cover
 (optional) are in place. Do not remove the Digital
 Operator or the covers while current is flowing.
 Failure to observe this warning may result in an electric shock.
- Never operate the Digital Operator or DIP switches with wet hands.
 - Failure to observe this warning may result in an electric shock.
- Never touch the terminals while current is flowing, even if the Inverter is stopping.
 Failure to observe this warning may result in an electric shock.

ACAUTION

- Never touch the heatsinks, which can be extremely hot.
 - Failure to observe this caution may result in harmful burns to the body.
- It is easy to change operation speed from low to high. Verify the safe working range of the motor and machine before operation.
 Failure to observe this caution may result in injury
- and machine damage.
 Install a holding brake separately if necessary.
 Failure to observe this caution may result in injury.
- Do not perform signal checks during operation.
 The machine or the Inverter may be damaged.
- All the constants set in the Inverter have been preset at the factory. Do not change the settings unnecessarily.

The Inverter may be damaged.

■ Test Run

The Inverter operates when a frequency (speed) is set.

There are four operating modes for the VS-606V7:

- RUN command from the Digital Operator (potentiometer/digital setting)
- 2. RUN command from the control circuit terminals
- 3. RUN command from MEMOBUS communications
- 4. RUN command from communication card (optional)

Prior to shipping, the Inverter is set up to receive the RUN command and frequency reference from the Operator. Below are instructions for running the VS-606V7 using the JVOP-140 Digital Operator (with potentiometer). For instructions on operation, refer to page 52.

Operation reference or frequency reference constants can be selected separately as shown below.

| Name | Constant | |
|-------------------------------------|---|--|
| RUN Command Selection | n003 = 0 Enables run, stop, and reset from Digital Operator. = 1 Enables run and stop from control circuit terminals. = 2 Enables MEMOBUS communications. = 3 Enables communication card (optional). | |
| Frequency Reference Selection | n004 = 0 Enables the Digital Operator's potentiometer setting. = 1 Enables Frequency Reference 1 (constant 1024). = 2 Enables a voltage reference (0 to 10 V) at the control circuit terminal. = 3 Enables a current reference (4 to 20 mA) at the control circuit terminal. = 4 Enables a current reference (0 to 20 mA) at the control circuit terminal. = 5 Enables a current reference at the control circuit terminal. = 6 Enables MEMOBUS communications. = 7 Enables a voltage reference (0 to 10 V) at the Digital Operator's circuit terminal. = 8 Enables a current reference (4 to 20 mA) at the Digital Operator circuit terminal. = 9 Enables communication card (optional). | |

| Operation Steps | Operator Display | Function Indicators | Status Indicators |
|---|--|------------------------|----------------------|
| Turn the potentiometer fully counter- clockwise, and then turn the power ON. | 0.00 | FREF | RUN -Ö- ALARM ● |
| F/R will lit. Select FOR or REV RUN using the keys. Never select REV when reverse run is prohibited. | (Forward) or - [: (Reverse) | F/R | RUN Ö ALARM ● |
| Press DSPL to make FREF lit. Then press RUN. | 0.00 | FREF | RUN -☆- ALARM ● |
| Operate the motor by turning the potentiometer clockwise. (A frequency reference corresponding to the potentiometer position will be displayed.) If the potentiometer is switched rapidly, the motor also accelerates or decelerates rapidly in proportion to the potentiometer movement. Pay attention to load status and switch the potentiometer at the speed that will not adversely affect motor movement. | 0.00 to 60.00 Minimum output fre- quency is 1.50 Hz | FREF | RUN -☆- ALARM ● |

Status indicators - - ON : Flashing •: OFF

☐ Selecting Rotation Direction

It is possible to select the direction in which the motor rotates when the FORWARD RUN command is executed.

The motor rotates in the opposite direction when the REVERSE RUN command is executed.

| n040 Setting | Description |
|-----------------|---|
| 0 | The motor rotates in the counterclockwise direction as viewed from the load when the FORWARD RUN command is executed. |
| 1 | The motor rotates in the clockwise direction as viewed from the load when the FORWARD RUN command is executed. |


☐ Operation Check Points

- · Motor rotates smoothly.
- · Motor rotates in the correct direction.
- · Motor does not have abnormal vibration or noise.
- · Acceleration and deceleration are smooth.
- · Current matching the load flows.
- · Status indicators and Digital Operator display are correct.

Operating the Digital Operator

All functions of the VS-606V7 are set using the Digital Operator. Below are descriptions of the display and keypad sections.



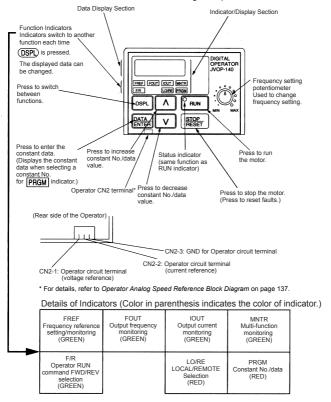

□ Description of Status Indicators

There are two Inverter operation status indicators on the middle right section of the face of the VS-606V7. The combinations of these indicators indicate the status of the Inverter (ON, flashing, and OFF). RUN indicator and status indicator on the RUN button have the same function



The following table shows the relationship between the Inverter conditions and the indicator on the RUN button of the Digital Operator as well as the RUN and ALARM indicators on the face of the VS-606V7.

The indicators are lit, unlit or flashing reflecting the order of priority.

| Priority | Digital Operator | | ice of S-606V7 | Conditions |
|----------|---------------------|-----------------|-------------------|---|
| | RUN | RUN | ALARM | |
| 1 | • | • | • | Power supply is shut down. Until the Inverter become ready after the power is turned ON. |
| 2 | • | • | -\ \ | Fault |
| 3 |) () | <u>}</u> @; | Ö. | Emergency stop (STOP command is sent from the Digital Operator when the control circuit terminals were used to operate the Inverter.) Emergency stop (Emergency stop alarm is sent from the control circuit terminal.) Note: Indicators will be the same as with alarm (stopped) occurring after the Inverter is stopped. |
| 4 | Ä | ; () | -\ \ | Emergency stop (Emergency stop fault is sent from the control circuit terminal.) Note: Indicators will be the same as with fault occurring after the Inverter is stopped. |
| 5 |), | Ä | Ä | Alarm (Stopped) |
| 6 | -\ \ \ | -\ \ | Ö | Alarm (Operating) The RUN command is carried out when the External baseblock command using the multi-function contact input terminal is issued. |
| 7 | Ö, | Ä | • | Stopped (During baseblock) |
| 8 | -\ \ | \ | • | Operating (Including the status that the Inverter is operating at a frequency below the minimum output frequency.) During dynamic braking when starting. |
| 9 | Ä | Ä | • | During deceleration to a stop During dynamic braking when stopping. |

For details on how the status indicators function for Inverter faults, refer to *Chapter 8. Fault Diagnosis*. If a fault occurs, the ALARM indicator will lit.





The fault can be reset by turning ON the FAULT RESET signal (or by pressing the STOP) key on the Digital Operator) with the operation signal OFF, or by turning OFF the power supply. If the operation signal is ON, the fault cannot be reset using the FAULT RESET signal.

■ Function Indicator Description

By pressing **DSPL** on the Digital Operator, each of the function indicators can be selected.

The following flowchart describes each function indicator.

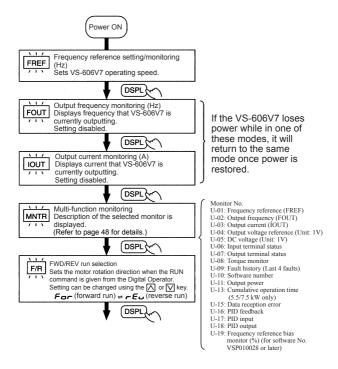

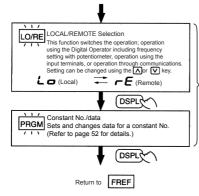

If the VS-606V7 is stopped after it has changed to any of these modes during operation, it changes to Program mode from Drive mode. Even if the Run command is turned ON again, the VS-606V7 does not operate. However, if n001=5, the Run command can be received and the VS-606V7 will operate.

⚠WARNING


If n001=5, a Run command can be received even while changing a constant. If sending a Run command while changing a constant, such as during a test run, be sure to observe all safety precautions. Failure to observe this warning may result in injury.

□ MNTR Multi-function Monitoring

Selecting the Monitor

Press the **DSPL** key. When **MNTR** is ON, data can be displayed by selecting the monitor number.

Example: Monitoring the Output Voltage Reference

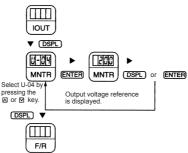

Monitoring

The following items can be monitored using U constants.

| Constant No. | Name | Unit | Description |
|-----------------|-------------------------------------|-------|--|
| U-01 | Frequency Reference (FREF)*1 | Hz | Frequency reference can be monitored. (Same as FREF) |
| U-02 | Output Frequency (FOUT)*1 | Hz | Output frequency can be monitored. (Same as FOUT) |
| U-03 | Output Current (IOUT)*1 | Α | Output current can be monitored. (Same as IOUT) |
| U-04 | Output Voltage | V | Output voltage can be monitored. |
| U-05 | DC Voltage | V | Main circuit DC voltage can be monitored. |
| U-06 | Input Terminal Status*2 | - | Input terminal status of control circuit terminals can be monitored. |
| U-07 | Output Terminal Status*2 | , | Output terminal status of control circuit terminals can be monitored. |
| U-08 | Torque Monitor | % | The amount of output torque per rated torque of the motor can be monitored. When V/f control mode is selected, "" is displayed. |
| U-09 | Fault History (Last 4 Faults) | 1 | The last four fault history records are displayed. |
| U-10 | Software No. | 1 | Software number can be checked. |
| U-11 | Output Power*3 | kW | Output power can be monitored. |
| U-13 | Cumulative operation time *4 | ×10 H | Cumulative operation time can be monitored in units of 10 hours. |
| U-15 | Data Reception Error*5 | 1 | Contents of MEMOBUS communication data reception error can be checked. (Contents of transmission register No. 003DH are the same.) |
| U-16 | PID Feedback*6 | % | Input 100(%)/Max. output frequency or equivalent |
| U-17 | PID Input*6 | % | ±100(%)/± Max. output frequency |
| U-18 | PID Output*6 | % | ±100(%)/± Max. output frequency |
| U-19 | Frequency reference bias monitor *7 | % | Bias can be monitored when UP/DOWN command 2 is used. |

- * 1. The status indicator is not turned ON.
- * 2. Refer to the next page for input/output terminal status.
- * 3. The display range is from -99.9 to 99.99 kW.


When regenerating, the output power will be displayed in units of 0.01 kW when -9.99 kW or less and in units of 0.1 kW when more than -9.99 kW.

In vector control mode, "---" will be displayed.


- * 4. Applicable only for Inverters of 5.5 kW and 7.5 kW (200-V and 400-V Classes).
- * 5. Refer to the next page for data reception error.
- * 6. Displayed in units of 0.1% when less than 100% and in units of 1% when 100% or more. The display range is from –999% to 999%.
- * 7. Applicable for Inverters with software version No. VSP010028 or later.

□ Input/Output Terminal Status


Input terminal status

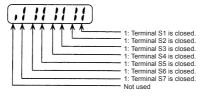

Output terminal status

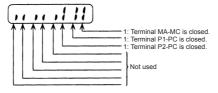

□ Data Reception Error Display

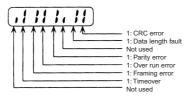

Fault History Display Method

When U-09 is selected, a four-digit box is displayed. The three digits from the right show the fault description, and the digit on the left shows the order of fault (from one to four). Number 1 represents the most recent fault, and numbers 2, 3, 4 represent the other faults, in ascending order of fault occurrence.

Example:

■□□□••••• 4-digit number

☐ : Order of fault (1 to 4)
☐ ☐ : Fault description

"---" is displayed if there is no fault.

(Refer to Chapter 8. Fault Diagnosis for details.)



CPF**, UV1, and UV2 faults are not recorded in the fault history.

Switching Fault History Records

The fault that is displayed can be changed using the \bigcap or \bigcap key.


Clearing the Fault History

Set constant n001 to 6 to clear the fault history. The display will return to n001 after 6 is set.

Note: Initializing the constants (n001=8, 9) also clears the fault history.

Setting and Referencing Constants

The following diagram shows how to select and change constants.

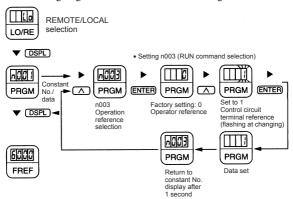

Simple Data Setting

Digital setting (refer to 5. Operating the Inverter) and potentiometer setting are both possible for simple acceleration/deceleration operation of the VS-606V7.

Digital setting is set at the factory (n004=0). For the model with JVOP-147 Digital Operator (without potentiometer), factory setting is set by frequency setting potentiometer (n004=1).

Following is an example in which the function indicators are used to set frequency reference, acceleration time, deceleration time, and motor direction

Data setting by frequency setting potentiometer

| Operation Steps | Operator Display | Function Indicators | Status Indicators |
|--|--|------------------------|----------------------|
| Turn ON the power supply. | 0.00 | FREF | RUN Ö ALARM ● |
| Press DSPL to make PRGM lit, then set constant n004 to 1. | 1 | PRGM | RUN ∯ ALARM ● |
| Set the following constants. n019: 15.0 (acceleration time) n020: 5.0 (deceleration time) | 15.0 5.0 | PRGM | RUN Ö ALARM ● |
| 4. Press DSPL to make F/R lit, then select forward or reverse run by pressing or key. Examine the application. (Never select REV when reverse run is prohibited.) | Far (Forward) or Far (Reverse) | F/R | RUN Ö ALARM ● |
| 5. Press DSPL to make FREF lit, then set the reference by pressing △ or ✓ key. | 60.00 | FREF | RUN ∯ ALARM ● |
| 6. Press DSPL to make FOUT lit, then press RUN. | 0.00→60.00 | FOUT | RUN ∯ ALARM ● |
| 7. Press STOP to stop. | 60.00→0.00 | FOUT | RUN ∯ → ÷O; |
| | | | ALARM ● |

6. Programming Features

Factory settings of the constants are shaded in the tables.

After wiring is complete, be sure to make the following settings before operation.

□ Hardware

Make the following settings before the Inverter is turned ON.

| Item | Ref. |
|--|------|
| Sequence input signal (S1 to S7) polarity selection | 192 |
| Voltage reference / current reference input selection of control circuit terminal FR | 99 |

☐ Software (Constant)

| Item | | | | |
|--|---|-----|--|--|
| Environment | Constant Selection / Initialization (n001) | 55 | | |
| setting | Control Mode Selection (n002) | 60 | | |
| | RUN Command Selection (n003) | 64 | | |
| | Frequency Reference Selection (n004) | 65 | | |
| | Stopping Method Selection (n005) | 87 | | |
| Basic | V/f pattern setting (n011 to n017) | 57 | | |
| characteristics and frequency reference setting | Acceleration Time 1 (n019), Deceleration Time 1 (n020) | 70 | | |
| , and the second | Frequency Reference 1 to 8 (n024 to n031) | 67 | | |
| Motor protection | Motor Rated Current (n036) | 107 | | |
| | Electric Thermal Motor Protection Selection (n037) | 107 | | |
| Countermeasure | Carrier Frequency Reference (n080) | 83 | | |
| for noise and leakage current, Using an optional braking resistor | Stall Prevention During Deceleration (n092) | 105 | | |

■ Constant Setup and Initialization

☐ Constant Selection/Initialization (n001)

↑WARNING

If n001=5, a Run command can be received even while changing a constant. If sending a Run command while changing a constant, such as during a test run, be sure to observe all safety precautions. Failure to observe this warning may result in injury.

The following table lists the data that can be set or read when n001 is set. By setting this constant, the fault history can be cleared and the constants initialized. Unused constants between n001 and n179 are not displayed.

| n001 Setting | Constant that can be Set | Constant that can be Referenced | |
|--------------|---|---------------------------------|--|
| 0 | n001 | n001 to n179 | |
| 1 | n001 to n049*1 | | |
| 2 | n001 to n079 ^{*1} | | |
| 3 | n001 to n119*1 | | |
| 4 | n001 to n179*1 | | |
| 5 | n001 to n179 ^{*1} (Run command can be received in Program mode.) | | |
| 6 | Fault history cleared | | |
| 7 | Not used | | |
| 8 | Initialize | | |
| 9 | Initialize (3-wire sequence)*2 | | |

^{* 1.} Excluding setting-disabled constants.

^{* 2.} Refer to page 92.



Err appears on the display for one second and the set data returns to its initial values in the following cases.

- If the set values of Multi-function Input Selections 1 to 7 (n050 to n056) are the same
- If the following conditions are not satisfied in the V/f pattern setting:

Max. Output Frequency (n011) ≥ Max. Voltage Output Frequency (n013) > Mid. Output Frequency (n014)

≥ Min. Output Frequency (n016)

For details, refer to Adjusting Torque According to Application (V/f Pattern Setting) on page 57.

- 3. If the following conditions are not satisfied in the jump frequency settings:
 - Jump Frequency 3 (n085) ≤ Jump Frequency 2 (n084) ≤ Jump Frequency 1 (n083)
- 4. If the Frequency Reference Lower Limit (n034) ≤ Frequency Reference Upper Limit (n033)
- 5. If the Motor Rated Current (n036) ≤ 150% of Inverter rated current
- If constant n018 is set to 1 (Acceleration/Deceleration Time Unit is 0.01 s) when n018 is set to 0 (Acceleration/Deceleration Time Unit is 0.1 s) and a value exceeding 600.0 s is set for an Acceleration/Deceleration Time (n019 to n022)

■ Using V/f Control Mode

V/f control mode is preset at the factory.


Control Mode Selection (n002) = 0: V/f control mode (factory setting)
1: Vector control mode

☐ Adjusting Torque According to Application

Adjust motor torque by using the V/f pattern and full-range automatic torque boost settings.

V/f Pattern Setting

Set the V/f pattern in n011 to n017 as described below. Set each pattern when using a special motor (e.g., high-speed motor) or when requiring special torque adjustment of the machine.

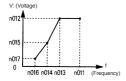

Be sure to satisfy the following conditions for the settings of n011 to n017. n016 \leq n014 < n013 \leq n011 If n016 = n014, the setting of n015 will be disabled.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|--------|--------------------------------------|------------------------|
| n011 | Max. Output Frequency | 0.1 Hz | 50.0 to 400.0 Hz | 60.0 Hz |
| n012 | Max. Voltage | 0.1 V | 0.1 to 255.0 V * (0.1 to 510.0 V) | 200.0 V * (400.0 V) |
| n013 | Max. Voltage Output Frequency (Base Frequency) | 0.1 Hz | 0.2 to 400.0 Hz | 60.0 Hz |
| n014 | Mid. Output Frequency | 0.1 Hz | 0.1 to 399.9 Hz | 1.5 Hz |
| n015 | Mid. Output Frequency Voltage | 0.1 V | 0.1 to 255.0 V * (0.1 to 510.0 V) | 12.0 V * (24.0 V) |
| n016 | Min. Output Frequency | 0.1 Hz | 0.1 to 10.0 Hz | 1.5 Hz |
| n017 | Min. Output Frequency Voltage | 0.1 V | 0.1 to 50.0 V * (0.1 to 100.0 V) | 12.0 V * (24.0 V) |

Note: The values in the parentheses are for the 400-V class of Inverters.


 ^{* 10.0} V (20.0 V) for Inverters of 5.5 kW and 7.5 kW (200-V and 400-V Classes).

Typical Setting of the V/f Pattern


Set the V/f pattern according to the application as described below. For 400-V Class Inverters, the voltage values (n012, n015, and n017) should be doubled. When running at a frequency exceeding 50/60 Hz, change the Maximum Output Frequency (n011).

Note: Always set the maximum output frequency according to the motor characteristics

For General-purpose Applications

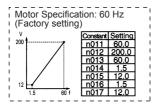


Motor Specification: 50 Hz

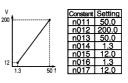


2. For Fans/Pumps

Motor Specification: 60 Hz

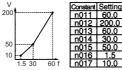

Motor Specification: 50 Hz

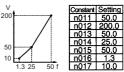


3. For Applications Requiring High Starting Torque

Motor Specification: 60 Hz 200 24 18 60 f



Motor Specification: 50 Hz

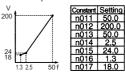


Increasing the voltage of the V/f pattern increases motor torque, but an excessive increase may cause motor overexcitation, motor overheating, or vibration.

Full-range Automatic Torque Boost (when V/f Mode is Selected: n002=0)


The motor torque requirement changes according to load conditions. The full-range automatic torque boost adjusts the voltage of the V/f pattern according to requirements. The VS-606V7 automatically adjusts the voltage during constant-speed operation, as well as during acceleration.

The required torque is calculated by the Inverter.

This ensures tripless operation and energy-saving effects.

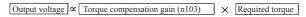

Operation

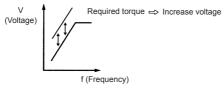

Normally, no adjustment is necessary for the Torque Compensation Gain (n103 factory setting: 1.0). When the wiring distance between the Inverter and the motor is long, or when the motor generates vibration, change the automatic torque boost gain. In these cases, set the V/f pattern (n011 to n017).

Adjustment of the Torque Compensation Time Constant (n104) and the Torque Compensation Iron Loss (n105) are normally not required.

Adjust the torque compensation time constant under the following conditions:

- Increase the setting if the motor generates vibration.
- · Reduce the setting if response is slow.

Using Vector Control Mode

Set the Control Mode Selection (n002) to use vector control mode.

n002 = 0: V/f control mode (factory setting)

1: Vector control mode

☐ Precautions for Voltage Vector Control Application

Vector control requires motor constants. The Yaskawa standard motor constants have been set at the factory prior to shipment. Therefore, when a motor designed for an Inverter is used or when a motor from any other manufacturer is driven, the required torque characteristics or speed control characteristics may not be maintained because the constants are not suitable. Set the following constants so that they match the required motor constants.

| Con- stant No. | Name | Unit | Setting Range | Factory Setting |
|----------------------|-------------------------------------|--|---|--------------------|
| n106 | Motor Rated Slip | 0.1 Hz | 0.0 to 20.0 Hz | * |
| n107 | Motor Line-to-neutral Resistance | $\begin{array}{c} 0.001~\Omega\\ (\text{less than 10}~\Omega)\\ 0.01~\Omega\\ (\text{10}~\Omega~\text{or more}) \end{array}$ | 0.000 to 65.50 Ω | * |
| n036 | Motor Rated Current | 0.1 A | 0% to 150% of Inverter rated current | * |
| n110 | Motor No-load Current | 1% | 0% to 99% (100% = motor rated current) | * |

^{*} Setting depends on Inverter capacity. (Refer to pages 211 and 212.)

Adjustment of the Torque Compensation Gain (n103) and the Torque

Compensation Time Constant (n104) is normally not required.

Adjust the torque compensation time constant under the following conditions:

- Increase the setting if the motor generates vibration.
- · Reduce the setting if response is slow.

Adjust the Slip Compensation Gain (n111) while driving the load so that the target speed is reached. Increase or decrease the setting in increments of 0.1.

- If the speed is less than the target value, increase the slip compensation gain.
- If the speed is more than the target value, reduce the slip compensation gain.

Adjustment of the Slip Compensation Time Constant (n112) is normally not required. Adjust it under the following conditions:

- · Reduce the setting if response is slow.
- · Increase the setting if speed is unstable.

Select slip compensation status during regeneration as follows:

| n113 Setting | Slip Correction during Regenerative Operation |
|--------------|---|
| 0 | Disabled |
| 1 | Enabled |

□ Motor Constant Calculation

An example of motor constant calculation is shown below.

1. Motor Rated Slip (n106)

120/Number of motor poles

2. Motor Line-to-neutral Resistance (n107)

Calculations are based on the line-to-line resistance and insulation grade of the motor test report.

E type insulation: Test report of line-to-line resistance at 75°C (Ω) × 0.92 × $\frac{1}{2}$

B type insulation: Test report of line-to-line resistance at 75°C $(\Omega) \times 0.92 \times \frac{1}{2}$

F type insulation: Test report of line-to-line resistance at 115°C (Ω) × 0.87 × $\frac{1}{2}$

- 3. Motor Rated Current (n036)
 - = Rated current at motor rated frequency (Hz)*1 (A)
- 4. Motor No-load Current (n110)

$$= \frac{\text{No-load current (A) at motor rated frequency (Hz)*}^{1}}{\text{Rated current (A) at motor rated frequency (Hz)*}^{1}} \times 100 (\%)$$

- * 1. Base frequency (Hz) during constant output control
- * 2. Rated speed (min⁻¹) at base frequency during constant output control

Set n106 (Motor Rated Slip), n036 (Motor Rated Current), n107 (Motor Line-to-neutral Resistance), and n110 (Motor No-load Current) according to the motor test report.


To connect a reactor between the Inverter and the motor, set n108 to the sum of the initial value of n108 (Motor Leakage Inductance) and the externally mounted reactor inductance. Unless a reactor is connected, n108 (Motor Leakage Inductance) does not have to be set according to the motor.


□ V/f Pattern during Vector Control

Set the V/f pattern as follows during vector control:


The following examples are for 200 V Class motors. When using 400 V Class motors, double the voltage settings (n012, n015, and n017).


Standard V/f

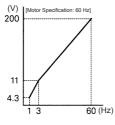

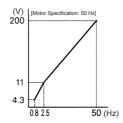


High Starting Torque V/f

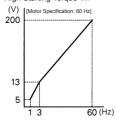

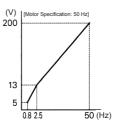

When operating with frequency larger than 60/50 Hz, change only the Max. Output Frequency (n011).

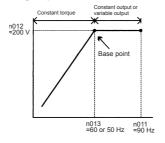


■ Switching LOCAL/REMOTE Mode

The following functions can be selected by switching LOCAL or REMOTE mode. To select the RUN/STOP command or frequency reference, change the mode in advance depending on the following applications.

- LOCAL mode: Enables the Digital Operator for RUN/STOP commands and FWD/REV RUN commands. The frequency reference can be set using the potentiometer or FREF.
- REMOTE mode: Enables RUN Command Selection (n003).
 The frequency reference can be set using the Frequency Reference Selection (n004).

☐ How to Select LOCAL/REMOTE Mode

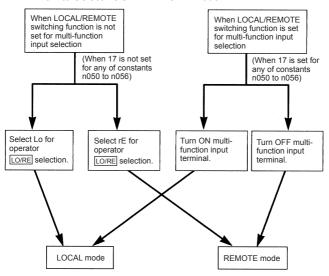

■ Selecting RUN/STOP Commands

Refer to Switching LOCAL/REMOTE Mode (page 63) to select either the LOCAL mode or REMOTE mode.

The operation method (RUN/STOP commands, FWD/REV RUN commands) can be selected using the following method.

☐ LOCAL Mode

When Lo (local mode) is selected for Digital Operator $\fbox{LO/RE}$ ON mode, or when the LOCAL/REMOTE switching function is set and the input terminals are turned ON, run operation is enabled by the \fbox{STOP} or \fbox{RUN} on the Digital Operator, and FWD/REV is enabled by the $\fbox{F/R}$ ON mode (using $\fbox{}$ or $\fbox{}$ key).

□ REMOTE Mode

Select remote mode.

There are following two methods to select remote mode.

- Select rE (remote mode) for the LO/RE selection.
- When the local/remote switching function is selected for the multi-function input selection, turn OFF the input terminal to select remote mode.
- 2. Select the operation method by setting constant n003.
 - n003=0: Enables the Digital Operator (same with local mode).
 - =1: Enables the multi-function input terminal (see fig. below).
 - =2: Enables communications (refer to page 109).
 - =3: Enables communication card (optional).
 - Example when using the multi-function input terminal as operation reference (two-wire sequence)



- For an example of three-wire sequence, refer to page 92.
- For more information on how to select the sequence polarity, refer to page 192.

Note: When the Inverter is operated without the Digital Operator, always set constant n010 to 0.

- n010 = 0: Detects fault contact of the Digital Operator (Factory setting)
 - = 1: Not detect fault contact of the Digital Operator
- □ Operating (RUN/STOP Commands) by Communications Setting constant n003 to 2 in REMOTE mode enables using RUN/ STOP commands via MEMOBUS communications. For commands using communications, refer to page 109.

Selecting Frequency Reference

Select REMOTE or LOCAL mode in advance. For the method for selecting the mode, refer to page 63.

□ LOCAL Mode

Select command method using constant n008.

n008=0: Enables using the potentiometer on the Digital Operator (factory setting).

The factory setting for models with the Digital Operator without a potentiometer (JVOP-147) is n008=1.

- =1: Enables digital setting on the Digital Operator. [Setting can be stored in Frequency Reference 1 (n024)].
- · Digital Setting Using the Digital Operator

Input the frequency while FREF is lit (press ENTER after setting the numeric value).

Frequency reference setting is effective when 1 (factory setting: 0) is set for constant n009 instead of pressing ENTER.


- n009 =0: Enables frequency reference setting using the ENTER key.
 - =1: Disables frequency reference setting using the ENTER key.

□ REMOTE Mode

Select the command method in constant n004.

- n004 =0: Enables frequency reference setting using the potentiometer on the Digital Operator (factory setting).
 Factory setting of models with the Digital Operator without
 - a potentiometer (JVOP-147) is n004=1. =1: Enables using frequency reference 1 (n024)
 - =2: Enables a voltage reference (0 to 10 V) (refer to the figure on page 66).
 - =3: Enables a current reference (4 to 20 mA) (refer to page 99).
 - =4: Enables a current reference (0 to 20 mA) (refer to page 99).
 - =5: Enables a pulse train reference (refer to page 101).
 - =6: Enables communication (refer to page 109).
 - =7: Enables a voltage reference on Digital Operator circuit terminal (0 to 10 V)
 - =8: Enables a current reference on Digital Operator circuit terminal (4 to 20 mA)
 - =9: Enables communication card (optional).

Example of frequency reference by voltage signal

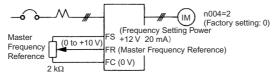

■ Setting Operation Conditions

☐ Reverse Run Prohibit (n006)

The Reverse Run Prohibit setting disables accepting a reverse RUN command from the control circuit terminal or Digital Operator. This setting is used for applications where a reverse RUN command can cause problems.

| Setting | Description | | |
|---------|-----------------------|--|--|
| 0 | Reverse run enabled. | | |
| 1 | Reverse run disabled. | | |

☐ Multi-step Speed Selection

Up to 17 speed steps (including Jog frequency reference) can be set using the following combinations of frequency reference and input terminal selections

8-step speed change


n003=1 (Operation mode selection) n004=1 (Frequency reference selection) n024=25.0 Hz (Frequency reference 1) n025=30.0 Hz (Frequency reference 2) n026=35.0 Hz (Frequency reference 3) n027=40.0 Hz (Frequency reference 4) n028=45.0 Hz (Frequency reference 5) n029-50.0 Hz (Frequency reference 6) n030=55.0 Hz (Frequency reference 7) n031=60.0 Hz (Frequency reference 7)


* For more information on how to select the sequence voltage and the current input. refer to page 192.



When all multi-function reference inputs are OFF, the frequency reference selected by constant n004 (Frequency Reference Selection) becomes effective.

n054=6 (Multi-function contact input terminal S5) n055=7 (Multi-function contact input terminal S6) n056=8 (Multi-function contact input terminal S7) n053=1

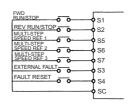

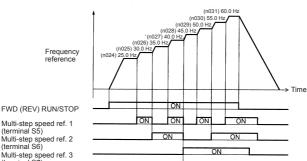

Multi-step speed ref. 1 (terminal S5) Multi-step speed ref. 2 (terminal S6) Multi-step speed ref. 3 (terminal S7)

n050 = 1 (Input terminal S1) (Factory Setting)

n051 = 2 (Input terminal S2) (Factory Setting)

n052 = 3 (Input terminal S3) (Factory Setting)

n053 = 5 (Input terminal S4) (Factory Setting)

n054 = 6 (Input terminal S5) (Factory Setting)

n055 = 7 (Input terminal S6) (Factory Setting)

n056 = 8 (Input terminal S7) (Change the setting to 8.)

16-step speed operation

Set frequency references 9-16 for n120 to n127.

Set the input terminal for a multi-step speed reference using the multifunction input selection.


□ Operating at Low Speed

By inputting a JOG command and then a FORWARD (REVERSE) RUN command, operation is enabled at the jog frequency set in n032. When multi-step speed references 1, 2, 3 or 4 are input simultaneously with the JOG command, the JOG command has priority.

| Constant No. | Name | Setting |
|--------------|----------------|-----------------------------|
| n032 | Jog Frequency | Factory setting: 6.00 Hz |
| n050 to n056 | Jog References | Set to 10 for any constant. |

□ Adjusting Speed Setting Signal

The relationship between the analog inputs and the frequency reference can be set to provide the frequency reference as analog inputs to control circuit terminal FR or FC.

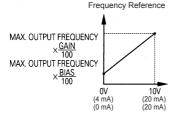


- () indicates the value when a current reference input is selected.
- Analog Frequency Reference Gain (n060)
 The frequency reference provided when the analog input is 10 V (or 20 mA) can be set in units of 1%. (Max. Output Frequency n011=100%)
 - * Factory setting: 100%
- 2. Analog Frequency Reference Bias (n061)

The frequency reference provided when the analog input is 0 V (4 mA or 0 mA) can be set in units of 1%. (Max. Output Frequency n011=100%)


* Factory setting: 0%

Typical Settings

• To operate the Inverter with a frequency reference of 0% to 100% at an input voltage of 0 to 5 V

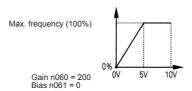


• To operate the Inverter with a frequency reference of 50% to 100% at an input voltage of 0 to 10 V

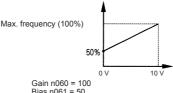

Bias n061 = 50

□ Adjusting Frequency Upper and Lower Limits

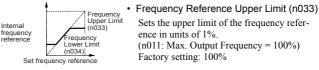


Frequency Reference Lower Limit (n034)

Sets the lower limit of the frequency reference in units of 1%. (n011: Max. Output Frequency = 100%)

When operating at a frequency reference of 0, operation is continued at the frequency reference lower limit.

However, if the frequency reference lower limit is set to less than the Minimum Output Frequency (n016), operation is not performed. Factory setting: 0%

☐ Using Four Acceleration/Deceleration Times

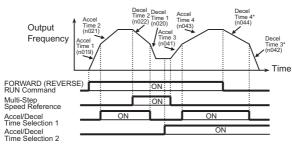

* When deceleration to a stop is selected (n005 = 0).

By setting a multi-function input selection (either of n050 to n056) to 11 (acceleration/deceleration time selection 1) or 27 (acceleration/deceleration time selection 2), the acceleration/deceleration time is selected by ON/OFF combinations of acceleration/deceleration time selection 1 and acceleration/deceleration time selection 2 (terminals S1 to S7).

The combinations of acceleration/deceleration time selection settings are shown below.

| Accleration/ Deceleration Time Selection 1 | Accleration/ Deceleration Time Selection 2 | Acceleration Time | Deceleration Time |
|--|--|----------------------------|----------------------------|
| OFF | OFF | Acceleration time 1 (n019) | Deceleration time 1 (n020) |
| ON | OFF | Acceleration time 2 (n021) | Deceleration time 2 (n022) |
| OFF | ON | Acceleration time 3 (n041) | Deceleration time 3 (n042) |
| ON | ON | Acceleration time 4 (n043) | Deceleration time 4 (n044) |

| No. | Name | Unit | Setting Range | Factory Setting |
|------|---------------------|---|--------------------------------|--------------------|
| n019 | Acceleration Time 1 | Depends on n018 setting. (See the next table.) | Depends on | 10.0 s |
| n020 | Deceleration Time 1 | | n018 setting. (See the next | 10.0 s |
| n021 | Acceleration Time 2 | | table.) | 10.0 s |
| n022 | Deceleration Time 2 | | | 10.0 s |
| n041 | Acceleration Time 3 | me 3 | | 10.0 s |
| n042 | Deceleration Time 3 | | | 10.0 s |
| n043 | Acceleration Time 4 | | | 10.0 s |
| n044 | Deceleration Time 4 | | | 10.0 s |

n018 Settings

| No. | | Unit | Setting Range | |
|------|-------|--------|-----------------------------------|--|
| n018 | 0 | 0.1 s | 0.0 to 999.9 s (999.9 s or less) | |
| | 1 s | | 1000 to 6000 s (1000 s or more) | |
| | 1 | 0.01 s | 0.00 to 99.99 s (99.99 s or less) | |
| | 0.1 s | | 100.0 to 600.0 s (100 s or more) | |

Note: Constant n018 can be set while stopped.

If a value exceeding 600.0 s is set for the acceleration/deceleration time when n018=0 (in units of 0.1 s), 1 cannot be set for n018.

- Acceleration time
 Set the time needed for the output frequency to reach 100% from 0%.
- Deceleration time
 Set the time needed for the output frequency to reach 0% from 100%.
 (Max. Output Frequency n011 = 100%)

☐ Momentary Power Loss Ridethrough Method (n081)

/ WARNING

When continuous operation after power recovery is selected, stand clear of the Inverter or the load. The Inverter may restart suddenly after stopping. (Construct the system to ensure safety, even if the Inverter should restart.) Failure to observe this warning may result in injury.

When constant n081 is set to 1 or 2, operation automatically restarts even if a momentary power loss occurs.

| Setting*3 | Description | |
|-----------------|--|--|
| 0 | Continuous operation after momentary power loss not enabled. | |
| 1 ^{*1} | Continuous operation after power recovery within momentary power loss ridethrough time 0.5 s | |
| 2*1, *2 | Continuous operation after power recovery (Fault output not produced.) | |


- Hold the operation signal to continue operation after recovery from a momentary power loss.
- * 2. When 2 is selected, the Inverter restarts if power supply voltage recovers while the control power supply is held. No fault signal is output.
- * 3. Do not select 3 to 100 as they are reserved for future use.

☐ S-curve Selection (n023)


To prevent shock when starting and stopping the machine, acceleration/deceleration can be performed using an S-curve pattern.

| Setting | S-curve Selection | |
|---------|--------------------------------------|--|
| 0 | S-curve characteristic not provided. | |
| 1 | 0.2 s | |
| 2 | 0.5 s | |
| 3 | 1.0 s | |

Note: The S-curve characteristic time is the time from acceleration/deceleration rate 0 to the normal acceleration/deceleration rate determined by the set acceleration/deceleration time.

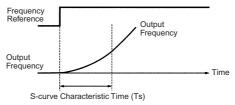


The following time chart shows switching between FWD/REV run when decelerating to a stop.

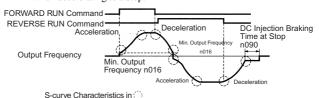

□ Torque Detection

If an excessive load is applied to the machine, an increase in the output current can be detected to output an alarm signal to multi-function output terminal MA, MB, P1, or P2.

To output an overtorque detection signal, set one of the output terminal function selections n057 to n059 for overtorque detection (Setting: 6 (NO contact) or 7 (NC contact)).

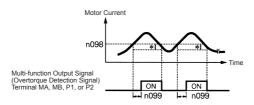

* The overtorque detection release width (hysteresis) is set at approx. 5% of the Inverter rated current.

Overtorque Detection Function Selection 1 (n096)

| Setting | Description | |
|---------|---|--|
| 0 | Overtorque detection not provided. | |
| 1 | Detected during constant-speed running. Oper ation continues after detection. | |
| 2 | Detected during constant-speed running. Operation stops during detection. | |
| 3 | Detected during running. Operation continues after detection. | |
| 4 | Detected during running. Operation stops during detection. | |

- 1. To detect overtorque during acceleration/deceleration, set n096 to 3 or 4.
- 2. To continue operation after overtorque detection, set n096 to 1 or 3. During detection, the Digital Operator will display an alarm (flashing).

3. To stop the Inverter and generate a fault at overtorque detection, set n096 to 2 or 4. At detection, the Digital Operator will display an っしょう fault (ON).

Overtorque Detection Level (n098)

Set the overtorque detection current level in units of 1%. (Inverter rated current = 100%) When detection by torque is selected, the motor rated torque becomes 100%.

Factory setting: 160%

Overtorque Detection Time (n099)

If the time that the motor current exceeds the Overtorque Detection Level (n098) is longer than Overtorque Detection Time (n099), the overtorque detection function will operate.

Factory setting: 0.1 s

Overtorque/Undertorque Detection Function Selection 2 (n097)

When vector control mode is selected, overtorque/undertorque detection can be performed either by detecting the output current or the output torque.

When V/f control mode is selected, the setting of n097 is invalid, and overtorque/undertorque is detected by the output current.


| Setting Description | | |
|---------------------|----------------------------|--|
| 0 | Detected by output torque | |
| 1 | Detected by output current | |

☐ Frequency Detection Level (n095)

Effective when one or more of the Multi-function Output Selections n057, n058 and n059 are set for frequency detection (setting: 4 or 5). Frequency detection turns ON when the output frequency is higher or lower than the setting for the Frequency Detection Level (n095).


Frequency Detection 1

Output frequency ≥ Frequency Detection Level n095 (Set n057, n058 or n059 to 4.)

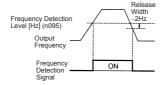

Frequency Detection 2


Output frequency ≤ Frequency Detection Level n095 (Set n057, n058 or n059 to 5.)

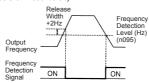

☐ Jump Frequencies (n083 to n086)

This function allows the prohibition or "jumping" of critical frequencies so that the motor can operate without resonance caused by the machine system. This function is also used for dead band control. Setting the values to 0.00 Hz disables this function.

Set prohibited frequencies 1, 2, and 3 as follows:

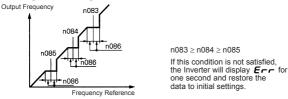

Operation is prohibited within the jump frequency ranges. However, the motor will operate without jumping during acceleration/deceleration. ☐ Continuing Operation Using Automatic Retry Attempts (n082)

↑WARNING

When the fault retry function is selected, stand clear of the Inverter or the load. The Inverter may restart suddenly after stopping.

(Construct the system to ensure safety, even if the Inverter should restart.) Failure to observe this warning may result in injury.

The Inverter can be set to restart and reset fault detection after a fault occurs. The number of self-diagnosis and retry attempts can be set to up to 10 in n082. The Inverter will automatically restart after the following faults occur:

OC (overcurrent)

OV (overvoltage)

The number of retry attempts is cleared to 0 in the following cases:

- 1. If no other fault occurs within 10 minutes after retry
- 2. When the FAULT RESET signal is ON after the fault is detected
- 3. When the power supply is turned OFF

□ Operating a Coasting Motor without Tripping

To operate a coasting motor without tripping, use the SPEED SEARCH command or DC Injection Braking at Startup.


SPEED SEARCH Command

Restarts a coasting motor without stopping it. This function enables smooth switching between motor commercial power supply operation and Inverter operation.

Set a Multi-function Input Selection (n050 to n056) to 14 (SEARCH command from maximum output frequency) or 15 (SEARCH command from set frequency).

Build a sequence so that a FWD (REV) RUN command is input at the same time as the SEARCH command or after the SEARCH command. If the RUN command is input before the SEARCH command, the SEARCH command will be disabled.

Time Chart at SEARCH Command Input

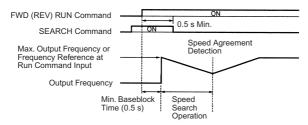


The deceleration time for speed search operation can be set in n101. If the setting is 0, however, an initial value of 2.0 s will be used.

The speed search starts when the Inverter's output current is greater than or equal to the speed search operation level (n102).

DC Injection Braking at Startup (n089, n091)

Restarts a coasting motor after stopping it. Set the DC injection braking time at startup in n091 in units of 0.1 s. Set the DC Injection Braking Current in n089 in units of 1% (Inverter rated current =100%). When the setting of n091 is 0, DC injection braking is not performed and acceleration starts from the minimum output frequency.

When n089 is set to 0, acceleration starts from the minimum output frequency after baseblocking for the time set in n091.

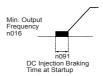


☐ Holding Acceleration/Deceleration Temporarily

To hold acceleration or deceleration, input an ACCELERATION/DECELERATION HOLD command. The output frequency is maintained when an ACCELERATION/DECELERATION HOLD command is input during acceleration or deceleration.

When the STOP command is input while an ACCELERATION/ DECELERATION HOLD command is being input, the acceleration/ deceleration hold is released and operation ramps to a stop.

Set a Multi-function Input Selection (n050 to n056) to 16 (acceleration/deceleration hold).

Time Chart for ACCELERATION/DECELERATION HOLD Command Input

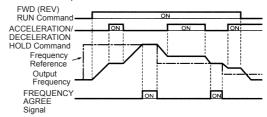


Note: If a FWD (REV) RUN command is input at the same time as an ACCELERATION/DECELERATION HOLD command, the motor will not operate. However, if the Frequency Reference Lower Limit (n034) is set to a value greater than or equal to the Min. Output Frequency (n016), the motor will operate at the Frequency Reference Lower Limit (n034).

☐ Using Frequency Meter or Ammeter (n066)


Selects to output either output frequency or output current to analog output terminals AM-AC for monitoring.

| Setting | Description | |
|---------|-----------------------------|--|
| 0 | Output frequency | |
| 1 | Output current | |
| 2 | Main circuit DC voltage | |
| 3 | Torque monitor | |
| 4 | Output power | |
| 5 | Output voltage reference | |
| 6 | Frequency reference monitor | |

In factory setting, analog voltage of approx. 10 V is output when output frequency (output current) is 100 %.

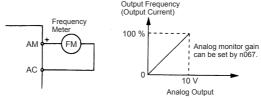

☐ Calibrating Frequency Meter or Ammerter (n067)
Used to adjust analog output gain.

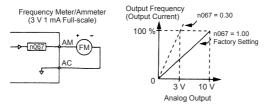

Set the analog output voltage at 100 % of output frequency (output current). Frequency meter displays 0 to 60 Hz at 0 to 3 V.

$$10 \text{ V} \times \begin{bmatrix} n067 \text{ setting} \\ 0.30 \end{bmatrix} = 3 \text{ V}$$
 Output frequency becomes 100 % at this value.

☐ Using Analog Output (AM-AC) as a Pulse Train Signal Output (n065)

Analog output AM-AC can be used as a pulse train output (output frequency monitor, frequency reference monitor).

Set n065 to 1 when using pulse train output.

| Constant No. | Name | Unit | Setting range | Factory setting |
|--------------|---------------------|------|---------------|-----------------|
| n065 | Monitor output type | - | 0, 1 | 0 |


n065 Setting

| n065 Setting | Description | |
|--------------|--|--|
| 0 | Analog monitor output | |
| 1 | Pulse monitor output (Output frequency monitor) | |

Pulse train signal can be selected by setting in n150.

| n150 Setting | Description | | | |
|--------------|----------------------|-------------------------------|--|--|
| 0 | Output | 1440 Hz/Max. frequency (n011) | | |
| 1 | frequency monitor | 1F: Output frequency × 1 | | |
| 6 | | 6F: Output frequency × 6 | | |
| 12 | | 12F: Output frequency × 12 | | |
| 24 | | 24F: Output frequency × 24 | | |
| 36 | | 36F: Output frequency × 36 | | |
| 40 | Frequency | 1440 Hz/Max. frequency (n011) | | |
| 41 | reference monitor | 1F: Output frequency × 1 | | |
| 42 | | 6F: Output frequency × 6 | | |
| 43 | | 12F: Output frequency × 12 | | |
| 44 | | 24F: Output frequency × 24 | | |
| 45 | | 36F: Output frequency × 36 | | |

At the factory setting, the pulse of 1440 Hz can be output when output frequency is 100 %.

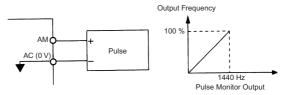




Peripheral devices must be connected according to the following load conditions when using pulse monitor output. The machine might damage when the conditions are not satisfied.


Used as a Sourcing Output

| Output Voltage VRL (V) | Load Impedance (kΩ) | |
|---------------------------|------------------------------|--|
| +5 V | 1.5 $k\Omega$ or more | |
| +8 V | $3.5~\text{k}\Omega$ or more | |
| +10 V | 10 $k\Omega$ or more | |

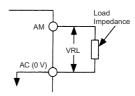

Used as a Sinking Input

| External Power Supply (V) | +12 VDC ±5 % or less |
|------------------------------|----------------------|
| Sinking Current (mA) | 16 mA or less |

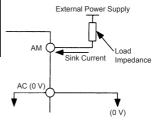


□ Reducing Motor Noise or Leakage Current Using Carrier Frequency Selection (n080)

Set the Inverter output transistor switching frequency (carrier frequency).

| Setting | Carrier Frequency (kHz) | Metallic Noise from Motor | Noise and Current Leakage |
|---------|-------------------------|---------------------------------|---------------------------------|
| 7 | 12 fout (Hz) | | |
| 8 | 24 fout (Hz) | | |
| 9 | 36 fout (Hz) | Higher ∧ | Smaller |
| 1 | 2.5 (kHz) | \downarrow | |
| 2 | 5.0 (kHz) | Not audible | V Larger |
| 3 | 7.5 (kHz) | | |
| 4 | 10.0 (kHz) | | |

If the set value is 7, 8, or 9, the carrier frequency will be multiplied by the same factor as the output frequency.

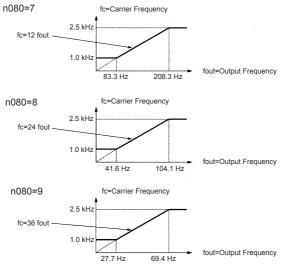

The factory setting depends on the Inverter capacity (kVA).

| Voltage Class (V) | Capacity (kW) | Factory Setting | | Maximum Continuous | Reduced Current |
|----------------------|---------------|-----------------|-------------------------|-----------------------|--------------------|
| | (KVV) | Setting | Carrier Frequency (kHz) | Output Current (A) | (A) |
| 200 V Single- | 0.1 | 4 | 10 | 0.8 | |
| phase or 3-phase | 0.25 | 4 | 10 | 1.6 | _ |
| | 0.4 | 4 | 10 | 3.0 | - |
| | 0.75 | 4 | 10 | 5.0 | |
| | 1.5 | 3 | 7.5 | 8.0 | 7.0 |
| | 2.2 | 3 | 7.5 | 11.0 | 10.0 |
| | 3.7 | 3 | 7.5 | 17.5 | 16.5 |

| Voltage Class (V) | Capacity (kW) | Fa | ctory Setting | Maximum Continuous | Reduced Current (A) |
|----------------------|---------------|---------|-------------------------|-----------------------|---------------------------|
| Class (V) | (KVV) | Setting | Carrier Frequency (kHz) | Output Current (A) | |
| 200 V Single- | 5.5 | 3 | 7.5 | 25 | 23 |
| phase or 3-phase | 7.5 | 3 | 7.5 | 33 | 30 |
| 400 V | 0.2 | 3 | 7.5 | 1.2 | 1.0 |
| 3-phase | 0.4 | 3 | 7.5 | 1.8 | 1.6 |
| | 0.75 | 3 | 7.5 | 3.4 | 3.0 |
| | 1.5 | 3 | 7.5 | 4.8 | 4.0 |
| | 2.2 | 3 | 7.5 | 5.5 | 4.8 |
| | 3.0 | 3 | 7.5 | 7.2 | 6.3 |
| | 3.7 | 3 | 7.5 | 8.6 | 8.1 |
| | 5.5 | 3 | 7.5 | 14.8 | * |
| | 7.5 | 3 | 7.5 | 18 | 17 |

* Reduction of the current is not necessary.



 Reduce the continuous output current when changing the carrier frequency to 4 (10 kHz) for 200 V Class (1.5 kW or more) and 400 V Class Inverters. Refer to the table above for the reduced current.

Operation Condition

· Input power supply voltage:

3-phase 200 to 230 V (200 V Class)

Single-phase 200 to 240 V (200 V Class)

3-phase 380 to 460 V (400 V Class)

· Ambient temperature:

−10 to 50°C

(Protection structure: open chassis type IP20,

IP00)

-10 to 40°C

(Protection structure: enclosed wall-mounted type NEMA 1 (TYPE 1))

(LIII (1112 1),

2. If the wiring distance is long, reduce the Inverter carrier frequency as described below.

| Wiring Distance between Inverter and Motor | Up to 50 m | Up to 100 m | More than 100 m |
|--|---|---------------------------------------|--------------------------------------|
| Carrier Frequency (n080 setting) | 10 kHz or less (n080=1, 2, 3, 4, 7, 8, 9) | 5 kHz or less (n080=1, 2, 7, 8, 9) | 2.5 kHz or less (n080=1, 7, 8, 9) |

- 3. Set the Carrier Frequency Selection (n080) to 1, 2, 3, or 4 when using vector control mode. Do not set it to 7, 8, or 9.
- 4. If the Inverter repeats stops and starts with a load exceeding 120% of the Inverter rated current within a cycle time of 10 minutes or less, reduce carrier frequency at a low speed. (Set constant n175 to 1.)
- 5. The carrier frequency is automatically reduced to 2.5 kHz when the Reducing Carrier Frequency Selection at Low Speed (n175) is set to 1 and the following conditions are satisfied:

Output frequency ≤ 5 Hz Output current ≥ 110% Factory setting: 0 (Disabled)

☐ Operator Stop Key Selection (n007)

/ WARNING

The Digital Operator stop button can be disabled by a setting in the Inverter. Install a separate emergency stop switch.

Failure to observe this warning may result in injury.

Set the processing when the STOP key is pressed during operation either from a multi-function input terminal or communications.

| Setting | Description |
|---------|---|
| 0 | The STOP key is effective either from a multi- function input terminal or communications. When the STOP key is pressed, the Inverter stops ac- cording to the setting of constant n005. At this time, the Digital Operator displays a <i>5FP</i> alarm (flashing). This STOP command is held in the Inverter until both forward and reverse RUN com- mands are open, or until the RUN command from communications goes to zero. |
| 1 | The STOP key is ineffective either from multi- function input terminals or communications. |


Selecting the Stopping Method

☐ Stopping Method Selection (n005)
Select the stopping method suitable for the application.

| Setting | Description |
|---------|------------------------|
| 0 | Deceleration to a stop |
| 1 | Coast to a stop |

Deceleration to a Stop

Example when Acceleration/Deceleration Time 1 is selected

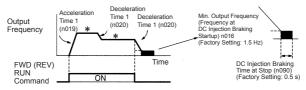

* Changing the frequency reference while running

Upon termination of a FWD (REV) RUN command, the motor decelerates at the deceleration rate determined by the time set in Deceleration Time 1 (n020) and DC injection braking is applied immediately before stopping. DC injection braking is also applied when the motor deceleration


ates because the frequency reference is set lower than the Min. Output Frequency (n016) when the FWD (REV) RUN command is ON. If the deceleration time is short or the load inertia is large, an overvoltage (OV) fault may occur at deceleration. In this case, increase the deceleration time or install an optional Braking Resistor.

Braking torque: Without braking resistor: Approx. 20% of motor rating

With braking resistor: Approx. 150% of motor rating

Coast to a Stop

Example when Acceleration/Deceleration Time 1 is selected

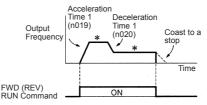

 * Changing the frequency reference while running Upon termination of the FWD (REV) RUN command, the motor starts coasting.


☐ Applying DC Injection Braking

DC Injection Braking Current (n089)

Sets the DC injection braking current in units of 1%. (Inverter rated current=100%)

DC Injection Braking Time at Stop (n090)

Sets the DC injection braking time at stopping in units of $0.1~\rm s$. When the setting of n090 is 0, DC injection braking is not performed, but the Inverter output is turned OFF when DC injection braking is started.

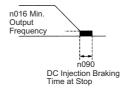

When coasting to a stop is specified in the Stopping Method Selection (n005), DC injection braking is not applied when stopping.

■ Building Interface Circuits with External Devices

□ Using Input Signals

The functions of multi-function input terminals S1 to S7 can be changed as necessary by setting constants n050 to n056. The same value cannot be set for more than one of these constants.

| Setting | Name | Description | Ref. |
|---------|---|---|------|
| 0 | FWD/REV RUN command (3-wire sequence selection)*1 | Setting enabled only for n052 (terminal S3) | 92 |
| 1 | FORWARD RUN command (2-wire sequence selection)*1 | | 65 |
| 2 | REVERSE RUN command (2-wire sequence selection)*1 | | 65 |
| 3 | External fault (NO contact input) | Inverter stops for an external fault signal input. Digital | - |
| 4 | External fault (NC contact input) | Operator displays EF□.* ² | - |
| 5 | Fault reset | Resets a fault. Fault reset not effective when the RUN signal is ON. | 1 |
| 6 | Multi-step speed reference 1 | | 67 |
| 7 | Multi-step speed reference 2 | | 67 |
| 8 | Multi-step speed reference 3 | | 67 |
| 9 | Multi-step speed reference 4 | | 67 |
| 10 | JOG command | | 68 |
| 11 | Acceleration/deceleration time selection 1 | | 70 |
| 12 | External baseblock, NO contact input | Motor coasts to a stop for this signal input. Digital Operator displays bb . | - |
| 13 | External baseblock, NC contact input | uispiays aa . | - |
| 14 | SEARCH command from maximum frequency | SPEED SEARCH command signal | 77 |
| 15 | SEARCH command from set frequency | | 77 |

6. Programming Features

| Setting | Name | Description | Ref. |
|-------------|--|---|------|
| 16 | ACCELERATION/ DECELERATION HOLD command | | 78 |
| 17 | LOCAL/REMOTE selection | | 64 |
| 18 | Communications/control cir- cuit terminal selection | | 94 |
| 19 | Emergency stop fault, NO contact input | Inverter stops for an emergen- cy stop signal input according to the Stopping Method Selec- | i |
| 20 | Emergency stop alarm, NO contact input | tion (n005). When frequency coasting to a stop (n005 is set to 0) is selected, the Inverter | - |
| 21 | Emergency stop fault, NC contact input | coasts to a stop according to Deceleration Time Setting 2 (n022). | ì |
| 22 | Emergency stop alarm, NC contact input | Digital Operator displays | ı |
| 23 | PID control cancel | | 136 |
| 24 | PID integral reset | | 136 |
| 25 | PID integral hold | | 136 |
| 26 | Inverter overheat alert (OH3 alarm) | When the Inverter overheat signal turns ON, aH3 (flashing) is displayed at the Digital Operator. | ı |
| 27 | Acceleration/deceleration time selection 2 | | |
| 28 to 33 | Not used | Set to one of 28 to 33 if a terminal is not used. | - |
| 34 | UP/DOWN commands | Setting enabled only for n056 (terminal S7) | 93 |
| 35 | Self-test | Setting enabled only for n056 (terminal S7) | 124 |
| 36 | UP/DOWN command 2 | Setting enabled only for n056 (terminal S7) | - |

^{* 1.} For more information on how to select the sequence polarity, refer to page 192.


^{* 2.} Numbers 1 to 7 are displayed for \square to indicate the terminal numbers S1 to S7.

Factory Settings

| No. | Terminal | Factory Setting | Function |
|------|----------|-----------------|---------------------------------------|
| n050 | S1 | 1 | FORWARD RUN command (2-wire sequence) |
| n051 | S2 | 2 | REVERSE RUN command (2-wire sequence) |
| n052 | S3 | 3 | External fault (NO contact input) |
| n053 | S4 | 5 | Fault reset |
| n054 | S5 | 6 | Multi-step speed reference 1 |
| n055 | S6 | 7 | Multi-step speed reference 2 |
| n056 | S7 | 10 | JOG command |

Terminal Functions for 3-wire Sequence Selection

When 0 is set for terminal S3 (n052), terminal S1 is the RUN command, terminal S2 is the STOP command, and terminal S3 is the FWD/REV RUN command.

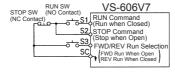

≜WARNING

To select the 3-wire sequence, set terminal S3 (n052) to 0.

Failure to observe this warning may result in injury.

LOCAL/REMOTE Selection (Setting: 17)

Select the operation reference from either the Digital Operator or from the settings of the RUN Command Selection (n003) and Frequency Reference Selection (n004). The LOCAL/REMOTE Selection can be used only when stopped.

Open: Run according to the setting of RUN Command Selection (n003) or Frequency Reference Selection (n004).

Closed: Run according to the frequency reference and RUN command from the Digital Operator.

Example: Set n003=1, n004=2, n008=0.

Open: Run according to the frequency reference from multi-function input terminal FR and RUN command from multi-function


input terminals S1 to S7.

Closed: Run according to the potentiometer frequency reference and RUN command from the Digital Operator.

UP/DOWN Commands (Setting: n056 = 34)

When the FWD (REV) RUN command is ON, acceleration/deceleration is enabled by inputting the UP or DOWN signal from multi-function input terminals S6 and S7 without changing the frequency reference. Operation can thus be performed at the desired speed. When UP/DOWN commands are specified in n056, any function set in n055 is disabled, terminal S6 is the input terminal for the UP command, and terminal S7 is the input terminal for the DOWN command.

| Multi-function Input Termi- nal S6 (UP command) | Closed | Open | Open | Closed |
|--|-------------------|-------------------|------|--------|
| Multi-function Input Termi- nal S7 (DOWN command) | Open | Closed | Open | Closed |
| Operation Status | Accel- eration | Decel- eration | Hold | Hold |

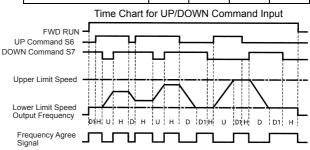

U = UP (accelerating) status

D = DOWN (decelerating) status

H = HOLD (constant speed) status

U1 = UP status, clamping at upper limit speed

D1 = DOWN status, clamping at lower limit speed

- Note: 1. When UP/DOWN commands are selected, the upper limit speed is set regardless of frequency reference.

 Upper limit speed = Maximum Output Frequency (n011)
 - Upper limit speed = Maximum Output Frequency (n011) × Frequency Reference Upper Limit (n033)/100
 - Lower limit value is either the Minimum Output Frequency (n016) or the Frequency Reference Lower Limit (n034) (whichever is larger.).
 - 3. When the FWD (REV) RUN command is input, operation starts at the lower limit speed without using the UP/DOWN commands.
 - If the JOG command is input while running for an UP/DOWN command, the JOG command has priority.
 - Multi-step speed references 1 to 4 are not effective when an UP/ DOWN command is selected.
 - 6. When 1 is set for the HOLD Output Frequency Memory Selection (n100), the output frequency can be recorded during HOLD.

| Setting | Description |
|---------|--|
| 0 | Output frequency is not recorded during HOLD. |
| 1 | When HOLD status is continued for 5 seconds or longer, the output frequency during HOLD is recorded and the Inverter restarts at the recorded frequency. |

Communications/Control Circuit Terminal Selection (Setting: 18)

Operation can be changed from communications commands, or from control circuit terminal or Digital Operator commands.

RUN commands from communications and the frequency reference are effective when the multi-function input terminal for this setting is closed (register No. 0001H, 0002H).

RUN commands in LOCAL/REMOTE mode and the frequency reference are effective when the terminal is open.

☐ Using the Multi-function Analog Inputs (n077, n078, n079)

The input analog signal (0 to 10 V or 4 to 20 mA) for the CN2 terminal of the JVOP-140 Digital Operator can be used as an auxiliary function for the master frequency reference input to the control circuit terminals (FR or RP). Refer to the block diagram on page 137 for details on the input signal.



When using the signal for the CN2 terminal of the JVOP-140 Digital Operator as a multi-function analog input, never use it for the target value or the feedback value of PID control.

Multi-function Input Selection (n077)


| No. | Name | Unit | Setting Range | Factory Setting |
|------|--------------------------------|------|------------------|--------------------|
| n077 | Multi-function Input Selection | - | 0 to 4 | 0 |

n077 Settings


| Setting | Function | Description |
|---------|---------------------------------------|--|
| 0 | Disabled | The multi-function input is disabled. |
| 1 | Auxiliary frequency reference (FREF2) | When frequency reference 2 is selected using the multi-step speed references, the input analog signal for the CN2 terminal will be the frequency reference. The n025 setting will be invalid. |
| | | Note:Set the Frequency Reference Gain in n068 or n071, and the Frequency Reference Bias in n069 or n072. |
| 2 | Frequency reference gain (FGAIN) | Set the FGAIN to constant n060 or n074 and the FBIAS to constant n061 or n075 for the master frequency refer- ence. Then, multiply the resulting fre- quency reference by the FGAIN. |
| 3 | Frequency reference bias (FBIAS) | Set the FGAIN to constant n060 or n074 and the FBIAS to constant n061 or n075 for the master frequency reference. Then, add the FBIAS to the resulting frequency reference. Then amount of the FBIAS to be added is set to n079. |
| 4 | Output voltage bias (VBIAS) | Add the VBIAS to the output voltage after V/f conversion. |

Analog Input Level

1. Auxiliary Frequency Reference (n077=1)

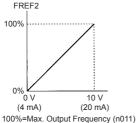



2. Frequency Reference Gain (n077=2)

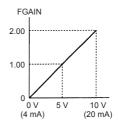

3. Frequency Reference Bias (n077=3) 4. Output Voltage Bias (n077=4)



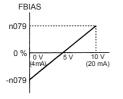

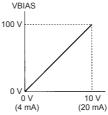

The VBIAS value to be added is doubled for 400 V class Inverters.

Multi-function Analog Input Signal Selection (n078)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|--|--------------------|
| n078 | Multi-function Analog Input Signal Selection | 1 | 0=Digital Operator terminal (voltage: 0 to 10 V) 1=Digital Operator terminal (current 4 to 20 mA) | 0 |

Frequency Reference Bias Setting (n079)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|--|--------------------|
| n079 | Frequency Reference Bias Setting | 1% | 0 to 50 100 %/Max. Output Frequency (n011) | 10 |

☐ Using Output Signals (n057, n058, n059)

The functions of multi-function output terminals MA, MB, P1 and P2 can be changed as necessary by setting constants n057, n058, and n059.

- Terminal MA and MB functions: Set in n057
- Terminal P1 function: Set in n058
- Terminal P2 function: Set in n059


| Setting | Name | Description | Ref. |
|---------|--|---|------|
| 0 | Fault | Closed when Inverter fault occurs. | - |
| 1 | Operating | Closed when either FWD/REV command is input or voltage is output from the Inverter. | - |
| 2 | Frequency agree | Closed when the set frequency agrees with Inverter output frequency. | 98 |
| 3 | Zero speed | Closed when Inverter output frequency is less than minimum output frequency. | - |
| 4 | Frequency detection 1 | Output frequency ≥ Frequency Detection Level (n095) | 75 |
| 5 | Frequency detection 2 | Output frequency ≤ Frequency Detection Level (n095) | 75 |
| 6 | Overtorque detection, NO contact output | - | 74 |
| 7 | Overtorque detection, NC contact output | - | 74 |
| 8 | Undertorque detected, NO contact output | - | 153 |
| 9 | Undertorque detected, NC contact output | - | 153 |
| 10 | Minor fault | Closed when an alarm has been detected. | - |
| 11 | Base blocked | Closed when the Inverter output is OFF. | - |
| 12 | Operating mode | Closed when LOCAL is selected for the LOCAL/REMOTE selection. | - |
| 13 | Inverter operation ready | Closed when an Inverter fault is not detected, and operation is ready. | - |
| 14 | Fault retry | Closed during fault retries. | - |
| 15 | UV | Closed when undervoltage is detected. | - |

| Setting | Name | Description | Ref. |
|---------|--------------------------------------|---|------|
| 16 | Reverse run | Closed during reverse run. | - |
| 17 | Speed search | Closed when Inverter conducts a speed search. | - |
| 18 | Data output from com- munications | Operates multi-function output termi- nal independently from Inverter opera- tion (by MEMOBUS communication) | 109 |
| 19 | PID feedback loss | Closed during PID feedback loss | 135 |
| 20 | Frequency reference loss | Closed during frequency reference loss | 151 |
| 21 | Inverter overheat alert | Closed during Inverter overheat alert | 91 |

Factory Settings

| No. | Terminal | Factory Setting |
|------|----------|---------------------|
| n057 | MA, MB | 0 (fault) |
| n058 | P1 | 1 (operating) |
| n059 | P2 | 2 (frequency agree) |


• FREQUENCY AGREE Signal (setting=2)

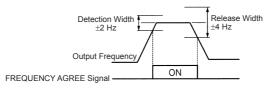

■ Setting Frequency by Current Reference Input

When setting frequency by inputting current reference (4-20 mA or 0-20 mA) from the control circuit terminal FR, switch the DIP switch SW2 on the control circuit board to "1" side.



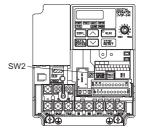



Never input voltage reference to control circuit terminal FR when DIP switch SW2 is switched to "I" side. The Inverter might be damaged.


Current Reference Selection

After changing DIP switch (V-I switch of SW2) to the "I" side, press PRGM on the Digital Operator, then set the following constants.

Current reference (4 to 20 mA)....constant n004 = 3

Current reference (0 to 20 mA)....constant n004 = 4


• Setting: n003 = 0

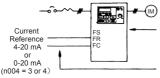

Press the Digital Operator keys to run or stop the Inverter. Switch FWD and REV run by setting F/R LED.

Set frequency by the analog current signal [0-100 % (max. frequency)/4-20 mA or 0 to 20 mA] connected to the control circuit terminals.

Setting: n003 = 1

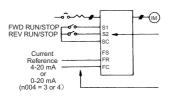

Switch run/stop and FWD/REV run with switching device connected to the control circuit terminal.

Multi-function input terminals S1 and S2 are set to Forward run/stop (n050=1) and Reverse run/stop (n051=2) respectively.

Set frequency by the analog current signal [0-100 % (max. frequency)/4-20 mA or 0 to 20 mA] connected to the control circuit terminal.

Frequency reference gain (n060)/bias (n061) can be set even when current reference input is selected. For details, refer to *Adjusting Speed Setting Signal* on page 69.

■ Frequency Reference by Pulse Train Input

Frequency reference can be set by pulse train input from the control circuit terminals.

· Input pulse specifications

Low-level voltage: 0.8 V or less
High-level voltage: 3.5 to 13.2 V


· H duty: 30 to 70 %

• Pulse frequency: 0 to 33 kHz

· Frequency reference method

Frequency reference is a value obtained by multiplying the ratio of the maximum input pulse frequency and actual input pulse frequency by the maximum output frequency.

$$\frac{\text{Reference}}{\text{frequency}} = \frac{\text{Input pulse frequency}}{\text{Maximum pulse train frequency (n149)} \times 10} \times \frac{\text{Maximum output frequency (n011)}}{\text{frequency (n011)}}$$

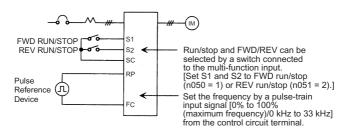

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|----------------------------------|--------------|-------------------------|--------------------|
| n003 | RUN Command Selection | - | 0 to 3 | 0 |
| n004 | Frequency Reference Selection | - | 0 to 9 | 0 |
| n149 | Pulse Train Input Scaling | 1 = 10 Hz | 100 to 3300 (33 kHz) | 2500 (25 kHz) |

Preventing the Motor from Stalling (Current Limit)


This function automatically adjusts the output frequency and output current according to the load to continue operation without stalling the motor.

Stall Prevention (Current Limit) Level during Acceleration (n093)

Sets the stall prevention (current limit) level during acceleration in units of 1%. (Inverter rated current = 100%)


Factory setting: 170%

A setting of 200% disables the stall prevention (current limit) during acceleration. If the output current exceeds the value set for n093 during acceleration, acceleration stops and the frequency is maintained. When the output current goes to the value set for n093, acceleration starts.

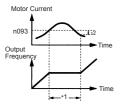

- *1: Stops the acceleration to prevent the motor from stalling.
- *2: Release width (hysteresis) of stall prevention during accel is approx. 5% of inverter rated current

In the constant output area (output frequency > Max. Voltage Output Frequency (n013)), the stall prevention (current limit) level during acceleration is automatically decreased using the following equation

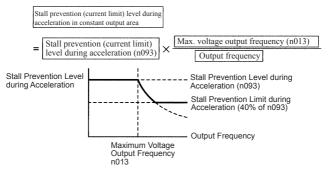

Stall Prevention (Current Limit) Level while Running (n094)

Sets the stall prevention (current limit) level while running in units of 1%. (Inverter rated current = 100%)


Factory setting: 160%

A setting of 200% disables stall prevention (current limit) while running.

If the stall prevention action current at speed agreement exceeds the value set for n094 for longer than 100 ms, deceleration starts.

If the output current exceeds the value set for n094, deceleration continues. If the output current goes to the value set for n094, acceleration to the set frequency starts.

Stall prevention acceleration/deceleration settings during operation are set either for the currently selected Acceleration Time, i.e., for Acceleration Time 1 (n019) and Deceleration Time 1 (n020), or for Acceleration Time 2 (n021) and Deceleration Time 2 (n022).

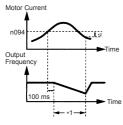

- *1: Decreases frequency to prevent the motor from stalling.
- *2: At start of acceleration, the output current hysterisis is approx. 5% of Inverter rated current.

☐ Stall Prevention during Operation

Stall Prevention Above Base Speed During Run (n115)

The stall prevention level can be decreased automatically in the constant output range.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|---|------|-------------------------|--------------------|
| n115 | Stall Prevention Above Base Speed During Run | - | 0=Disabled 1=Enabled | 0 |

n115 Settings

| Setting | Function | | | | |
|---------|---|--|--|--|--|
| 0 | The stall prevention level is the level set for constant n094 in all frequency areas. | | | | |
| 1 | The following figure shows how the stall prevention level is automatically decreased in the constant output range (Max. frequency > Max. voltage output frequency (n013)). The lower limit is 40% of the set value of n094. | | | | |
| | Operation Level Operation Level = Operation Level = Operation Level = Output Frequency n013 Output Frequency Lower Limit Output Frequency | | | | |

Acceleration/Deceleration Time Selection during Stall Prevention (n116)

With this function, Acceleration Time 2 (n021) and Deceleration Time 2 (n022) can be fixed as the acceleration/deceleration time when moving to prevent stalling during operation.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|-------------------------|--------------------|
| n116 | Acceleration/Deceleration Time Selection during Stall Prevention | - | 0=Disabled 1=Enabled | 0 |


n116 Settings

| Sett | ing | Function | | | |
|------|-----|--|--|--|--|
| 0 | | Acceleration/deceleration time is set to Acceleration/ Deceleration Time 1 or 2. | | | |
| 1 | | Acceleration/deceleration time is fixed at Acceleration/ Deceleration Time 2 (n021, n022) | | | |

· Stall Prevention during Deceleration (n092)

To prevent overvoltage during deceleration, the Inverter automatically extends the deceleration time according to the value of main circuit DC voltage. When using an optional braking resistor, set n092 to 1.

| Setting | Stall Prevention during Deceleration |
|---------|--|
| 0 | Provided |
| 1 | Not provided (with braking resistor mounted) |

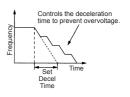

Decreasing Motor Speed Fluctuation

\square Slip Compensation (n002 = 0)

As the load becomes larger, the motor speed is reduced and the motor slip value is increased. The slip compensating function controls the motor speed at a constant value even if the load varies.

When the Inverter output current is equal to the Motor Rated Current (n036), the compensation frequency is added to the output frequency.

Compensation frequency = Motor rated slip (n106)

× Output current – Motor no-load current (n110) Motor rated current – Motor no-load current (n110) (n036)

X Slip compensation gain (n111)

Related Constants

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|------------------------------------|--------|---|--------------------|
| n036 | Motor Rated Current | 0.1 A | 0% to 150% of Inverter rated current | * |
| n111 | Slip Compensation Gain | 0.1 | 0.0 to 2.5 | 0.0 |
| n110 | Motor No-load Current | 1% | 0% to 99% (100%=Motor Rated Current n036) | * |
| n112 | Slip Compensation Time Constant | 0.1 s | 0.0 to 25.5 s When 0.0 s is set, delay time is 2.0 s. | 2.0 s |
| n106 | Motor Rated Slip | 0.1 Hz | 0.0 to 20 Hz | * |

^{*} Depends on Inverter capacity. (Refer to pages 211 and 212.)

Note: 1. Slip compensation is not performed under the following condition: Output frequency < Minimum Output Frequency (n016)

- 2. Slip compensation is not performed during regeneration.
- Slip compensation is not performed when the Motor Rated Current (n036) is set to 0.0 A.

Motor Protection

□ Motor Overload Detection

The VS-606V7 protects against motor overload with a built-in electronic thermal overload relay.

Motor Rated Current (Electronic Thermal Reference Current, n036)

Set the rated current value shown on the motor nameplate.

Note: Setting n036 to 0.0 A disables the motor overload protective function.

Motor Overload Protection Selection (n037, n038)

| n037 Setting | Electronic Thermal Characteristics | | |
|-----------------|--|--|--|
| 0 | For general-purpose motor | | |
| 1 | For Inverter motor | | |
| 2 | Electronic thermal overload protection not provided. | | |

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|-------|---------------|--------------------|
| n038 | Electronic Thermal Motor Protection Time Constant Set- ting | 1 min | 1 to 60 min | 8 min |

The electronic thermal overload function monitors the motor temperature based on Inverter output current and time to protect the motor from overheating. When the electronic thermal overload relay is enabled, an at a error occurs, and the Inverter output is turned OFF to prevent excessive overheating in the motor. When operating with one Inverter connected to one motor, an external thermal relay is not needed. When operating more than one motor with one Inverter, install a thermal relay on each motor.

General-purpose Motors and Inverter Motors

Induction motors are classified as general-purpose motors or Inverter motors based on their cooling capabilities. The motor overload function operates differently for these two motor types.

Example for 200 V-Class Motors

| | Cooling Effect | Torque Characteristics | Electronic Thermal Over- load |
|-----------------------|--|---|---|
| General-purpose Motor | Effective when operated at 50/60 Hz from commercial power supply | 180 155 156 156 156 156 156 157 157 157 157 157 157 157 157 157 157 | An all error (motor overload protection) occurs when continuously operated at 50/60 Hz or less at 100% load. |
| Inverter Motor | Effective even when operat- ed at low speed (approx. 6 Hz) | Torque (%) 100 Base Frequency (Hz) CV/f for 60-Hz, 220-V Input Voltage) Use an Inverter motor for continuous operation at low speed. | Electronic thermal overload protection is not activated even for continuous operation at 50/60 Hz or less at a 100% load. |

■ Selecting Cooling Fan Operation

In order to increase the life of the cooling fan, the fan can be set to operate only when Inverter is running

n039 = 0 (Factory setting): Operates only when Inverter is running
(Continues operation for 1 minute after
Inverter is stopped.)

=1: Operates with power ON

■ Using MEMOBUS (MODBUS) Communications


Serial communication is available with VS-606V7 using programmable controller (MEMOCON series) and MEMOBUS (MODBUS). Refer to MEMOBUS Instruction Manual (Manual No.: TOEZ-C736-70.1) for details of communications

☐ MEMOBUS (MODBUS) Communications

MEMOBUS system is composed of a single master (PLC) and slaves (1 to 31 VS-606V7 units).

Communication between master and slave (serial communication) is controlled according to the master program with the master initiating communication and the slave responding.

The master sends a signal to one slave at a time. Each slave has a preregistered address No., and the master specifies the number and conduct signal communications. The slave receives the communications to carry out designated functions and reply to the master.

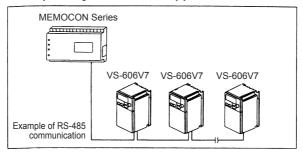


□ Communications specified

| Interface | RS-422, RS-485 |
|--|---|
| Synchronization | Asynchronous (Start-stop synchronization) |
| Communication Parameters | Baud rate: Selected from 2400/4800/9600/19200 bps Data length: 8 bits fixed Parity: Selected from even/odd/none Stop bits: 1 bit fixed |
| Communication Protocol | MEMOBUS (MODBUS) (RTU mode only) |
| Max. Number of Inverters that Can be Connected | 31 units (When using RS-485) |

□ Communications Connection Terminal

Use the following S+, S-, R+ and R- terminals for MEMOBUS communications. Change the termination resistor as shown below.

At RS-422, RS-485 communications: Turn ON SW2 ON/OFF switch of only the Inverter at the termination viewed from the PLC.

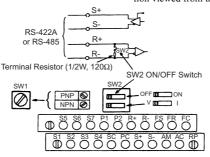

- Note: 1. Separate the wiring for communication from the main circuit wiring or other power lines.
 - Use shielded cables for communication wiring; connect the shielded sheath to the ground terminal and terminate the other end to prevent it from being connected (to prevent noise malfunction).
 - When communication is performed through RS-485, connect S+ and R+, S- and R- terminals outside the Inverter as shown right side.

Procedure for Communications with PLC

The following shows the procedure for communications with PLC.

- Connect the communication cable between the PLC and the VS-606V7 with the power supply turned OFF.
- 2. Turn the power ON.
- 3. Set the constants (n151 to n157) required for communication by using the Digital Operator.
- 4. Turn the power OFF once to verify that the Digital Operator displays have been completely erased.
- 5. Turn the power ON again.
- 6. Communications with the PLC starts.

☐ Setting Constants Necessary for Communication

Communication related constants must be set for PLC communication. Constants n151 to n157 cannot be set by communication. Always set them before performing communication.

| Constant | Name | Description | Factory Setting |
|----------|--|--|--------------------|
| n003 | Run Command Selection | Digital Operator Control circuit terminals Communications Communications card (optional) | 0 |
| n004 | Frequency Reference Selection | O: Potentiometer (Digital Operator) 1: Frequency reference 1 (n024) 2: Control circuit terminals (voltage 0 to 10 V) 3: Control circuit terminals (voltage 0 to 10 V) 4: Control circuit terminals (current 4 to 20 mA) 5: Pulse train 6: MEMOBUS communication (register No. 0002H) 7: Operator circuit terminals (voltage 0 to 10 V) 8: Operator circuit terminals (current 4 to 20 mA) 9: Communication card (optional) | 0 |
| n151 | MEMOBUS Timeover Detec- tion Monitors Transmission Time between the Receiving the Correct Data from the PLC. (Timeover: 2 s) | O: Timeover detection (coast to a stop) 1: Timeover detection (decelerates to a stop with speed deceleration time 1) 2: Timeover detection (decelerates to a stop with speed deceleration time 2) 3: Timeover detection (continuous operation, warning display) 4: Timeover detection not provided | 0 |
| n152 | MEMOBUS Frequency Reference and Frequency Monitor Unit | 0: 0.1 Hz 1: 0.01 Hz 2: 30000/100 % (30000=max.output frequency) 3: 0.1 % | 0 |

| Constant | Name | Description | Factory Setting |
|----------|------------------------------|--|--------------------|
| n153 | MEMOBUS Slave Address | Setting range: 0 to 32* | 0 |
| n154 | MEMOBUS BPS Selection | 0: 2400 bps 1: 4800 bps 2: 9600 bps 3: 19200 bps | 2 |
| n155 | MEMOBUS Parity Selection | 0: Even parity 1: Odd parity 2: No parity | 2 |
| n156 | Transmission Waiting Time | Setting range: 10 ms to 65 ms Setting unit: 1 ms | 10 ms |
| n157 | RTS Control | 0: RTS control 1: No RTS control (RS-422A 1 to 1 communication) | 0 |

^{*} The slave does not respond to the command from the master when set to 0. Monitoring run status from the PLC, setting/referencing of constants, fault reset and multi-function input reference can be done regardless of run command or frequency reference selection.

Multi-function input reference from PLC becomes OR with input commands from S1 to S7 multi-function input terminals.

☐ Message Format

For communications, the master (PLC) sends a command to the slave (VS-606V7) and the slave responds to it. The configuration for sending and receiving is as shown to the right. The length of the data varies according to the contents of commands (functions).

The interval between messages must be maintained at the following amount.

| Slave address |
|---------------|
| Function code |
| Data |
| Error check |

| | PLC - VS-606V7 | VS-606V | 7 - PLC | PLC - VS-606V7 | |
|---|-------------------|------------------|---------------|-------------------|-------|
| _ | Reference Message | Response | Message | Reference Message | t (s) |
| | | - - | - | +=1 | |
| | 24 bits | n156 setting | 24 bits | 10 ms or more | |

Slave address: Inverter address (0 to 32)

Setting to 0 indicates simultaneous broadcasting. The Inverter does not respond to the command from the master.

• Function code: Command codes (See below.)

| Func- | Function | Reference Message | | Response Message | |
|--------------------------|------------------------------------|-------------------|-------------------|-------------------|-------------------|
| Code Hexa- decimal | | Minimum (Byte) | Maximum (Byte) | Minimum (Byte) | Maximum (Byte) |
| 03H | Reading holding register contents | 8 | 8 | 7 | 37 |
| 08H | Loop back test | 8 | 8 | 8 | 8 |
| 10H | Write in several holding registers | 11 | 41 | 8 | 8 |

- Data: Composes a series of data by combining holding register numbers (test codes for loop-back numbers) and their data. Data length depends on the contents of the command.
- Error check: CRC-16 (Calculate the value by the following method.)
 - The default value at calculation of CRC-16 is normally 0. In the MEMOBUS system, change the default to 1 (all to 16-bit).
 - Calculate CRC-16 assuming that the loop address LSB is MSB and the last data MSB is LSB
 - 3. Also calculate CRC-16 for a response message from the slave and refer it to CRC-16 in the response message.
 - · Read Out Holding Register Contents (03H)

Reads out the contents of the holding registers with the continuous numbers for the specified quantity. The contents of holding register is dividing into the upper 8 bits and the lower 8 bits. They become the data items in response message in the order of numbers.

(Example)

Reads out status signal, fault contents, data link status and frequency reference from the VS-606V7 (slave 2).

Reference Message

| Slave a | 02H | | |
|-----------------|---------------|-----|--|
| Functio | Function code | | |
| Start number | Upper | 00H | |
| | Lower | 20H | |
| Quantity | Upper | 00H | |
| | Lower | 04H | |
| CRC-16 | Upper | 45H | |
| | Lower | F0H | |

(For error code 03H, refer to page 123.)

Response Message (at normal operation)

| (at normal operation) | | | |
|-----------------------------|---------------|-----|--|
| Slave a | 02H | | |
| Function | Function code | | |
| Number | of data* | 08H | |
| First | Upper | 00H | |
| holding register | Lower | 65H | |
| Next holding | Upper | 00H | |
| register | Lower | 00H | |
| Next holding register | Upper | 00H | |
| | Lower | 00H | |
| Next holding | Upper | 01H | |
| register | Lower | F4H | |
| CRC-16 | Upper | AFH | |
| 0110-10 | Lower | 82H | |

Response Message (at fault occurrence)

| Slave address | | 02H |
|---------------|-------|-----|
| Functio | 83H | |
| Error code | | 03H |
| 000.40 | Upper | F1H |
| CRC-16 | Lower | 31H |

- * Twice as much as the number of reference message.
 - · Example of Loop-back Test (08H)

Reference message is returned as a response message without being changed. This function is used to check communication between the master and the slave. Any arbitrary values can be used for test codes or data.

(Example) Loop-back test of VS-606V7 (slave 1)

Reference Message

| - North Chief Microsoff | | | |
|-------------------------|---------------|-----|--|
| Slave a | Slave address | | |
| Functio | n code | 08H | |
| Test code | Upper | 00H | |
| | Lower | 00H | |
| Data | Upper | A5H | |
| Data | Lower | 37H | |
| CRC-16 | Upper | DAH | |
| 0110-10 | Lower | 8DH | |

Response Message (at normal operation)

| (at normal operation) | | | |
|-----------------------|-------|-----|--|
| Slave a | 01H | | |
| Function | 08H | | |
| Test code | Upper | 00H | |
| | Lower | 00H | |
| Data | Upper | A5H | |
| | Lower | 37H | |
| CRC-16 | Upper | DAH | |
| CIC-10 | Lower | 8DH | |
| | | | |

Response Message (at fault occurrence)

| | , | |
|---------|-------|-----|
| Slave a | 01H | |
| Functio | 89H | |
| Error | 01H | |
| CRC-16 | Upper | 86H |
| CICC-10 | Lower | 50H |

· Writing to Several Holding Registers (10H)

Specified data are written into the several specified holding registers from the specified number, respectively. Written data must be arranged in a reference message in the order of the holding register numbers: from upper eight bits to lower eight bits.

(Example)

Set forward run at frequency reference 60.0 Hz to slave 1 VS-606V7 from the PLC.

Reference Message

| Slave a | 01H | | | | |
|----------|--------|-----|--|--|--|
| Functio | n code | 10H | | | |
| Start | Upper | 00H | | | |
| number | Lower | 01H | | | |
| Quantity | Upper | 00H | | | |
| Quantity | Lower | 02H | | | |
| Number | 04H | | | | |
| First | Upper | 00H | | | |
| data | Lower | 01H | | | |
| Next | Upper | 02H | | | |
| data | Lower | 58H | | | |
| CRC-16 | Upper | 63H | | | |
| CINC-10 | Lower | 39H | | | |

Response Message (at normal operation)

| | | , |
|----------|--------|-----|
| Slave a | ddress | 01H |
| Function | n code | 10H |
| Start | Upper | 00H |
| number | Lower | 01H |
| Quantity | Upper | 00H |
| Quartity | Lower | 02H |
| CRC-16 | Upper | 10H |
| 0110-10 | Lower | 08H |
| | | |

Response Message (at fault occurrence)

| (=1.1==1.1=1.1=) | | | | | |
|------------------|-------------------------|--|--|--|--|
| Slave address | | | | | |
| Function code | | | | | |
| Error code | | | | | |
| Upper | CDH | | | | |
| Lower | C1H | | | | |
| | n code code Upper | | | | |

^{*} Sets twice as large as the actual number.

Data

• Reference Data (available to read out/write in)

| Register No. | | Bit | Description | | |
|-----------------|----|----------|---|--|--|
| 0000H | Re | served | | | |
| | | 0 | RUN command 1: Run 0: Stop | | |
| | | 1 | Reverse run 1: Reverse run 0: Forward run | | |
| | | 2 | External fault 1: Fault (EFO) | | |
| | | 3 | Fault reset 1: Reset command | | |
| | | 4 | Multi-function input reference 1 (Function selected by n050) | | |
| 0001H | | 5 | Multi-function input reference 2 (Function selected by n051) | | |
| 000111 | | 6 | Multi-function input reference 3 (Function selected by n052) | | |
| | | 7 | Multi-function input reference 4 (Function selected by n053) | | |
| | | 8 | Multi-function input reference 5 (Function selected by n054) | | |
| | | 9 | Multi-function input reference 6 (Function selected by n055) | | |
| | | Α | Multi-function input reference 7 (Function selected by n056) | | |
| | | B-F | (Not used) | | |
| 0002H | | Frequ | ency reference (unit: n152) | | |
| 0003H | | V/f ga | in (1000/100 %) Setting range: 2.0 to 200.0 % | | |
| 0004H- 0008H | Re | served | | | |
| | | 0 | Multi-function output reference 1 (1: MA ON 0: MA OFF) (Effective when n057=18) | | |
| 0009H | | 1 | Multi-function output reference 2 (1: P1 ON 0: P1 OFF) (Effective when n058=18) | | |
| | | 2 | Multi-function output reference 3 (1: P2 ON 0: P2 OFF) (Effective when n059=18) | | |
| | | 3-F | (Not used) | | |
| 000AH- 001FH | Re | Reserved | | | |

Note: Write in "0" for unused bit. Never write in data for the reserved register.

6. Programming Features

· Simultaneous Broadcasting Data (available only for write in)

| Register No. | | Bit | | Description | |
|-----------------|--|-------|--|-------------------|----------------|
| | | 0 | RUN command | 1: Run | 0: Stop |
| | | 1 | Reverse run | 1: Reverse run | 0: Forward run |
| | | 2 | (Not used) | | |
| 0001H | | 3 | (Not used) | | |
| | | 4 | External fault | 1: Fault (EFO) | |
| | | 5 | Fault reset | 1: Fault reset co | mmand |
| | | 6-F | (Not used) | | |
| 0002H | | (Data | uency reference 30000/100 % fixed unit a is converted into 0.01 Hz inside the Inverter, and fractions bunded off.) | | |

Bit signals not defined as the broadcast operation signals are used as the local station data signals.

· Monitor Data (available only for read out)

| Register No. | | Bit | | Description | |
|-----------------|--------|-----|--------------------------|----------------|----------------|
| | | 0 | RUN command | 1: Run | 0: Stop |
| | | 1 | Reverse run | 1: Reverse run | 0: Forward run |
| | a | 2 | Inverter operation ready | 1: Ready | 0: Not ready |
| | signal | 3 | Fault | 1: Fault | |
| 0020H | Status | 4 | Data setting error | 1: Error | |
| | | 5 | Multi-function output 1 | (1: MA ON | 0: MA OFF) |
| | | 6 | Multi-function output 2 | (1: P1 ON | 0: P1 OFF) |
| | | 7 | Multi-function output 3 | (1: P2 ON | 0: P2 OFF) |
| | | 8-F | (Not used) | | |

| Register No. | | Bit | Description | |
|-----------------|-------------------------------|------------------------|--|--|
| | | 0 | Overcurrent (OC) | |
| | | 1 | Overvoltage (OV) | |
| | | 2 | Inverter overload (OL2) | |
| | | 3 | Inverter overheat (OH) | |
| | | 4 | (Not used) | |
| | | 5 | (Not used) | |
| | otio | 6 | PID feedback loss (FbL) | |
| 0021H | Fault description | 7 | External fault (EF, EFO), Emergency stop (STP) | |
| 002111 | t de | 8 | Hardware fault (FXX) | |
| | -aut | 9 | Motor overload (OL1) | |
| | " | Α | Overtorque detection (OL3) | |
| | | В | Undertorque detection (UL3) | |
| | | С | Power loss (UV1) | |
| | | D | Control power fault (UV2) | |
| | | Е | MEMOBUS communications timeover (CE) | |
| | | F | Operator connection fault (OPR) | |
| | tus | 0 | Data write in | |
| | | 1 | (Not used) | |
| 0022H | Data link status | 2 | (Not used) | |
| 0022H | a ⊒i | 3 | Upper/lower limit fault | |
| | Dat | 4 | Consistency fault | |
| | | 5-F | (Not used) | |
| 0023H | Freq | reference (unit: n152) | | |
| 0024H | Output frequency (unit: n152) | | | |
| 0025H- 0026H | (Not used) | | | |
| 0027H | Outp | out cur | rent (10/1 A) | |
| 0028H | Outp | out volt | age reference (1/1 V) | |

| Register No. | | Bit | Description | | | | | | |
|-----------------|-----------------------|-----|---------------------|-----------------------|---------|---|------------------|------|--|
| | n | 0 | (Not used) | | | | | | |
| | riptic | 1 | (Not used) | | | | | | |
| 0029H | Jesc | 2 | Input open phase | (PF) | | | | | |
| | Fault description | 3 | Output open phas | e (LF) | | | | | |
| | Fa | 4-F | (Not used) | | | | | | |
| | | 0 | Operation function | n stop (STP) | | | | | |
| | | 1 | Sequence error (S | SER) | | | | | |
| | | 2 | Simultaneous FW | D/REV run command | ds (EF) | | | | |
| | | 3 | External basebloo | k (BB) | | | | | |
| | | 4 | Overtorque detec | tion (OL3) | | | | | |
| | _ | 5 | Cooling fan overh | eat (OH) | | | | | |
| | ptior | 6 | Main circuit overv | oltage (OV) | | | | | |
| 002AH | Alarm description | 7 | Main circuit under | voltage (UV) | | | | | |
| 002AII | | 8 | Cooling fan fault (| FAN) | | | | | |
| | | 9 | Communications | fault (CE) | | | | | |
| | | Α | Option card comm | nunications error (BU | S) | | | | |
| | | В | Undertorque (UL3 | 3) | | | | | |
| | | С | Inverter overheat | alert (OH3) | | | | | |
| | | D | PID feedback loss | s (FBL) | | | | | |
| | | | | | | Е | Emergency stop (| STP) | |
| | | F | Communications | waiting (CAL) | | | | | |
| | | 0 | Terminal S1 | 1: Closed | 0: Open | | | | |
| | tus | 1 | Terminal S2 | 1: Closed | 0: Open | | | | |
| | Sequence input status | 2 | Terminal S3 | 1: Closed | 0: Open | | | | |
| 002BH | inpu | 3 | Terminal S4 | 1: Closed | 0: Open | | | | |
| 002011 | nce | 4 | Terminal S5 | 1: Closed | 0: Open | | | | |
| | enb | 5 | Terminal S6 | 1: Closed | 0: Open | | | | |
| | Se | 6 | Terminal S7 | 1: Closed | 0: Open | | | | |
| | | 7-F | (Not used) | | | | | | |

| Register No. | | Bit | De | escription | |
|-----------------|---|--------|-----------------------------------|---|--|
| | | 0 | Run | 1: Run | |
| | | 1 | Zero-speed | 1: Zero-speed | |
| | | 2 | Frequency agreed | 1: Agreed | |
| | | 3 | Minor fault (Alarm is indicat | ted) | |
| | | 4 | Frequency detection 1 | 1: Output frequency ≤ (n095) | |
| | | 5 | Frequency detection 2 | 1: Output frequency ≥ (n095) | |
| | | 6 | Inverter operation ready | 1: Ready | |
| | tus | 7 | Undervoltage detection | 1: Undervoltage detection | |
| 002CH | r sta | 8 | Baseblock | 1: Inverter output baseblock | |
| 002011 | Inverter status | 9 | Frequency reference mode | 1: Other than communications 0: Communications | |
| | | Α | RUN command mode | 1: Other than communications 0: Communications | |
| | | В | Overtorque detection | 1: Detection or overtorque fault | |
| | | С | Undertorque detection | 1: Detection or undertorque fault | |
| | | D | Fault retry | | |
| | | Е | Fault (Including MEMOBUS 1: Fault | S communications timeover) | |
| | | F | MEMOBUS communication | ns timeover 1: Timeover | |
| | u. | 0 | MA 1: | ON 0: OFF | |
| 002DH | ti-functi output | 1 | P1 1: | ON 0: OFF | |
| 002DH | Multi-function output | 2 | P2 1: | ON 0: OFF | |
| | M | 3-F | (Not used) | | |
| | ter us | 0 | Frequency reference loss | 1: Frequency reference loss | |
| 002EH | Inverter Status | 1-F | (Not used) | | |
| 002FH- 0030H | Reserved | | | | |
| 0031H | Main circuit DC voltage (1/1 V) | | | | |
| 0032H | Torque monitor (1/1 %; 100 %/Motor rated torque; with sign) | | | | |
| 0033H- 0036H | (Not used) | | | | |
| 0037H | Outp | ut Pov | ver (1/1 W: with sign) | | |

6. Programming Features

| Register No. | | Bit | Description | | | | | | | | |
|-----------------|----------------------|---------|--|--------|--------|-----|---------------|-----|-----|---|---------------|
| 0038H | | | ck value (100 % /Input equivalent to max. output frequency; hout sign) | | | | | | | | |
| 0039H | PID | input v | alue (±100 %/±Max. output frequency; 10/1 %; with sign) | | | | | | | | |
| 003AH | PID | output | value (±100 %/±Max. output frequency; 10/1 %; with sign) | | | | | | | | |
| 003BH- 003CH | Res | erved | | | | | | | | | |
| | s error | 0 | CRC error | | | | | | | | |
| | | 1 | Data length fault | | | | | | | | |
| | | 2 | (Not used) | | | | | | | | |
| 003DH | atio | 3 | Parity error | | | | | | | | |
| 003D11 | Communications error | nmunic | nmunic | nmunic | nmunic | nic | nic | nic | nic | 4 | Overrun error |
| | | | | | | 5 | Framing error | | | | |
| | | 6 | Timeover | | | | | | | | |
| | | 7 | (Not used) | | | | | | | | |
| 003EH- 00FFH | Reserved | | | | | | | | | | |

^{*} Communications error contents are saved until fault reset is input. (Reset is enabled during run.)

☐ Storing Constants [ENTER Command] (can be written only.)

| Register No. | Name | Contents | Setting Range | Factory Setting |
|-----------------|------|--|-------------------|--------------------|
| 0900H | | Write in constant data to non-volatile memory (EEPROM) | 0000H to FFFFH | - |

When a constant is written from the PLC by communications, the constant is written to the constant data area on the RAM in the VS-606V7. ENTER command is a command to write the constant data on the RAM to the non-volatile memory in the VS-606V7. This ENTER command is executed when data, regardless of the value, is written to register number 0900H. With the factory setting, an ENTER command is accepted only while the Inverter is stopped. By changing constant n170, an ENTER command can be accepted even while the Inverter is running.

⚠CAUTION

While the constant is being stored after an ENTER command was issued, response to the commands or data input with the keys on the Digital Operator (JVOP-140) becomes poor. Be sure to take some measures for an emergency stop by using the external terminals (setting the external terminal to run command priority, or setting the multi-function input terminal to external fault, external baseblock or emergency stop).



Maximum number of writing times of the non-volatile memory used for VS-606V7 is 100,000; do not execute the ENTER command excessively.

When a constant is changed from the Digital Operator, the constant data on the RAM is written to the non-volatile memory without ENTER command

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|------------------|--------------------|
| n170 | ENTER command operation selection (MEMOBUS communications) | 1 | 0, 1 | 0 |

| n170 Setting | Description |
|-----------------|--|
| 0 | Accepts the ENTER command (constant saving) while the Inverter is stopped. |
| 1 | Always accepts the ENTER command (constant storing). The new constant becomes valid even if the ENTER command is not input. If the ENTER command is not used, however, the value returns to the stored value when the power supply is turned ON again. |

Register number 0900H is used only for write-in. If this register is readout, register number error (error code: 02H) occurs.

Error code

| Error Code | Contents | | | | |
|---------------|---|--|--|--|--|
| 01H | Function code error | | | | |
| 0111 | Function code from PLC is other than 03H, 08H, or 10H. | | | | |
| | Improper register number | | | | |
| 02H | No register numbers to be accessed have been registered. ENTER command "0900H" that is an exclusive-use register for write-in was read out. | | | | |
| | Improper quantity | | | | |
| 03H | The number of data items to be read or write-in is not in the range between 1 and 16. The number of data items in a message is not the value obtained by multiplying the quantity by two in the write-in mode. | | | | |
| | Data setting error | | | | |
| 21H | A simple upper/lower limit error occurred with control data or constant write-in. A constant setting error occurred when a constant was written. | | | | |
| | Write-in mode error | | | | |
| 22H | Attempt to write-in a constant from PLC was made during running.* Attempt to write-in an ENTER command from PLC was made during running. Attempt to write-in a constant from PLC was made during UV occurrence. Attempt to write-in an ENTER command from PLC was made during UV occurrence. Attempt to write-in a constant other than n001=8, 9 (constant initialization) from PLC was made during "F04" occurrence. Attempt to write-in a constant from PLC was made while data were being stored. Attempt to write-in data exclusive for read-out from PLC was made | | | | |

^{*} Refer to the constants list for constants that can be changed during operation.

□ Performing Self-test

VS-606V7 is provided with a function to perform self-diagnosis for operation check of the serial communication I/F circuit. This function is called self-test. In the self-test, connect the sending terminal with the receiving terminal in the communication section. It assures if the data received by VS-606V7 is not being changed. It also checks if the data can be received normally.

Carry out the self-test in the following procedure.

- 1. Turn ON the VS-606V7 power supply. Set constant n056 to 35 (self-test).
- 2. Turn OFF the VS-606V7 power supply.
- 3. Make the following wiring with the power supply turned OFF.
- 4. Turn the power ON.



(Note: Select NPN side for SW1.)

Normal operation: Operator displays frequency reference value.

Faulty operation: Operator displays *CE*, fault signal is turned ON and Inverter ready signal is turned OFF.

■ Using Energy-saving Control Mode

Verify that the constant n002 is set to 0 (V/f control mode) when performing energy-saving control. Set n139 to 1 to enable the energy-saving control function.

☐ Energy-saving Control Selection (n139)

| Constant No. | Name | | Setting Range | Factory Setting |
|-----------------|------------------------------------|---|---------------------------|--------------------|
| n139 | Energy-saving Control Selection | - | 0: Disabled 1: Enabled | 0 |

Normally it is not necessary to change this setting. However, if the motor characteristics are different from a Yaskawa standard motor, refer to the description below and change the constant setting accordingly.

Energy-saving Control Mode (n140, n158)

The voltage for the best motor efficiency is calculated when operating in energy-saving control mode. The calculated voltage is used as the output voltage reference. The factory setting is set to the max. applicable motor capacity for a Yaskawa standard motor.

The greater the energy-saving coefficient is, the greater the output voltage becomes.

When using a motor other than a Yaskawa standard motor, set the motor code corresponding to the voltage and capacity in n158. Then, change the setting of the energy-saving coefficient K2 (n140) by 5% to minimize the output power.

When the motor code is set in n158, the energy-saving coefficient K2, which corresponds to the motor code, must be set in n140.


| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|---|------|---------------|--------------------|
| n140 | Energy-saving Control Coefficient K2 | - | 0.0 to 6550 | * |
| n158 | Motor Code | - | 0 to 70 | * |

^{*} Depends on Inverter capacity. (Refer to page 200 and following pages.)

Energy-saving Voltage Lower/Upper Limits (n141, n142, n159, n160)

Set the upper and lower limits of the output voltage. When the value calculated in the energy-saving control mode is larger than the upper limit (or smaller than the lower limit), the limit value is output as the voltage reference. The upper limit is set to prevent over-excitation, and the lower limit is set to prevent stalls when the load is light. The voltage limit is set for machines using 6 or 60 Hz. For any value other than 6 or 60 Hz, set the voltage limit using linear interpolation. The constants are set in % for 200-V/400-V Inverters.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|------------------|--------------------|
| n141 | Lower Voltage Limit Energy- saving Control at 60 Hz | 1% | 0 to 120 | 50 |
| n142 | Lower Voltage Limit Energy- saving Control at 6 Hz | 1% | 0 to 25 | 12 |
| n159 | Upper Voltage Limit for Energy- saving Control at 60 Hz | 1% | 0 to 120 | 120 |
| n160 | Upper Voltage Limit for Energy- saving Control at 6 Hz | 1% | 0 to 25 | 16 |

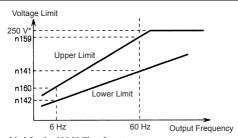

* Doubled for the 400 V Class Inverters.

□ Energy-saving Search Operation

In energy-saving control mode, the maximum applicable voltage is calculated using the output power. However, a temperature change or the use of another manufacturer's motor will change the fixed constants, and the maximum applicable voltage may not be emitted. In the search operation, change the voltage slightly so that the maximum applicable voltage can be obtained.

Search Operation Voltage Limit (n144)

Limits the range where the voltage is controlled. The constant is set in % for 200-V/400-V Inverters. The search operation is not performed when n144 is set to 0


| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|-----------------------------------|------|------------------|--------------------|
| n144 | Search Operation Voltage Limit | 1% | 0 to 100 | 0 |

Search Operation Voltage Steps (n145, n146)

Constants n145 and n146 set the change in voltage for one cycle of the search operation. For 200 V Class Inverters, set the values as percentages of 200 V. For 400 V Class Inverters, set the values as percentages of 400 V. Increase the value and the changes in the rotation speed will also increase.

For 200 V Class Inverters, the range of the change in voltage is determined from the 100% and 5% settings for 200 V. For 400 V Class Inverters, the range of the change in voltage is determined from the 100% and 5% settings for 400 V. The values calculated by linear interpolation are used for voltages other than these.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|--------------|------------------|--------------------|
| n145 | Search Operation Voltage Step at 100% | 0.1% | 0.1 to 10.0 | 0.5 |
| n146 | Search Operation Voltage Step at 5% | 0.1% | 0.1 to 10.0 | 0.2 |
| n143 | Power Average Time | 1 = 24 ms | 1 to 200 | 1 (24 ms) |

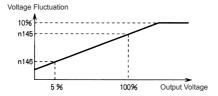

Search Operation Power Detection Hold Width (n161)

When the power fluctuation is less than this value, the output voltage is held for 3 seconds, and then, the search operating mode is started. Set the hold width as a percentage of the power that is currently held.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|---|------|------------------|--------------------|
| n161 | Search Operation Power Detection Hold Width | 1% | 0 to 100 | 10 |

Time Constant of Power Detection Filter (n162)

Response at load changes is improved when this value is small.

At low frequency, however, unstable rotation will result.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|-------------|------------------|--------------------|
| n162 | Time Constant of Power Detection Filter | 1 = 4 ms | 0 to 255 | 5 (20 ms) |

☐ Motor Code

The Energy-saving Coefficient K2 (n140) is set to a value that corresponds to the Motor Code (n158).

| Motor Type | Voltage Class | Capacity | Motor Code: n158 | Energy-saving Coefficient K2: n140 |
|---------------------|------------------|----------|---------------------|--|
| Yaskawa General- | 200 V | 0.1 kW | 0 | 481.7 |
| purpose Motor | ose | 0.2 kW | 1 | 356.9 |
| IVIOLOI | | 0.4 kW | 2 | 288.2 |
| | | 0.75 kW | 3 | 223.7 |
| | | 1.5 kW | 4 | 169.4 |
| | | 2.2 kW | 5 | 156.8 |
| | | 3.7 kW | 7 | 122.9 |
| | | 5.5 kW | 9 | 94.8 |
| | | 7.5 kW | 10 | 72.7 |
| | 400 V | 0.2 kW | 21 | 713.8 |
| | | 0.4 kW | 22 | 576.4 |
| | | 0.75 kW | 23 | 447.4 |
| | | 1.5 kW | 24 | 338.8 |
| | | 2.2 kW | 25 | 313.6 |
| | | 3.0 kW | 26 | 245.8 |
| | | 3.7 kW | 27 | 245.8 |
| | | 5.5 kW | 29 | 189.5 |
| | | 7.5 kW | 30 | 145.4 |

| Motor Type | Voltage Class | Capacity | Motor Code: n158 | Energy-saving Coefficient K2: n140 |
|---------------------|------------------|----------|---------------------|--|
| Yaskawa Inverter | 200 V | 0.1 kW | 40 | 481.7 |
| Motor | | 0.2 kW | 41 | 356.9 |
| | | 0.4 kW | 42 | 300.9 |
| | | 0.75 kW | 43 | 224.7 |
| | | 1.5 kW | 44 | 160.4 |
| | | 2.2 kW | 45 | 138.9 |
| | | 3.7 kW | 47 | 106.9 |
| | | 5.5 kW | 49 | 84.1 |
| | | 7.5 kW | 50 | 71.7 |
| | 400 V | 0.2 kW | 61 | 713.8 |
| | | 0.4 kW | 62 | 601.8 |
| | | 0.75 kW | 63 | 449.4 |
| | | 1.5 kW | 64 | 320.8 |
| | | 2.2 kW | 65 | 277.8 |
| | | 3.0 kW | 66 | 213.8 |
| | | 3.7 kW | 67 | 213.8 |
| | | 5.5 kW | 69 | 168.3 |
| | | 7.5 kW | 70 | 143.3 |

■ Using PID Control Mode

For details on the PID control settings, refer to the block diagram of the Inverter's internal PID control or the block diagram of the Operator analog speed reference.

☐ PID Control Selection (n128)

| Constant No. | | | Setting Range | Factory Setting |
|-----------------|----------------------------|--|------------------|--------------------|
| n128 | n128 PID Control Selection | | 0 to 8 | 0 |

| Setting | Function | PID Output Characteristics |
|---------|--|-------------------------------|
| 0 | Disabled. | - |
| 1 | Enabled: Deviation is subject to derivative control. | Forward |
| 2 | Enabled: Feedback signal is subject to derivative control. | |
| 3 | Enabled: Frequency reference + PID output, and deviation are subject to derivative control. | |
| 4 | Enabled: Frequency reference + PID output, and feed-back signal are subject to derivative control. | |
| 5 | Enabled: Deviation is subject to derivative control. | Reverse (Reverse the |
| 6 | Enabled: Feedback signal is subject to derivative control. | PID output.) |
| 7 | Enabled: Frequency reference + PID output, and deviation are subject to derivative control. | |
| 8 | Enabled: Frequency reference + PID output, and feed-back signal are subject to derivative control. | |

Set one of the above values when using PID control. The following table shows how to determine the target value and the feedback value to be input when PID control is enabled.

| | Input | Condition |
|-------------------|---|--|
| Target Value | The currently selected frequency reference | Determined by the Frequency Reference Selection (n004). When local mode is selected, the target value is determined by the Frequency Reference Selection in Local Mode (n008). When multi-step speed references are selected, the currently selected frequency reference will be the target value. |
| Feedback Value | The frequency reference that is set in the PID Feedback Value Selec- tion (n164) | - |

| n164 Setting | Description |
|--------------|--|
| 0 | Control circuit terminal FR (Voltage 0 to 10 V) |
| 1 | Control circuit terminal FR (Current 4 to 20 mA) |
| 2 | Control circuit terminal FR (Current 0 to 20 mA) |
| 3 | Operator terminal: Voltage 0 to 10 V |
| 4 | Operator terminal: Current 4 to 20 mA |
| 5 | Pulse train |

- Note: 1. When selecting frequency reference from the control circuit terminal FR as the target or feedback value, the V-I switch of SW2 on the control circuit board must be selected depending on the input method (current or voltage input).
 - Never use the frequency reference from the control circuit terminal FR for both the target and feedback values. The frequency reference for both the target value and the feedback value becomes the same. (Example)
 - When the frequency reference from the control circuit terminal FR, with a voltage of 0 to 10 V, is selected as the target value and n004=2, and when at the same time the frequency reference from the control circuit terminal FR, with a current of 4 to 20 mA, is selected as the feedback value and n164=1, the feedback value will be set as the frequency reference from the control circuit terminal FR with a voltage of 0 to 10 V.
 - 3. When using an analog signal (0 to 10 V/4 to 20 mA) input to the CN2 terminal of the JVOP-140 Digital Operator as the target or feedback value of PID control, do not use it as a multi-function analog input. Constant n077 (Multi-function Analog Input Function) must be set to 0 (disabled in this case).

Proportional Gain (P), Integral Time (I), Derivative Time (D) (n130, n131, n132)

Adjust the response of the PID control with the proportional gain (P), integral time (I), and derivative time (D).

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|-----------------------|--------|------------------|--------------------|
| n130 | Proportional Gain (P) | 0.1 | 0.0 to 25.0 | 1.0 |
| n131 | Integral Time (I) | 0.1 s | 0.0 to 360.0 | 1.0 |
| n132 | Derivative Time (D) | 0.01 s | 0.00 to 2.50 | 0.00 |

Optimize the responsiveness by adjusting the constants while operating an actual load (mechanical system). Any control (P, I, or D) that is set to zero will not operate.

Upper Limit of Integral (I) Values (n134)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--------------------------------|------|------------------|--------------------|
| n134 | Upper Limit of Integral Values | 1% | 0 to 100 | 100 |

Constant n134 prevents the calculated value of integral control from exceeding a specific amount. There is normally no need to change the setting.

Reduce the setting if there is a risk of load damage, or of the motor going out of step by the Inverter's response when the load suddenly changes. If the setting is reduced too much, the target value and the feedback value will not match.

Set this constant as a percentage of the maximum output frequency with the maximum frequency as 100%.

PID Offset Adjustment (n133)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|-----------------------|------|------------------|--------------------|
| n133 | PID Offset Adjustment | 1% | -100 to 100 | 0 |

Constant n133 adjusts the PID control offset.

If both the target value and the feedback values are zero, adjust n133 so that the Inverter output frequency is zero.

Primary Delay Time Constant for PID Output (n135)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|-------|------------------|--------------------|
| n135 | Primary Delay Time Constant for PID Out- put | 0.1 s | 0.0 to 10.0 | 0.0 |

Constant n135 is the low-pass filter setting for PID control outputs.

There is normally no need to change the setting.

If the viscous friction of the mechanical system is high or if the rigidity is low causing the mechanical system to resonate, increase the setting so that it is higher than the resonance frequency period.

PID Output Gain (n163)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|-----------------|------|------------------|--------------------|
| n163 | PID Output Gain | 0.1 | 0.0 to 25.0 | 1.0 |

Constant n163 adjusts the PID control output gain.

PID Feedback Gain (n129)

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|-------------------|------|------------------|--------------------|
| n129 | PID Feedback Gain | 0.01 | 0.00 to 10.00 | 1.00 |

Constant n129 is the gain that adjusts the feedback value.

PID Feedback Loss Detection (n136, n137, n138)


| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|---|-------|--|--------------------|
| n136 | Selection for PID Feedback Loss De- tection | - | O: No detection of PID feedback loss Detection of PID feedback loss, operation continued: FbL alarm Detection of PID feedback loss, output turned OFF: Fault | 0 |
| n137 | PID Feedback Loss Detection Level | 1% | 0 to 100 100%/Max. output frequency | 0 |
| n138 | PID Feedback Loss Detection Time | 0.1 s | 0.0 to 25.5 | 1.0 |

PID Upper Limit


Sets the upper limit after PID control as a percentage of the maximum output frequency.

Prohibition of PID Output

Zero limit occurs when the PID output is negative.

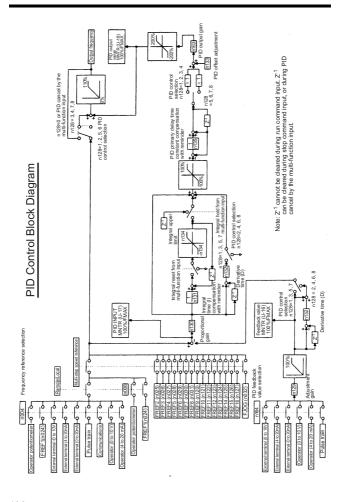

Operator Analog Speed Reference Block Diagram

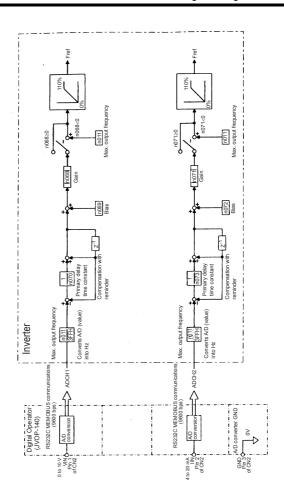

Using Constant Copy Function

□ Constant Copy Function

The VS-606V7 standard JVOP-140 Digital Operator can store constants for one Inverter. A backup power supply is not necessary because EEPROM is used

The constant copy function is possible only for the Inverters with the same product series, power supply specifications, and control mode (V/f control or vector control). However, some constants may not be copied. It is also impossible to copy constants between VS-606V7 and VS min 17 Inverters

Prohibiting reading constants from the Inverter can be set in n177. The constant data cannot be changed when this constant is set.

If an alarm occurs when copying constants, PRGM will flash and copying will continue.



To remove the Digital Operator from the Inverter, turn OFF the input power supply of the Inverter and confirm that the display on the Digital Operator has turned OFF. If the Digital Operator is removed during the power ON, the Inverter may be broken.

Constant Copy Function Selection (n176)

Depending on the setting of n176 (Constant Copy Function Selection), the following functions can be used.

- Reading all the constants from the Inverter (READ) and storing them in EEPROM in the Digital Operator
- Copying the constants stored in the Digital Operator to the Inverter (COPY)
- Verifying that the constants in the Digital Operator and the constants in the Inverter are the same (VERIFY)
- Displaying the maximum applicable motor capacity and the voltage class of the Inverter for which constants are stored in the Digital Operator
- 5. Displaying the software number of the Inverter for which constants are stored in the Digital Operator

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|---|--------------------|
| n176 | Constant Copy Func- tion Selection | - | rdy: READY rEd: READ CPy: COPY vFy: VERIFY vA: Inverter capacity display Sno: Software No. display | rdy |

Prohibiting Constant Read Selection (n177)

Select this function to prevent accidentally overwriting the constants stored in EEPROM in the Digital Operator. Reading is not possible when this constant is set to 0.

The constant data stored in the Digital Operator are safe from accidental overwriting.

If reading is attempted while this constant is set to 0, PrE will flash. Press $\boxed{\text{DSPL}}$ or $\boxed{\text{ENTER}}$ and return to the constant No. display.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|-------------------------------------|------|---------------------------------------|--------------------|
| n177 | Constant Read Selection Prohibit | - | 0: READ prohibited 1: READ allowed | 0 |

☐ READ Function

Reads out the constants in batch from the Inverter and stores them in EEPROM inside the Digital Operator. When the read-out is executed, the previously stored constants data in the EEPROM are cleared and replaced with the newly entered constants.

Example: Storing Constants from Inverter in EEPROM in Operator

| Explanation | | Operator Display |
|---|---|---|
| Enable the set- ting of constants n001 to n179. | Press DSPL to lit PRGM . Press ENTER to display the set value. Change the set value to 4 by pressing the ❷ or ❷ key. Press ENTER. | (May be a different constant No.) / (Lit) (May be a different set value.) // (Flashes) // (Lit for one second.) // (The constant No. is displayed.) |
| Set Constant Read Prohibited Selection (n177) to read-enabled. 1 | Change the constant No. to n177 by pressing the | ☐ 177 ☐ (Lit) / (Flashes) / (Lit for one second.) ↓ ☐ 177 (The constant No. is displayed.) |

| F | | |
|---|--|---|
| Explanation | | Operator Display |
| Execute read-out (READ) using the Constant Copy | Change the constant No. by pressing the ⋈ or ⋈ key. | n 176 |
| Function Selec- tion (n176). | Press ENTER to dis- | rdy (Lit) |
| | play the set value. • Change the set value to rEd by pressing the ⋈ or ⋈ key. | red (Lit) |
| | • Press ENTER. | rEd' (Flashes while executing the read) ↓ |
| | Press DSPL or | End (End is displayed after the read has been completed.) |
| | ENTER. | (The constant No. is displayed.) |
| Set Constant Read Prohibited Selection (n177) | Change the constant No. to n177 by pressing the | n 177 |
| to read-dis- abled.*2 | Press ENTER to dis- | ; (Lit) |
| | play the set value. • Change the set value to 0 by pressing the ⋈ or ⋈ key. | ☐ (Flashes) |
| | Press ENTER. | ☐ (Lit for one second.) |
| | | n 177 |
| | | (The constant No. is displayed.) |

- * 1. When reading is enabled (n177=1), this setting is not necessary.
- * 2. This setting is not necessary unless read-prohibition is selected.

□ COPY Function

This function writes the constants stored inside the Digital Operator in batch to the Inverter. Write-in is possible only for Inverters with the same product series, power supply specifications, and control mode (V/f control or vector control).

Therefore, writing from 200 V Class to 400 V Class Inverters (or vice versa), from V/f control mode to vector control mode Inverters (or vice versa), or from VS-606V7 to VS mini J7 Inverters is not possible.

The Constant Copy Function Selection (n176), Constant Read Selection Prohibit (n177), Fault History (n178), Software Version No. (n179), and hold output frequency are not written. vAE will appear (flashing) if the capacities of the Inverters differ.

Press ENTER to continue writing (the COPY function).

Press STOP/RESET to stop the COPY function.

The following constants are not written if the Inverter capacities differ.

| Constant No. | Name | Constant No. | Name |
|--------------|----------------------------------|--------------|-------------------------------------|
| n011 to n017 | V/f Settings | n108 | Motor Leakage Inductance |
| n036 | Motor Rated Current | n109 | Torque Compensation Voltage Limiter |
| n080 | Carrier Frequency Selection | n110 | Motor No-load Current |
| n105 | Torque Compensation Iron Loss | n140 | Energy-saving Coefficient K2 |
| n106 | Motor Rated Slip | n158 | Motor Code |
| n107 | Motor Line-to-neutral Resistance | | |

Constants added with software version upgrades will not be written between VS-606V7 Inverters without the additional constants and VS-606V7 Inverters with the additional constants.

For this reason, the settings for the additional constants will not be changed by the copy operation.

Example: Writing Constants from EEPROM in Operator to Inverter

| Explanation | | Operator Display |
|--|---|---|
| Enable the set- tings for con- stants n001 to n179. | Press DSPL to lit PRGM. Press ENTER to display the set value. Change the set value to 4 by pressing the ☑ or ☒ key. Press ENTER. | GGG / (May be a different constant No.) / (Lit) (May be a different set value.) // (Flashes) // (Lit for one second.) ↓ GGG / (The constant No. is displayed.) |

| E | xplanation | Operator Display |
|--|---|--|
| Execute write-in (COPY) using the Constant Copy Function Selection (n176). | Change the constant No. to n176 by pressing the ⊙ or key. Press ENTER to display the set value. Change the set value to CPy by pressing the or key. Press ENTER. | n 176 rdy (Lit) EPy (Lit) (Flashes while executing the copy.) End (End is displayed after the |
| | Press DSPL or ENTER. | copy has been completed.) 75 (The constant No. is displayed.) |

A setting range check and matching check for the written constants are executed after the constants are written from the Digital Operator to the Inverter. If a constant error is found, the written constants are discarded and the constants stored before writing are restored.

When a setting range error is found, the constant No. where an error occurs is indicated by flashing.

□ VERIFY Function

This function compares the constants stored in the Digital Operator with the constant in the Inverter. Verification is possible only for the Inverters with same product series, power supply specifications, and control mode (V/f control or vector control).

When the constants stored in the Digital Operator are the same as those in the Inverter, vFy will flash, and then End will be displayed.

When the constants are not the same, the unmatched constant No. will be displayed.

Constants added with software version upgrades will be displayed when VERIFY is performed for VS-606V7 Inverters without the additional constants and VS-606V7 Inverters with the additional constants.

The constants added with each software version upgrade are shown in the following table.

| Software No. | Additional Constants |
|-----------------------|--|
| VSP010015 or later | n175 |
| VSP010020 or later | n077, n078, n079, n115, n116 |
| VSP010024 or later | n040, n041, n042, n043, n044, n064, n101, n102, n117, n118, n119, n166, n167, n168, n169, n173, n174 |
| VSP010028 or later | n045, n046, n047, n048, n049, n170, n171, n172 |

Refer to page 200 (Constants List) for details.

Example: Comparing Constants Stored in EEPROM in Operator with Constants in Inverter

| Explanation | | Operator Display |
|--|---|---|
| Enable the set- tings for con- stants n001 to n179. | Press DSPL to lit PRGM Press ENTER to display the set value. Change the set value to 4 by pressing the ② or ③ key. Press ENTER. | mcc ; (May be a different constant No.) ; (Lit) (May be a different set value.) y (Flashes) y (Lit for one second.) ↓ ncc ; (The constant No. is displayed.) |

| Explanation | | Operator Display |
|---|---|--|
| Execute VERIFY by Constant Copy Function Selection (n176). | Change the constant No. to n176 by pressing the ⊠ or ⊠ key. | n 176 |
| ocicciion (m70). | Press ENTER to display the set value. | ୮୯୫ (Lit) |
| | Change the set value to vFy by pressing the ⋈ or ⋈ key. | ਯੂਵਯੂ (Lit) |
| | • Press ENTER. | 다면 나는 |
| Display the unmatched constant No. | | ┌┌ / (Flashes) (When n011 is different.) |
| Display the constant value in the Inverter. | • Press ENTER. | <i>⊱∷∷</i> (Flashes) |
| Display the con- stant value in the Digital Operator. | • Press ENTER. | ടുള (Flashes) |
| Continue the execution of VERIFY. | Press the ⊠ key. | ੁੂੁੁ⊏ੁੂ (Flashes while executing the verification) |
| | | End (End is displayed when the verification has been completed.) |
| | • Press DSPL or ENTER | ァ いる (The constant No. is displayed.) |

While a constant No. that is not the same is displayed or a constant value is displayed, press STOP/RESET to interrupt the execution of the verification. End will be displayed. Press DSPL or ENTER to return to the constant No. display.


□ Inverter Capacity Display

The voltage class and maximum applicable motor capacity for which constants are stored in the Digital Operator are displayed.

Example: Displaying Voltage Class and Maximum Applicable Motor Capacity for Inverter whose Constants are in EEPROM in Operator

| Explanation | | Operator Display |
|---|---|---|
| Enable the setting for constants n001 to n179. | Press DSPL to lit PRGM Press ENTER to display the set value. Change the set value to 4 by pressing the ⋈ or ⋈ key. Press ENTER. | (May be a different constant No.) ; (Lit) (May be a different set value.) ; (Flashes) ; (Lit for one second.) ↓ □□□; (The constant No. is displayed.) |
| Execute Inverter Capacity Display (vA) using the Constant Copy Function Selection (n176). | Change the constant No. to n176 by pressing the ⊙ or ⊙ key. Press ENTER to display the set value. Change the set value to vA. | n 175 rdy (Lit) |
| | Change the set value to vA by pressing the ⊙ or ⋈ key. Press ENTER. Press DSPL or ENTER. | UR (Lit) 20.7 (Lit) (For 20P7)* 7.175 (The constant No. is displayed.) |

* The following figure shows the Inverter Capacity Display.

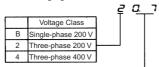

| | Max. Applicable Motor Capacity |
|-----|--------------------------------|
| 0.1 | 0.1 kW |
| 0.2 | 0.2 kW |
| 0.4 | 0.4 kW |
| 0.7 | 0.75 kW |
| 1.5 | 1.5 kW |
| 2.2 | 2.2 kW |
| 3.0 | 3.0 kW |
| 3.7 | 3.7 kW |
| 5.5 | 5.5 kW |
| 7.5 | 7.5 kW |
| | |

☐ Software No. Display

The software number of the Inverter for which constants are stored in the Digital Operator is displayed.

Example: Displaying Software No. of Inverter for which Constants are Stored in EEPROM in Digital Operator

| Explanation | | Operator Display |
|---|---|--|
| Enable the set- ting for con- stants n001 to n179. | Press DSPL to lit PRGM. Press ENTER to display the set value. Change the set value to 4 by pressing the ② or ☑ key. Press ENTER. | (May be a different constant No.) / (Lit) (May be a different set value.) / (Flashes) / (Lit for one second.) |
| Execute Soft- ware No. Display (Sno)* using the Constant Copy Function Selec- tion (n176). | Change the constant No. to n176 by pressing the ⋈ or ⋈ key. Press ENTER to display the set value. Change the set value to Sno by pressing the ⋈ or ⋈ key. | л 175 г ду (Lit) Sno (Lit) |
| | • Press ENTER. | [대명 / 글 (Lit) (Software version: VSP010013) |
| | • Press DSPL or ENTER. | (The constant No. is displayed.) |

^{*} Displays the lower 4 digits of the software version.

□ Display List

| Operator Display | Description | Corrective Action |
|---------------------|---|-------------------|
| ~d4 | Lit: Constant copy function selection enabled. | ÷ |
| rEd | Lit: READ selected. Flashes: READ under execution. | - |
| CPY | Lit: Writing (COPY) selected. Flashes: Writing (COPY) under execution. | - |
| uFY | Lit: VERIFY selected. Flashes: VERIFY under execution. | ÷ |

| Operator Display | Description | Corrective Action |
|---------------------|---|---|
| ъR | Lit: Inverter capacity display selected. | - |
| 500 | Lit: Software No. display selected. | - |
| End | Lit: READ, COPY (writing), VERIFY completed. | - |
| PrE | Flashes: Attempt made to execute READ while Constant Read Selection Prohibit (n177) is set to 0. | Confirm the necessity to execute READ, then set Constant Read Selection Prohibit (n177) to 1 to execute READ. |
| rdE | Flashes: The constant could not be read prop- erly for READ operation. Or, a main circuit low voltage is detected during READ operation. | Confirm that the main circuit power supply voltage is correct, then re-execute READ. |
| CSE | Flashes: A checksum error occurred in the constant data stored in the Digital Operator. | The constants stored in the Digital Operator cannot be used. Re-execute READ to store the constants in the Digital Operator. |
| dP5 | Flashes: The password for the connected Inverter and that for the constant data stored in the Digital Operator disagree. Example: Writing (COPY) from VS-606V7 to VS mini J7 | Check if the Inverters are the same product series. |
| ndſ | Flashes: No constant data stored in the Digital Operator. | Execute READ. |
| CPE | Flashes: Attempt made to execute writing (COPY) or VERIFY between different voltage classes or different control modes. | Check each voltage class and control mode. |
| CAE | Flashes: A main circuit low voltage was detected during writing (COPY) operation. | Confirm that the main circuit power supply voltage is correct, then re-execute writing (COPY). |
| F04 | Lit: A checksum error occurred in the constant data stored in the Inverter. | Initialize the constants. If an error occurs again, replace the Inverter due to a failure of constant memory element (EEPROM) in the Inverter. |
| JAE | Flashes: Attempt made to execute COPY or VERIFY between different Inverters or different capacities. | Press ENTER to continue the execution of COPY or VERIFY. Press STOP to interrupt the execution of COPY or VERIFY. |
| ,FE | Flashes: A communications error occurred be- tween the Inverter and the Digital Op- erator. | Check the connection between the Inverter and Digital Operator. If a communications error occurs during the READ operation or writing (COPY) operation, always re-execute the READ or COPY. |

Note: While rEd, CPy, or vFy is flashing, key input on the Digital Operator is disabled. While rEd, CPy and vFy are not flashing, pressing DSPL or ENTER redisplays the constant No.

Unit Selection for Frequency Reference Setting/ Display

Constants and Monitor Displays for Which Selection of Unit Function is Valid

| Item | Contents | |
|-------------------------------|---|--|
| Frequency reference constants | Frequency References 1 to 8 (Constants n024 to n031) | |
| ence constants | Jog Frequency Reference (Constant n032) | |
| | Frequency References 9 to 16 (Constants n120 to n127) | |
| Monitor display | Frequency Reference Display (FREF) | |
| | Output Frequency Display (FOUT) | |
| | Frequency Reference Display (U-01) | |
| | Output Frequency Display (U-02) | |

Setting/Displaying Unit Selection for Frequency Reference (n035)

The frequency reference, output frequency, and the numeric data of frequency reference constants can be displayed in %, min⁻¹, or m/min according to the set value of constant n035.


| Constant No. | Constant Name | Description | Factory Setting |
|-----------------|---|--|--------------------|
| n035 | Setting/Display- ing Unit Selec- tion for Frequency Ref- erence | 0: Units of 0.01 Hz (less than 100 Hz) 0.1 Hz (100 Hz and more) 1: Units of 0.1 % 2 to 39: Units of min ⁻¹ (set the number of motor poles) 40 to 3999: Any unit | 0 |

n035 Settings

| Setting | Description |
|---------------|---|
| 0 | Setting unit: 0.01 Hz (less than 100 Hz), 0.1 Hz (100 Hz and more) Setting range Min {Fmax (n011) × Frequency Reference Lower Limit (n034) to Fmax (n011) × Frequency Reference Upper Limit (n033), 400 Hz} |
| 1 | Setting in units of 0.1%: 100.0%/Fmax (n011) Setting range Min. {Frequency Reference Lower Limit (n034) to Frequency Reference Upper Limit (n033), (400 Hz + Fmax. (n011)) 100%} Max. Upper Limit Value: Fmax. (n011) × Set value (%) ≤ 400 Hz |
| 2 to 39 | Setting in units of 1 min ⁻¹ : min ⁻¹ =120 × Frequency reference (Hz) + n035 (Set the number of motor poles in n035) Setting range Min. {120 × (Fmax (n011) Frequency Reference Lower Limit (n034) + n035 to 120 × (Fmax (n011) × Frequency Reference Upper Limit (n033)) + n035, 400 Hz × 120 + P, 9999 min ⁻¹ Max. Upper Limit Value: N × P + 120 ≤ 400 Hz |
| 40 to 3999 | Set the display value at 100% of frequency reference (set value of Fmax (n011)) at 1st to 4th digits of n035. In the 4th digit of n035, set the position of decimal point. In the 1st to 3rd digits of n035, set a 3-digit figure excluding the decimal point. 4th digit Position of decimal point 0 |

Note: 1. The frequency reference constants and monitor display data for which this selection of the unit is valid are stored in the Inverter in units of Hz.

The units are converted as shown below:

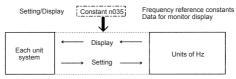

2. The upper limit for each unit is the value with decimal places below the significant digits truncated.

Example: Where the upper limit for the unit Hz is as follows for 60.00 Hz and n035 = 39:

 $120 \times 60.00 \text{ Hz} \div 39 = 184.6$, thus 184 min^{-1} is displayed as the upper limit

For displays other than for the upper limit, the decimal places below the significant digits are rounded off.

When verifying constants for the copy function, frequency reference constants (units of Hz) are used.

Selecting Processing for Frequency Reference Loss (n064)

Use this setting to select the processing performed if the level of the frequency reference signal from the control circuit terminals suddenly drops.

| n064 Setting | Description |
|-----------------|---|
| 0 | Processing for frequency reference loss disabled. |
| 1* | Processing for frequency reference loss enabled. |

* Detected in REMOTE mode (drive mode) when analog reference (except potentiometer on Digital Operator) or pulse train reference is selected in the Frequency Reference Selection (n004).

Processing Method When 1 is Selected

If the level of the frequency reference signal drops by 90 % within 400 ms, operation continues at 80 % of the signal level before the level drop.

■ Input/Output Open-phase Detection

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|---|-------|--|--------------------|
| n166 | Input Open-phase Detection Level | 1 % | 0 to 100 %*1 400.0 V/100 % (200 V Class) 800.0 V/100 % (400 V Class) | 0 % |
| n167 | Input Open-phase Detection Time | 1 s | 0 to 255 s*2 | 0 s |
| n168 | Output Open-phase Detection Level | 1 % | 0 to 100 %*1 Inverter's rated output current/100 % | 0 % |
| n169 | Output Open-phase Detection Time | 0.1 s | 0.0 to 2.0 s*2 | 0.0 s |

^{* 1.} Not detected when set to 0 %.

The recommended settings for input open-phase detection are n166=7 % and n167=10 s.

(Open-phase cannot be detected correctly depending on the load status.)


The recommended settings for output open-phase detection are n168=5 % and n169=0.2 s.

^{* 2.} Not detected when set to 0.0 s.

■ Undertorque Detection

An alarm signal can be output to a multi-function output terminal (MA, MB, P1 or P2) when the load on the machine side suddenly becomes lighter (i.e., when an undertorque occurs).

To output an undertorque detection signal, set the output terminal function selection in n057, n058, or n059 to 8 (undertorque detected, NO contact) or 9 (undertorque detected, NC contact).

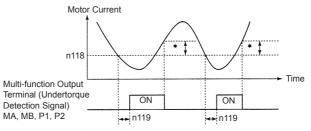

* Undertorque detection release width (hysteresis) is set at approx. 5 % of the Inverter's rated current.

Undertorque Detection Function Selection (n177)

| Setting | Description | | |
|---------|--|--|--|
| 0 | Undertorque detection not provided. | | |
| 1 | Detected during constant-speed running. Operation continues after detection. | | |
| 2 | Detected during constant-speed running. Operation stops. | | |
| 3 | Detected during running. Operation continues after detection. | | |
| 4 | Detected during running. Operation stops. | | |

- 1. To detect undertorques during acceleration, set to 3 or 4.
- 2. To continue operation after undertorque detection, set to 1 or 3. During detection, the operation displays the "UL3" alarm (flashing).
- To halt the Inverter by a fault at undertorque detection, set to 2 or 4. At detection, the Operation displays the "UL3" fault (continuously lit).

Undertorque Detection Level (n118)

Sets the undertorque detection current level in units of 1 %. (Inverter rated current=100 %) When detected by torque is selected, motor rated torque becomes 100 %.

Factory setting=10 %

Undertorque Detection Time (n119)

If the time for which the motor current is less than the undertorque detection level (n118) is longer than the undertorque detection time (n119), the undertorque detection function operates.

Factory setting=0.1 s

Overtorque/Undertorque Detection Function Selection 2 (n097)

When vector control mode is selected, it is possible to select whether overtorque/undertorque detection is performed by output current or output torque.

When V/f control mode is selected, the n097 setting becomes invalid, and overtorque/undertorque is detected by output current.

| Setting | Description | | | |
|---------|--|--|--|--|
| 0 | Overtorque/undertorque detected by output torque. | | | |
| 1 | Overtorque/undertorque detected by output current. | | | |

Using Inverter for Elevating Machines

⚠ CAUTION

If using an Inverter with an elevator, take safety measures on the elevator to prevent the elevator from dropping.

Failure to observe this caution may result in injury.

When using the VS-606V7 for elevating machines such as elevators and cranes, make sure that the brake holds and observe the following precautions for safe operation.

☐ Brake ON/OFF Sequence

 For the holding brake's ON/OFF sequence, use the following Inverter output signals according to the set control mode.



Do not use "Running (Set value: 1)" for the holding brake's ON/OFF interlock signal.


| Cantag | Brake ON/OFF Signals | | Brake ON/OFF Level Adjustment | |
|------------------------------|-----------------------|------------|----------------------------------|------------------------------|
| Control Mode | Signal Name | Constant*2 | Signal Name | Constant |
| V/f Control*1 (n002=0) | Frequency detection 1 | n058=4 | Frequency detection level | n095=2.50 Hz to 4.00 Hz*3 |

- * 1. For Vector control (n002=1), use the same brake ON/OFF sequence with the same signals as for V/f control.
- * 2. Shows the setting when a multi-function photocoupler output terminal (P1-PC) is used.
- * 3. Usually, make the following settings for the frequency detection (n095):


 For V/f control: Motor rated slip frequency +1 Hz

 For Vector control: 2.5 Hz to 3.0 Hz

If the set value is too low, the motor torque is insufficient and the load may slip when the brake is applied. Be sure to set n095 to a value larger than that of the Minimum Output Frequency (n016) and larger than that of the braker releasing width shown in the following figure. If the set value is too large, the motor may not run smoothly when it starts running.

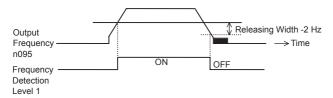

Sequence Circuit Configuration and Timing Chart Examples

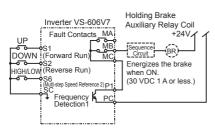


For the AC sequence circuit, connect the signal between P1 and PC to the sequence circuit with a relay.

Design the sequence so that the holding brake contact is open when the sequence operation conditions are satisfied and the contact between P1 and PC is closed (ON).

Make sure that the holding brake contact is closed when the emergency stop signal or Inverter fault contact output signal is ON

· For V/f Control and Vector Control

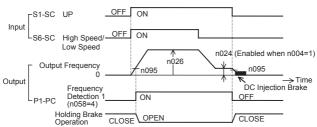

| • For a variable speed operation by an analog signal, set the Frequency Reference Selection (n004) to a value from 2 to 4. |
|--|
| Stall Prevention During Deceleration |
| TC C I I I C C C I I |

NOTE

П

If connecting a braking resistor to discharge regenerative energy, be sure to set the stall prevention during deceleration (n092) to 1.

If the stall prevention during deceleration (n092) is set to the factory setting 0 (Enabled), the motor may not stop within the specified decelerating time.

The stall prevention during acceleration (n093) and the stall prevention level during running (n094) should be set to their factory settings to enable these functions.

☐ Settings for V/f Pattern and Motor Constants

To set the control mode and the V/f pattern, refer to the instruction manual and the document "Motor Constant Settings for VS-606V7 Vector Control (Document No. F-07-V7-01)". If the Vector control method is used, also set the motor constants.

☐ Momentary Power Loss Restart and Fault Restart

Do not use the momentary power loss restart and fault restart functions in applications for elevating machines. Make sure that n081=0 and n082=0. If these functions are used, the motor coasts to a stop with the brake contact open when a momentary power loss or fault occurs during operation, possibly resulting in serious accidents.

□ I/O Open-phase Protection and Overtorque Detection

The I/O open-phase protection is only available for 5.5 kW and 7.5 kW models.

To prevent the machine from falling when the motor is open-phase or similar situation, enable the I/O open-phase protection (n166 to n169) and the overtorque detection (n096 to n099). At the factory, these constants are set so that these functions are disabled.

Also, take safety measures such as protection against falls on the machine.

□ Carrier Frequency

Set the carrier frequency selection (n080) to 5 Hz or more (n080: 2 to 4) to secure the motor torque even if an overcurrent occurs (the current is limited).

□ External Baseblock Signal

If the external baseblock command (settings 12 and 13 of n050 to n056) is input while the motor is running, the motor will immediately coast to a stop. Do not input the external baseblock command while the motor is running unless necessary.

Make sure that the holding brake operates when using the external base block command for an emergency stop or interlock to start the Inverter. If the external baseblock command is input and immediately reset, the Inverter does not output voltage during the minimum baseblock time, which factory setting is 0.5 to 0.7 seconds depending on the Inverter capacity. Do not use the external baseblock command in an application where the motor is frequency started and stopped.

☐ Acceleration/Deceleration Time

If the delay time for the holding brake's mechanical operation is not taken into consideration and the acceleration/deceleration time on the Inverter side is set to a time that is too short, an overcurrent or wear on the brakes may occur at starting or the load will slip at stopping because the holding brake does not operate on time. If so, use the S-curve characteristic function or lengthen the acceleration/deceleration time to tune the timing for the holding brake.

□ Contactor on the Inverter's Output-side

Do not install a contactor between the Inverter and the motor.

If a contactor must be installed because of local electrical codes or regulations or to operate motors with an Inverter, excluding emergencies, open or close the contactor only where the holding brake is fully closed and the Inverter is in baseblock status with the baseblock signal ON.

If the contactor is opened or closed while the Inverter is controlling the motor or DC injection braking, surge voltage or a current from the motor by full-voltage starting may cause an Inverter fault.

When a contactor is installed between the Inverter and the motor, enable the I/O open-phase protection (n166 to n169).

For more information on using Inverters exclusively for elevators or cranes, contact your Yaskawa representatives or the nearest Yaskawa sales office.

■ Using MECHATROLINK-II Communications

MECHATROLINK-II can be used with the SI-T/V7 option unit.

For details, refer to VS-606V7 OPTION UNIT MECHATROLINK COM-MUNICATIONS INTERFACE UNIT INSTRUCTIONS (TOBPC73060003).

The following constants are used for communications error settings for SI-T/V7.

| Constant No. | Name | Unit | Setting Range | Factory Setting |
|-----------------|--|------|------------------|--------------------|
| n063 | Watchdog Error Operation Selection (For SI-T/V7) | 1 | 0 to 4 | 0 |
| n114 | Number of Transmission Cycle Error Detection (For SI-T/V7) | 1 | 2 to 10 | 2 |

| n063 Setting | Description | | | |
|-----------------|---|--|--|--|
| 0 | Coast to a stop | | | |
| 1 | Deceleration to a stop using Deceleration Time 1 in n020. | | | |
| 2 | Deceleration to a stop using Deceleration Time 2 in n022. | | | |
| 3 | Continuous operation (Alarm) | | | |
| 4 | Continuous operation (Alarm, no fault) | | | |

7. Maintenance and Inspection

MARNING

- Never touch high-voltage terminals on the Inverter.
 Failure to observe this warning may result in an electrical shock.
- Disconnect all power before performing maintenance or inspection, and then wait at least one minute after the power supply is disconnected. Confirm that all indicators are OFF before proceeding. If the indicators are not OFF, the capacitors are still charged and can be dangerous.
- Do not perform withstand voltage test on any part of the VS-606V7.
 - The Inverter is an electronic device that uses semiconductors, and is thus vulnerable to high voltage.
- Only authorized personnel should be permitted to perform maintenance, inspection, or parts replacement.

(Remove all metal objects (watches, bracelets, etc.) before starting work.)

(Use tools which are insulated against electrical shock.)

Failure to observe these warnings may result in an electric shock

ACAUTION

- The control PCB employs CMOS ICs.
 Do not touch the CMOS elements.
 They are easily damaged by static electricity.
- Do not connect or disconnect wires, connectors, or the cooling fan while power is applied to the circuit.
 Failure to observe this caution may result in injury.

■ Periodic Inspection

Periodically inspect the Inverter as described in the following table to prevent accidents and to ensure high performance with high reliability.

| Location to Check | Check for | Solution |
|---|---|--|
| Terminals, Inverter mounting screws, etc. | Improper seating or loose connections in hardware. | Properly seat and tighten hardware. |
| Heatsinks | Buildup of dust, dirt, and debris | Blow with dry compressed air at a pressure of 39.2×10^4 to 58.8×10^4 Pa (4 to 6 kg/cm ²). |
| Printed circuit boards | Accumulation of conductive material or oil mist | Blow with dry compressed air at a pressure of 39.2×10^4 to 58.8×10^4 Pa (4 to 6 kg/cm²). If dust or oil cannot be removed, replace the Inverter. |
| Power elements and smoothing capacitor | Abnormal odor or discoloration | Replace the Inverter. |
| Cooling fan | Abnormal noise or vibration Cumulative operation time exceeding 20,000 hours | Replace the cooling fan. |

■ Part Replacement

Inverter's maintenance periods are given below. Keep them as guidelines.

Part Replacement Guidelines

| Part | Standard Replacement Period | Replacement Method |
|-----------------------------|-----------------------------------|--|
| Cooling fan | 2 to 3 years | Replace with new part. |
| Smoothing capacitor | 5 years | Replace the Inverter unit with new one.(Determine need by inspection.) |
| Breaker relays | - | Replace the Inverter unit with new one.(Determine need by inspection.) |
| Fuses | 10 years | Replace the Inverter unit with new one.(Determine need by inspection.) |
| Aluminum capacitors on PCBs | 5 years | Replace the Inverter unit with new one.(Determine need by inspection.) |

Note: Usage conditions are as follows:

· Ambient temperature: Yearly average of 30°C

· Load factor: 80% max.

• Operating rate: 12 hours max. per day

□ Replacement of Cooling Fan


Inverters with Width of 68 mm, 140 mm, 170 mm, or 180 mm

1. Removal

- Press the right and left catches on the fan cover in direction 1, and then pull them in direction 2 to remove the fan cover from the Inverter
- Pull the wiring in direction 3 from the fan cover rear face, and remove the protective tube and connector
- Open the left and right sides of the fan cover to remove the cooling fan from the cover.

2. Mounting

- Mount the cooling fan on the fan cover. The arrow mark to indicate the airflow direction of the cooling fan must be on the opposite side to the cover.
- Connect the connector and mount the protective tube firmly. Mount the connector joint section on the fan cover rear face
- Mount the fan cover on the Inverter. Always mount the right and left catches on the fan cover on the heatsinks.

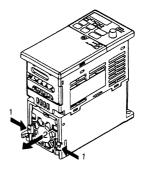



Airflow Direction


Inverters with Width of 108 mm

1. Removal

- Remove the front cover and terminal cover, and then remove the cooling fan connector (CN10).
- Press the right and left catches on the fan cover in direction 1, and pull the fan cover in direction 2 to remove it from the Inverter. Pull out the wiring from the cable lead-in hole at the bottom of the plastic case.
- Open the right and left sides of the fan cover to remove the cover from the cooling fan.

2. Mounting

- Mount the cooling fan on the fan cover. The arrow mark to indicate the airflow direction must be opposite to the cover.
- Mount the fan cover on the Inverter. Always mount the right and left catches on the fan cover on the heatsinks. Thread in the wiring from the cable lead-in hole at the bottom of the plastic case to the inside of the Inverter.
- Connect the wiring to the cooling fan connector (CN10) and mount the front cover and the terminal cover.

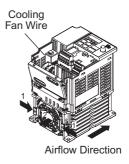

Protective and Diagnostic Functions

This section describes the alarm and fault displays, the fault conditions, and the corrective actions to be taken if the VS-606V7 malfunctions

Inverter alarms are classified into alarm display and fault display.

Alarm display: When a minor fault occurs in the Inverter, the Digital Operator flashes the display. In this case, the operation is continued, and restored automatically as soon as the cause is removed. Multi-function output can output the minor fault status to external devices

Fault display: When a major fault occurs in the Inverter, the protective function operates, and the Digital Operator lights the display and shuts off the output to stop the Inverter. The fault can be output as a fault output to the external devices by multi-function output.

To reset the fault, turn ON the reset signal with the run command OFF or cycle the power after taking the corrective action.

* Selecting "always ON" mode at fan operation selection, the power must be cycled to release the alarm display.

□ Corrective Actions of Models with Blank Cover

- 1. Input fault reset or cycle the power supply OFF and ON.
- 2. When a fault cannot be corrected:
 - Turn the power supply OFF and check the wiring and external circuit (sequence).
 - (2) Turn the power supply OFF and replace the blank cover with the Digital Operator to display faults. The faults are displayed after turning the power ON.

☐ Corrective Actions of Models with Digital Operator



Alarm Display

Alarm Displays and Meaning

| Alarm Display | | Inverter Status | Description | Causes and Corrective Actions |
|-------------------------|----------------------------|---|---|---|
| Digital Operator | RUN (Green) ALARM (Red) | | | |
| <i>니</i> Flashing | | Detected as an alarm only. Fault contact output is not activated. | UV (Main circuit low voltage) Main circuit DC voltage dropped below the low-voltage detection level while the Inverter output is OFF. 200 V: Main circuit DC voltage drops below ap- prox. 200 V (160 V for single-phase). 400 V: Main circuit DC voltage dropped below age dropped below GContro Supply fault) ontrol power supply fault is detected while the inverter output is OFF. | Check the following: Power supply voltage Main circuit power supply connection. Terminal wews: Loose? Voltage: Confirm voltage (DC voltage) where the reminals "+1" and "-" If there is no problem, the Inverter may be faulty. |
| ටට Flashing | 3 9 € | | OV (Main circuit over- voltage) Main circuit DC voltage ex- ceeded the overvoltage de- tection level while the Inverter output is OFF. Detection level: 200 V: approx 410 V or more 400 V: approx 820 V or more | Check the following: Power supply voltage. Monitor value Confirm voltage (DC voltage) between terminals "+1" and "-". If there is no problem, the Inverter may be faulty. |
| □H Flashing | | | OH (Heatsink overheat) Intake air temperature in- creased while the Inverter output is OFF. | Check the following: Intake air temperature. There is no thermal source around the Inverter or that oil adhering to the fan has deteriorated the cooling capability. Fan is not clogged. Any foreign matters such as water has entered in the Inverter and adhered. |
| <i>[月</i> し Flashing | | | CAL (MEMOBUS communications waiting) Correct data has not been received from the PLC when the constants n003 (Run Command Selection) is 2 or n004 (Frequency Reference Selection) is 6, and power is turned ON. | Check the following: Communications devices and transmission signals. PLC is not faulty. Transmission cable is connected properly. Wilring is made properly. Any loose terminal screws do not result in improper contact. |

| Alarm Display | | Inverter Status | Description | Causes and Corrective Actions |
|---------------------|---|--|--|---|
| Digital Operator | RUN (Green) ALARM (Red) | | | |
| o₽□ (Flashing) | ⊕ • • • • • • • • • • • • • • • • • • • | Detected as an alarm only. Fault contact out-put is not activated. | OP □ (Constant setting error when constants are set through MEMO-BUS communications) OP1: Two or more values are set for multi-function input selection. (constants n050 to n056) OP2: Relationship among V/f constants is n010 correct. (constants n011, n013, n014, n016) OP3: Setting value of motor rect. (constants n011, n013, n014, n016) OP3: Setting value of motor rate durrent exceeds 150% of Inverter Rated Current. (constant n036) OP4: Upper/lower limit of frequency reference is reversed. (constants n033, n034) OP5: Relationship among jump frequency 1, 2 and 3 is not correct. (constants n083 to n085) OP6: Multi-function Analog Inputs (n077) and PID Control Selection (n128) are both set to a value other than 0. OP9: The setting of the Inverter capacity does not coincide with the Inverter. (Contact your Yaskawa representative.) | Check the setting values. |
| 리크 Flashing | - \ \-\- | | OL3 (Overtorque detection) Motor current exceeded the preset value in constant n098. Overtorque detection level was exceeded because of increased leak current due to excessively long wiring. | Reduce the load, and increase the acceleration/ deceleration time. Refer to the paragraph of DiReducing Motor Noise or Leakage Current Using Carrier Frequency Selection (n080) on page 83. Check the wiring (increase of current caused by are shortcircuit, etc.) |
| 5Er Flashing | | | SER (Sequence error) Inverter received LOCAL/RE- MOTE command or commu- nications/control circuit termi- nal changing signals from the multi-function terminal while the Inverter output is ON. | Check the following: NO/NC contact selection (constant). Wiring is made properly. Signal is not input from the PLC. |

| Alarr | Alarm Display | | Description | Causes and Corrective Actions |
|-------------------------|----------------------------|--|--|--|
| Digital Operator | RUN (Green) ALARM (Red) | Status | | Corrective Actions |
| ULJ Flashing | | Detected as an alarm only. Fault contact out- put is not ac- tivated. | UL3 (Undertorque detection) When V/f mode is selected: The Inverter's output current was less than the under- torque detection level (n118). When vector mode is select- ed: The output current or out- put torque was less than the detection level (n097 or n118). Operation when undertorque is detected will be determined by the setting in n117. | Check the setting in n118. Check the operating conditions, and remove the cause. |
| 55 Flashing | | | BB (External baseblock) BASEBLOCK command at multi-function terminal is ON and the Inverter output is OFF (motor coasting). Condi- tion is cleared when input command is removed. | Check the following: NO/NC contact selection (constant). Wiring is made properly. Signal is not input from the PLC. |
| EF Flashing | | | EF (Simultaneous FWD/ REV RUN commands) When FWD and REV RUN commands are simultaneous- ly input for over 500 ms, the inverter stops according to constant n005. | Check the following: NO/NC contact selection (constant). Wiring is made properly. Signal is not input from the PLC. |
| 5CP Flashing | or ∰ e | | STP (Operator function stop) Was pressed during running via a control circuit terminal FWD/REV command, or by a RUN command from communications. The Inverter stops according to constant n005. STP (Emergency stop) Inverter received emergency stop alarm signal. Inverter stops according to constant n005. | Turn OFF FWD/REV command of control circuit terminals. Check the following: NO/NC contact selection (constant). Wiring is made property. Signal is not input from the PLC. |
| <i>FR</i> ⊢ Flashing | | | FAN (Cooling fan fault) Cooling fan is locked. | Check the following: Cooling fan connection Adhesion of foreign matters does not interrupt the rotation. Fan is mounted correctly. Relay connector is connected properly after replacement of the fan. |

| Alarr | n Display | Inverter Status | Description | Causes and Corrective Actions |
|------------------------|----------------------------|--|--|--|
| Digital Operator | RUN (Green) ALARM (Red) | olalas | | Corrective Actions |
| [E Flashing | or ±@∉ | Detected as an alarm only. Fault contact out- put is not ac- tivated. | CE (MEMOBUS) communications fault | Check the following: Communication devices or communication signals. PLC is not faulty. Transmission cable is connected properly. connected derminal screws do not result in improper contact. Wiring is made properly. |
| FLL Flashing | | | FBL (PID feedback loss detection) PID feedback value dropped below the detection level (n137). When PID feedback loss is detected, the Inverter operates according to the n136 setting. | Check the mechanical system and correct the cause, or increase the value of n137. |
| <i>bU5</i> Flashing | | | Option card communica- tions fault. Communication fault has occurred the mode where the communications option card was used and a run command or fre- quency reference was input from the PLC. Communication fault has occurred in a mode that RUN command and fre- quency reference are set from the communication option card. | Check the following: Communications devices or communications signals. PLC is not faulty. Transmission cable is more developed poperty. Any local perminal screws do not result in improper contact. Wiring is made property. Communication option card is inserted correctly. |
| aH글 Flashing | | | OH3 (Inverter overheat alarm) The Inverter overheat alarm (OH3) was input from a multi- function input terminal (S1 and S7). | Clear the multi-function input terminal's Inverter overheat alert input. Check that the wiring is made properly. Check that a signal is not input from the PLC. |

Fault Display

Fault Displays and Meanings

| Fault Display | | Inverter Status | Description | Causes and Corrective |
|---------------------|----------------------------|---|--|--|
| Digital Operator | RUN (Green) ALARM (Red) | Status | | , totolio |
| οΣ | • \$ | Protective Operation Output is turned OFF and motor coasts to a stop. | OC (Overcurrent) Inverter output current mo- mentarily exceeded approx. 250% of rated current. | Operation is restored, if no fault is found, after confirming the following: Short circuit or grounding at Inverter output side Excessive load GD ² Extremely rapid Acceleration/Deceleration Time (constants no19 to no22) Special motor used Starting motor during coasting Motor of a capacity greater than the Inverter rating has been started. Magnetic contactor opened/closed at the Inverter output side Leak current increased because of excessive long wiring Note) Before turning the power OM again, make sure that oshort-circuit or ground fault occurs at the Inverter output. |
| GF | | | GF (Grounding) *1*2 Grounding current exceeded approx. 50% of Inverter rated output current at the Inverter output side. | Inverter output grounded. U Check the cause, and restore the operation. Note) Before turning the power ON again, make sure that no short-circuit or ground fault occurs at the Inverter output. |
| SE | | | SC (Load shortcircuit) *1 Inverter output or load short-circuited. | Inverter output shortcircuited or grounded. U Check the cause, and restore the operation. |

- * 1. Indicates that an Inverter of 5.5 kW and 7.5 kW (200-V and 400-V classes) is attached.
- * 2. The ground fault here is one which occurs in the motor wiring while the motor is running. A ground fault may not be detected in the following cases.
 - A ground fault with low resistance which occurs in motor cables or terminals.
 A ground fault occurs when the power is turned ON.

| Fau | Fault Display | | Description | Causes and Corrective |
|---------------------|----------------------------|---|---|--|
| Digital Operator | RUN (Green) ALARM (Red) | Status | | Actions |
| ου | | Protective Operation Output is turned OFF and motor coasts to a stop. | OV (Main circuit overvoltage) Main circuit DC voltage level exceeded the overvoltage detection level while the Inverter was running. Detection level (DC voltage: Voltage between terminals "1" and "1". 200 V: Approx. 410 V or more 400 V: Approx. 820 V or more | Regenerative energy is large. The setting of deceleration time is too short. Negative load (e.g., elevator) is excessive at lowering. Confirm that the load does not have any problem. Input voltage is errone-ous. Confirm that DC voltage exceeding the left value is not input. |
| Uu I | ❖ | | UV1 (Main circuit low voltage) Main circuit DC voltage dropped below the low-voltage dropped below the low-voltage detection level while the Inverter output is ON. 200 V: Stops at main circuit DC voltage below approx. 200 V (160 V for single-phase) 400 V: Stops at main circuit DC voltage below approx. 400 V. | Check the following: Power supply voltage Main dirouit power supply connections Terminal sews: Loose? Main sews: Loose? Main sews: Loose? Confirm voltage (DC voltage) between terminals "+1" and "-". If there is no problem, the Inverter may be faulty. |
| U∪Z | | | UV2 (Control power sup- ply fault) Inverter detected voltage fault of control power supply dur- ing running. | Replace the Inverter. |

| | | I | | |
|---------------------|----------------------------|---|---|---|
| Fau | t Display | Inverter Status | Description | Causes and Corrective Actions |
| Digital Operator | RUN (Green) ALARM (Red) | | | |
| οН | • | Protective Operation Output is turned OFF and motor coasts to a stop. | OH (Heatsink overheat, Inrush resistor overheat) • Temperature increased because of inverter overload operation or intake air temperature rise. • Inrush resistor has overheated. | Excessive load Improper V/f pattern setting Insufficient acceleration time if the fault occurs during acceleration Intake air temperature exceeding 50°C Cooling fan stops. Cooling fan stops. Cooling fan stops. Cooling fan deteriorates its cooling capability or stops. Fin is clogged. There is a thermal source around the Inverter Check the following: Load size V/f pattern setting (constants not11 to not17) Intake air temperature. Cooling fan is turning while the Inverter is running. Any foreign matters adhere to the fan and that they do not interrupt the rotation. Fan is mounted properly. There is not a thermal source around the Inverter. Replace the Inverter if recommended corrective actions do not result in any positive change. |
| r-H | | | RH (Externally-mount- ing-type braking resistor overheat) * Protection of externally- mounting type braking resistor operated. | Insufficient deceleration time Excessive motor regenerative energy I lorease deceleration time Reduce regenerative load |

^{*} Indicates that an Inverter of 5.5 kW and 7.5 kW (200-V and 400-V classes) is attached.

| Fau | It Display | Inverter Status | Description | Causes and Corrective |
|---------------------|----------------------------|---|---|---|
| Digital Operator | RUN (Green) ALARM (Red) | Jiaius | | Actions |
| oL f | • * | Protective Operation Output is turned OFF and motor coasis to a stop. | OL1 (Motor overload) Motor overload protection op- erated by built-in electronic thermal overload relay. | Check the load size or V/f pattern setting (constants not the norm of the nor |
| oL2 | | | OL2 (Inverter overload) inverter overload protection operated by built-in electron- ic thermal overload relay. | Check the load size or Vifpattern setting (constants no11 to no17). Check the Inverter capacity. Check the Inverter capacity. Check the load size Vifset value, operation pattern, etc. to confirm that the load is not excessive under actual operation. Refer to Intervention of the constant of the value of the constant of the value of value |

| T | | 1 | | |
|---------------------|----------------------------|---|--|---|
| Fau | lt Display | Inverter Status | Description | Causes and Corrective Actions |
| Digital Operator | RUN (Green) ALARM (Red) | | | |
| oL3 | | Protective Operation Output is turned OFF and motor coasts to a stop. | OL3 (Overtorque detection) Vf mode: Inverter output current exceeded the preset value in constant n098. Vector mode: Motor output current or forque exceeded the preset value in constants n097 and n098. When overtorque is detected, Inverter performs operation according to the preset setting of constant n096. | Check the driven machine and correct the cause of the fault, or increase the value of constant n098 up to the highest value allowed for the machine. Check the load size Vif set value, operation patter, and the load is confirm that the load is not excessive under actual operation. Refer to □Reducing Motor Noise or Leakage Current Using Carrier Frequency Selection (n080) on page 83. Check the wiring (increase of current caused by rare shortcircuit, etc.). |
| PF | ● | | PF (Main circuit voltage fault) The main circuit's DC voltage oscillated in an irregular way when not in regenerative operation. | Open phase of input supply supply Momentary power loss Excessive fluctuation in input supply voltage Unbalanced line voltage Check the following: Main circuit power supply connections Power supply voltage Terminal screws: Loose? |
| LF | | | LF (Output open phase) An open phase occurred in Inverter output. | Disconnection in output cable Disconnection in motor windings Loose output terminal screws Disconnection in output wirings Disconnection in output wirings Motor impedance Terminal screws: Loose? |

| Fau | It Display | Inverter Status | Description | Causes and Corrective |
|---------------------|----------------------------|---|---|---|
| Digital Operator | RUN (Green) ALARM (Red) | | | |
| UL3 | | Protective Operation Output is turned OFF and motor coasts to a stop. | UL3 (Undertorque detection) When V/f mode is selected: The Inverter's output current was less than the Under- torque Detection Level (in118). When vector mode is select- ed. The output current or output torque was less than the de- torque was less | Check the setting in n118. Check the operating conditions, and remove the cause. |
| EF a | • \$ | | EFI (External fault) Inverter receives an external fault input from control circuit terminal. EFO: External fault input command from control circuit terminal. Esternal fault input command from control circuit terminal S2 EST: External fault input command from control circuit terminal S2 EFS: External fault input command from control circuit terminal S3 EF4: External fault input command from control circuit terminal S3 EF4: External fault input command from control circuit terminal S4 EFS: External fault input command from control circuit terminal S5 EF6: External fault input command from control circuit terminal S5 EF7: External fault input command from control circuit terminal S6 EF7: External fault input command from control circuit terminal S7 | Check the following: NO/NC contact selection (constant). Wiring is made properly. Signal is not input from the PLC. |
| F00 | | | CPF-00 Inverter cannot communicate with the Digital Operator for 5 s or more when power is turned ON. | Cycle power after confirming that the Digital Operator is securely mounted. If the fault remains, replace the Digital Operator or Inverter. |
| F0 I | | | CPF-01 Transmission fault occurred for 5 s or more when trans- mission starts with the Digital Operator. | Cycle power after confirming that the Digital Operator is securely mounted. If the fault remains, replace the Digital Operator or Inverter. |
| FB4 | | | CPF-04 EEPROM fault of Inverter control circuit was detected. | Record all constant data and initialize the con- stants. (Refer to page 51.) Cycle power. If the fault remains, replace the Inverter. |

| Fau | It Display | Inverter Status | Description | Causes and Corrective | |
|---------------------|----------------------------|--|--|--|--|
| Digital Operator | RUN (Green) ALARM (Red) | Sidius | | Actions | |
| F05 | | Protective Operation Output is turned OFF | CPF-05 AD converter fault was detected. | Cycle power. If the fault remains, replace the Inverter. | |
| F05 | • | and motor coasts to a stop. | CPF-06 Option card connection fault A non-corresponding option card is connected. | Cycle power to the Inverter after checking the connection of the Communication option card. Verify Software Version No. (n179). Check the applicable Inverter software number that is described in the instruction manual of the communications option card. | |
| F07 | | | | CPF-07 Operator control circuit (EE- PROM or AD converter) fault | Cycle power after checking the Digital Operator is se- curely mounted. If the fault remains, replace the Digital Operator or Inverter. |
| FII | | • | CPF-11 Combination error | Control circuit is not combined with correct software. (Contact your Yaskawa representative.) | |
| F2 I | ⊹ϔ· | | Communication option card self diagnostic error | Option card fault. Replace the option card. Confirm that any foreign | |
| F22 | | | Communication option card model code error | matters adhere to the communication option card. | |
| F23 | | | Communication option card DPRAM error | | |
| ٥٩٠ | | | OPR (Operator connecting fault) | Cycle power. If the fault remains, replace the Inverter. | |
| CE | | | CE (MEMOBUS communications fault) | Check the following: Communications devices or communications signals. PLC is not faulty. Transmission cable is connected properly. Any loose terminal screws do not result in improper contact. Wiring is made properly. | |

| Fau | Fault Display | | Description | Causes and Corrective |
|---------------------|------------------------------|---|---|---|
| Digital Operator | RUN (Green) ALARM (Red) | Status | | Actions |
| SCP | | Stops according to constant. | STP (Emergency stop) The Inverter stopped according to constant n005 after receiving the emergency stop fault signal. | Check the following: NO/NC contact selection (constant). Wiring is made properly. Signal is not input from the PLC. |
| FbL | ∰ - ⇔ or | | FBL (PID feedback loss detection) PID feedback value dropped below the detection level. When PID feedback loss is detected, the Inverter operates according to the n136 setting. | Check the mechanical system and correct the cause, or increase the value of n137. |
| <i>6U5</i> | ❖ | | Option card communica- tions fault A communication error oc- curred in the mode where the communication option card was used and a run com- mand or frequency reference was input from the PLC. | Check the following: Communications devices or communications signals. PLC is not faulty, Transmission cable is connected properly. Wiring is made properly. Any loose terminal screws do not result in improper contact. Communication option card is not inserted correctly. |
| (OFF) | • | Protective Operation Output is turned OFF and motor coasts to a stop. | Insufficient power supply voltage Control power supply fault Hardware fault | Check the following: Power supply voltage Main circuit power supply connections Terminal screws: Loose? Control sequence. Replace the Inverter. |

^{*} To display or clear the fault history, refer to page 51.

■ Troubleshooting

| Trouble | Cause | Corrective Actions |
|--|--|---|
| The motor does not operate when an external operation signal is input. | The operation method selection is wrong. The RUN command (n003) is not set to Control Circuit Terminal. | Set the RUN command (n003) to Control Circuit Terminal. |
| | A 3-wire sequence is in effect. The Multi-function Input Selection (n052) is set to 3-wire sequence, and the S2 control terminal is not closed. | To use a 3-wire sequence, make the wiring so that the S2 control terminal is closed. To use a 2-wire sequence, set the Multi-function Input (n052) to a value other than 3-wire sequence. |
| | The frequency reference is too low. The input frequency reference is lower than the setting for the Min.Output Frequency (n016). | Input a frequency reference greater than the Min. Output Frequency (n016). |
| | Local mode is in effect. | Set the LO/RE selection of the Digital Operator to RE. |
| | The V-I SW (SW2) setting is wrong. Example: The reference 4-20 mA is input, but the SW2 is set to "V." | For analog input, make sure that the Frequency Reference (n004) and SW2 settings are correct. |
| | The setting of NPN/PNP switch (SW1) is not correct. | Set SW1 correctly. |
| | Program mode is enabled. | Press DSPL to make FREF flash and change to Drive mode. |
| The motor stops. The torque is not output. | The stall prevention level during acceleration is too low. Because the Stall Prevention Level during Acceleration (n093) is set too low, the output current reaches the set level, the output frequency is stopped, and the acceleration time is lengthened. | Check if the Stall Prevention Level during Acceleration (n093) is set to an appropriate value. |
| | The stall prevention level during running is too low. Because the Stall Prevention Level during Running (n094) is set too low, the output current reaches the set level, and the speed drops. | Check if the Stall Prevention Level during Running (n094) is set to an appropriate value. |
| | The load is too heavy. If the load is too heavy, stall prevention is activated, the output frequency is stopped, and the acceleration time is lengthened. | Lengthen the set acceleration time (n019). Reduce the load. |
| | When the maximum frequency (n011) was changed, the maximum voltage frequency (n013) was also changed. | To increase the speed of a general- purpose motor, only change the maximum frequency (n011). |
| 170 | The V/f set value is too low. | Set the V/f (n011 to n017) according to the load characteristics. |

| Trouble | Cause | Corrective Actions |
|---|--|--|
| The motor speed is unstable. The motor speed fluctuates when operating with a light load. | The stall prevention level during running is too low. Because the Stall Prevention Level during Running (n094) is too low, the output current reaches the set level and the speed drops. | Check if the Stall Prevention Level during Running (n094) is set to an appropriate value. |
| | The load is too heavy. If the load is too heavy, stall prevention is activated, the output frequency is stopped, and the acceleration time is lengthened. | Reduce the load. |
| | The carrier frequency is too high. If operating the motor with a light load, a high carrier frequency may cause the motor speed to fluctuate. | Decrease the carrier frequency (n080). |
| | The V/f set value is too high for a low speed operation. Because the set value for the V/f is too high, over-excitation occurs at low speeds. | Set the V/f (n011 to n017) according to the load characteristics. |
| | The maximum frequency (n011) and maximum voltage frequency (n013) were incorrectly adjusted. Example: To operate a 60 Hz motor at 40 Hz or less, the maximum frequency and base frequency are set to 40 Hz. | Set the maximum frequency (n011) and the maximum voltage frequency (n013) according to the motor specifications. |
| | The Inverter is used for an operation at 1.5 Hz or less. | Do not use the V7 Inverter for an operation that runs at 1.5 Hz or less. For an operation at 1.5 Hz or less, use a different Inverter model. |
| | The analog reference input is unstable and has noise interference. | Increase the set value for the filter time constant (n062). |
| The LED of the Digital Operator is unlit. | The power is not being supplied. The breaker or other component on the power input side is not turned ON, and the power is not being supplied. | Check if the power is being supplied. |
| | Because the Digital Operator is not correctly mounted, the display does not appear. | Mount the Digiral Operator correctly. |
| | Short-circuit bar for terminals +1 and +2 is not connected. | Confirm that the short-circuit bar is connected properly. |
| | POWER charge indicator lamp lights but the Digital Operator does not give any display after the power supply is turned ON. | Since main circuit fuse is blown, replace the Inverter. |

9. Specifications

■ Standard Specifications (200 V Class)

| | Volt | age Class | | | | 200 V | single-/3 | -phase | | | | | |
|-------------------------|--------------|-------------------------------------|---|--|-----------------------------|-----------------------|---------------------|-----------|-------------|------|------|--|--|
| | odel MR- | 3-phase | 20P1 | 20P2 | 20P4 | 20P7 | 21P5 | 22P2 | 23P7 | 25P5 | 27P5 | | |
| V7* | T00 | Single-phase | B0P1 | B0P2 | B0P4 | B0P7 | B1P5 | B2P2 | B3P7 | - | 1 | | |
| Max | . Applic | able Motor Output kW*1 | 0.1 | 0.2 | 0.4 | 0.75 | 1.5 | 2.2 | 3.7 | 5.5 | 7.5 | | |
| | Inver | ter Capacity (kVA) | 0.3 | 0.6 | 1.1 | 1.9 | 3.0 | 4.2 | 6.7 | 9.5 | 13 | | |
| eristics | Rate | ed Output Current (A) | 0.8 1.6 3 5 8 11 17.5 25 33 | | | | | | | | | | |
| Output Characteristics | Max. | Output Voltage (V) | 3-phas 3-phas | 3-phase, 200 to 230 V (proportional to input voltage) 3-phase, 200 to 240 V (proportional to input voltage) | | | | | | | | | |
| Output | Max. | Output Frequency (Hz) | 400 Hz | z (Progra | ammable |) | | | | | | | |
| ylc | Rated | Input Voltage and Frequency | | 3-phase, 200 to 230 V, 50/60 Hz Single-phase, 200 to 240 V, 50/60 Hz | | | | | | | | | |
| Power Supply | All | owable Voltage Fluctuation | -15 to | -15 to +10% | | | | | | | | | |
| Pow | Allov | wable Frequency Fluctuation | ±5% | | | | | | | | | | |
| | С | Control Method | Sine w | ave PW | M (V/f co | ntrol/ve | ctor cont | rol selec | table) | | | | |
| | Fre | equency Control Range | 0.1 to | 400 Hz | | | | | | | | | |
| istics | Fred (Tem | quency Accuracy perature Change) | Digital Analog | referenc referen | e: ±0.01 ce: ±0.5 | % (–10 t % (25 ±1 | o 50°C) 0°C) | | | | | | |
| Control Characteristics | Fre | equency Setting Resolution | 0.Ŏ1 H | referenc z (less t g referen | ce: han 100 ce: 1/100 | Hz)/0.1 I 00 of ma | Hz (100 x. outpu | Hz or mo | ore) icy | | | | |
| Control | Ou | tput Frequency Resolution | 0.01 Hz | | | | | | | | | | |
| ľ | Ov | erload Capacity | 150% rated output current for one minute | | | | | | | | | | |
| | Freq | uency Reference Signal | e 0 to 10 VDC (20 kΩ), 4 to 20 mA (250 Ω), 0 to 20 mA (250 Ω) pulse train input, frequency setting potentiometer (Selectable) | | | | | | e train | | | | |

| | Volt | age Class | | | | 200 V | single-/3 | -phase | | | | | |
|-------------------------|-------------|----------------------------------|--|---|---|------------------------------------|-----------|------------------------|--------------------------|-------------------------|-------------|--|--|
| | odel MR- | 3-phase | 20P1 | 20P2 | 20P4 | 20P7 | 21P5 | 22P2 | 23P7 | 25P5 | 27P5 | | |
| V7* | TDD | Single-phase | B0P1 | B0P2 | B0P4 | B0P7 | B1P5 | B2P2 | B3P7 | - | - | | |
| SC | | Acceleration/ celeration Time | | 6000 s eration/c | lecelerat | ion time | are inde | pendent | ly progra | mmed.) | | | |
| Control Characteristics | E | Braking Torque | 0.1, 0. 0.4, 0. 1.5 kW 2.2 kW Contin | 25 kW: 1 75 kW: 1 /: 50% o / or more uous rea | erage dec 150% or 100% or r more e: 20% o generativ aking tra | more more r more e torque | : Approx | | 50% wit | h optiona | al brak- | | |
| 0 | V/I | Characteristics | Possib | le to pro | gram an | y V/f pat | tern | | | | | | |
| | N | Notor Overload Protection | Electro | Electronic thermal overload relay | | | | | | | | | |
| | ı | nstantaneous Overcurrent | Motor | Motor coasts to a stop at approx. 250% or more of Inverter rated curren | | | | | | | | | |
| | | Overload | Motor coasts to a stop after 1 minute at 150% of Inverter rated output current | | | | | | | | | | |
| | | Overvoltage | Motor coasts to a stop if DC bus voltage exceed 410 V | | | | | | | | | | |
| ions | | Undervoltage | | | bus vol phase se | | ipprox. 2 | 00 V or | less (app | rox. 160 | V or | | |
| Protective Functions | Mom | entary Power Loss | ms or | longer), | s are sel continuo uous ope | us opera | Not prov | ided (sto ower loss | pps if pov s is appro | ver loss i ox. 0.5 s | is 15 or | | |
| rotec | He | atsink Overheat | Protec | ted by e | lectronic | circuit. | | | | | | | |
| ш | Stall | Prevention Level | Can be set individual level during acceleration/constant-speed operation, provided/not provided available during deceleration. | | | | | | | | | | |
| | Co | ooling Fan Fault | Protected by electronic circuit (fan lock detection). | | | | | | | | | | |
| | (| Ground Fault*4 | Protected by electronic circuit (overcurrent level).*3 | | | | | | | | | | |
| | F | Power Charge Indication | | | C bus vo Operator | | | | ss. RUN | indicato | r stays | | |

| _ | | | ı | | | | | | | | | |
|------------------|----------------|--|--|--|--|---|--|--|---|---|---|--|
| | Volt | age Class | | | | 200 V | single-/3 | -phase | | | | |
| | odel MR- | 3-phase | 20P1 | 20P2 | 20P4 | 20P7 | 21P5 | 22P2 | 23P7 | 25P5 | 27P5 | |
| V7* | TOO | Single-phase | B0P1 | B0P2 | B0P4 | B0P7 | B1P5 | B2P2 | B3P7 | 1 | - | |
| | Input Signals | Multi-function Input | mand, fault re accele SEAR mand, nal sel commi | reverse eset, exteration/de CH comi LOCAL/ ection, e | run com ernal fau eceleration mand, Al REMOT emergeno- test, PII | mand, for t, multi-son time son CCELER E selection | orward/restep specielect, extended to the control of the control on, compault, emerger of the control on the co | everse ru ed opera sternal ba DECELE municati ergency : | le: Forwa in (3-wire tion, JO0 aseblock RATION on/contro stop alar gral rese | sequent G comma , SPEED HOLD of ol circuit m. UP/D | ice), and,) com- termi- OWN | |
| Output Functions | Output Signals | Multi-function Output ^{*5} | photoc Fault, overto operat output | coupler of running, rque det ing mode through | utputs): zero spe ection, u e, Inverte commur | ed, freq ndervolta er run rea | uency ag age dete ady, fault , PID fee | gree, free ction, mi t retry, U | C contac quency d nor error V, speed ss detec | etection , baseble search, | ock, data | |
| | Sta | ndard Functions | tion, D ence b bps), F ence v | C injection in the control of the co | on brakir , MEMO ol, energ in poten | ng currer BUS con gy-saving | nt/time at nmunica g control unit sel | t startup/ tions (RS , constar ection fo | e boost, stop, free 3-485/42 at copy, f r frequer | quency r 2, max. requency | efer- 19.2 k y refer- | |
| | ons | Status Indicators | RUN a | ind ALAF | RM provi | ded as s | tandard | indicato | rs | | | |
| nctions | Indications | Digital Operator (JVOP-140) | Provid rent | ed for m | onitor fre | quency | referenc | e, outpu | t frequen | cy, outp | ut cur- | |
| Other Functions | | Terminals | | | rew term plug-in s | inals crew ter | minal | | | | | |
| 0 | | veen Inverter and Motor | 100 m or less | | | | | | | | | |
| | E | nclosure | Open chassis (IP20, IP00) ^{*6} or enclosed wall-mounted NEMA 1 (TYPE 1) ^{*7} | | | | | | | | | |
| | Cool | ing Method | Cooling fan is provided for the following models: 200 V, 0.75 kW or larger Inverters (3-phase) 200 V, 1.5 kW or larger Inverters (single-phase) Other models are self-cooling. | | | | | | | | | |

| | Volt | age Class | | | | 200 V | single-/3 | -phase | | | | | |
|--------------------------|-------------|-------------------|---|------------------------|----------------------|------------------|--------------------|---------|-----------|-----------|------|--|--|
| | odel MR- | 3-phase | 20P1 | 20P2 | 20P4 | 20P7 | 21P5 | 22P2 | 23P7 | 25P5 | 27P5 | | |
| V7∗ | TOO | Single-phase | B0P1 | B0P2 | B0P4 | B0P7 | B1P5 | B2P2 | B3P7 | - | 1 | | |
| SL | Amb | ient Temperature | Open Enclos | chassis (sed wall- | (IP20, IP mounted | 00): –10 NEMA | to 50°C 1 (TYPE | 1): –10 | to 40°C (| not froze | en) | | |
| dition | | Humidity | 95% or less (non-condensing) | | | | | | | | | | |
| Environmental Conditions | Stora | ige Temperature*8 | -20 to | −20 to 60°C | | | | | | | | | |
| ment | | Location | Indoor | (free fro | m corros | sive gase | es or dus | st) | | | | | |
| viron | | Elevation | 1,000 | m or less | 5 | | | | | | | | |
| Ъ | Vibration | | Up to 9.8 m/s ² (1G) at 10 to less than 20 Hz, up to 2 m/s ² (0.2G) at 20 to 50 Hz | | | | | | | | | | |

- * 1. Based on a standard 4-pole motor for max. applicable motor output.
- * 2. Shows deceleration torque for uncoupled motor decelerating from 60 Hz with the shortest possible deceleration time.
- * 3. The operation level becomes approx. 50% of Inverter rated output current in case of Inverters of 5.5 kW or 7.5 kW.
- * 4. The ground fault here is one which occurs in the motor wiring while the motor is running. A ground fault may not be detected in the following cases.
 - A ground fault with low resistance which occurs in motor cables or terminals.
 - · A ground fault occurs when the power is turned ON.
- * 5. Minimum permissible load: 5 VDC, 10 mA (as reference value)
- * 6. 0P1 to 3P7 are of IP20. Be sure to remove the top and bottom covers when Inverter 5P5 or 7P5 of open chassis mounting type is used.
- * 7. NEMA 1 of 0P1 to 3P7 is optional, while NEMA 1 of 5P5 and 7P5 is provided as standard.
- * 8. Temperature during shipping (for short period).

■ Standard Specifications (400 V Class)

| | Volt | age Class | | | | 400 | 0 V 3-ph | ase | | | | | |
|-------------------------|-------------|-------------------------------------|--|-----------------------|-----------------------------|-----------|-----------|-----------|--------|----------|----------|--|--|
| | odel MR- | 3-phase | 40P2 | 40P4 | 40P7 | 41P5 | 42P2 | 43P0 | 43P7 | 45P5 | 47P5 | | |
| V7* | TDD | Single-phase | 1 | 1 | - | 1 | 1 | ī | - | 1 | 1 | | |
| Max | . Applic | able Motor Output kW*1 | 0.2 | 0.4 | 0.75 | 1.5 | 2.2 | 3.0 | 3.7 | 5.5 | 7.5 | | |
| tics | Inver | ter Capacity (kVA) | 0.9 | 1.4 | 2.6 | 3.7 | 4.2 | 5.5 | 6.6 | 11 | 14 | | |
| Output Characteristics | Rate | ed Output Current (A) | 1.2 | 1.8 | 3.4 | 4.8 | 5.5 | 7.2 | 8.6 | 14.8 | 18 | | |
| t Cha | Max. | Output Voltage (V) | 3-phase, 380 to 460 V (proportional to input voltage) | | | | | | | | | | |
| Outpul | Max. | Output Frequency (Hz) | 400 Hz | 400 Hz (Programmable) | | | | | | | | | |
| λíc | Rated | Input Voltage and Frequency | 3-phas | e, 380 t | o 460 V, | 50/60 H | Z | | | | | | |
| Power Supply | Allow | able Voltage Fluc- tuation | -15 to | +10% | | | | | | | | | |
| Pow | Allo | wable Frequency Fluctuation | ±5% | | | | | | | | | | |
| | С | ontrol Method | Sine w | ave PW | M (V/f co | ntrol/ve | ctor cont | rol selec | table) | | | | |
| | Fre | equency Control Range | 0.1 to 400 Hz | | | | | | | | | | |
| | | quency Accuracy perature Change) | Digital reference: ±0.01%, -10 to 50°C Analog reference: ±0.5%, 25±10°C | | | | | | | | | | |
| | Frequ | ency Setting Res- olution | 0.Ŏ1 H | | ce: han 100 ce: 1/100 | | | | | | | | |
| ristics | Outp | ut Frequency Res- olution | 0.01 H | z | | | | | | | | | |
| aracte | Ov | erload Capacity | 150% | rated ou | tput curr | ent for o | ne minut | е | | | | | |
| Control Characteristics | Freq | uency Reference Signal | | | 0 kΩ), 4 y setting | | | | | OΩ) puls | e train | | |
| Con | Acce | leration/Decelera- tion Time | 0.00 to 6000 s (Acceleration/deceleration time are independently programmed.) | | | | | | | | | | |
| | В | draking Torque | Short-term average deceleration torque ^{*2} 0.1, 0.2 kW: 150% or more 0.4, 0.75 kW: 100% or more 1.5 kW: 50% or more 2.2 kW or more: 20% or more Continuous regenerative torque: Approx. 20% (150% with optional braking resistor, braking transistor built-in) | | | | | | | | al brak- | | |
| | V/f | Characteristics | teristics Possible to program any V/f pattern | | | | | | | | | | |


| | Volt | age Class | | | | 40 | 0 V 3-ph | ase | | | | | |
|----------------------|----------------|-----------------------------|--|--|--|--|--|--|---|--|--------------------------------------|--|--|
| | odel MR- | 3-phase | 40P2 | 40P4 | 40P7 | 41P5 | 42P2 | 43P0 | 43P7 | 45P5 | 47P5 | | |
| V7∗ | TDD | Single-phase | - | - | - | - | - | - | - | - 1 | - | | |
| | Moto | r Overload Protec- tion | Electro | onic then | mal over | load rela | у | | | | | | |
| | ı | nstantaneous Overcurrent | Motor | coasts to | a stop a | at approx | c. 250% | or more | of Invert | er rated | current | | |
| | | Overload | Motor curren | | a stop a | after 1 m | inute at | 150% of | Inverter | rated ou | tput | | |
| | | Overvoltage | Motor | coasts to | a stop i | if DC bus | s voltage | exceed | 820 V | | | | |
| suo | | Undervoltage | Stops | when DO | bus vol | tage is a | pprox. 4 | 00 V or I | less | | | | |
| Protective Functions | Mom | entary Power Loss | ms or | Following items are selectable: Not provided (stops if power loss is 15 ms or longer), continuous operation if power loss is approx. $0.5 \ s$ or shorter, continuous operation. | | | | | | | | | |
| otecti | He | atsink Overheat | Protec | Protected by electronic circuit. | | | | | | | | | |
| ď | Stall | Prevention Level | Can be set to individual levels during acceleration/constant-speed operation, provided/not provided available during deceleration. | | | | | | | | | | |
| | Co | ooling Fan Fault | Protec | ted by e | lectronic | circuit (f | an lock o | detection | 1). | | | | |
| | C | Ground Fault*4 | Protected by electronic circuit (overcurrent level).*3 | | | | | | | | | | |
| | Pow | er Charge Indica- tion | ON un vided. | ON until the DC bus voltage becomes 50 V or less. Charge LED is provided. | | | | | | | | | |
| | Input Signals | Multi-function Input | mand, fault re accele SEAR mand, nal sel commi | reverse eset, exteration/de CH comi LOCAL/ ection, e | run com ernal faul eceleration mand, Al REMOT emergeno test, PIE | input sign mand, fo lt, multi-s on time s CCELER E selecti cy stop fo Control | orward/restep specielect, extended to the control of the control o | everse ru ed opera sternal ba DECELE munication ergency s | in (3-wire tion, JOG aseblock RATION on/contro stop alar | sequen G comma , SPEED HOLD of ol circuit m, UP/D | ce), and, om- termi- OWN | | |
| Output Functions | Output Signals | Multi-function Output *5 | Following output signals are selectable (1 NO/NC contact output, 2 photocoupler outputs): Fault, running, zero speed, frequency agree, frequency detection, overtorque detection, undertorque detection, minor error, baseblock, operating mode, Inverter run ready, fault retry, UV, speed search, data output through communications, PID feedback loss detection, frequency reference loss, Inverter overheat alarm | | | | | | | | | | |
| | Sta | ndard Functions | Voltage vector control, full-range automatic torque boost, slip compensa- tion, DC injection braking current/time at startup/stop, frequency refer- ence blasgain, MEMOBUS communications (KS-465/42z, max. 19.2 kbps), PID control, energy-saving control, constant copy, frequency ref- erence with built-in pytentioneter, unit selection for frequency reference setting/display, multi-function analog inspect | | | | | | | | efer- 19.2 cy ref- | | |

| | Volt | age Class | | | | 400 | 0 V 3-ph | ase | | | | | | |
|--------------------------|-------------|---|--|--|----------------------|--------------------|--------------------|----------|-----------|------------|---------|--|--|--|
| | odel MR- | 3-phase | 40P2 | 40P4 | 40P7 | 41P5 | 42P2 | 43P0 | 43P7 | 45P5 | 47P5 | | | |
| V7* | T00 | Single-phase | - | 1 | - | 1 | 1 | 1 | - | - | 1 | | | |
| | tions | Status Indica- tors | RUN a | ind ALAF | RM provi | ded as s | tandard | indicato | rs | | | | | |
| nctions | Indications | Digital Operator (JVOP-140) | Provid rent | ed for m | onitor fre | quency | referenc | e, outpu | t frequen | icy, outpi | ut cur- | | | |
| Other Functions | | Terminals | | Main circuit: screw terminals Control circuit: plug-in screw terminal | | | | | | | | | | |
| 0 | betv | /iring Distance veen Inverter and Motor | 100 m | 100 m or less | | | | | | | | | | |
| | E | nclosure | Open (| Open chassis (IP20, IP00) $^{\rm +6},$ or enclosed wall-mounted NEMA 1 (TYPE 1) $^{\rm +7}$ | | | | | | | | | | |
| | Cool | ing Method | 400 V. | Cooling fan is provided for the following models: 400 V, 1.5 kW or larger Inverters (3-phase) Other models are self-cooling. | | | | | | | | | | |
| tions | Amb | ient Temperature | Open of Enclosi (not fro | ed wall- | (IP20, IP mounted | 00): -10 NEMA 1 | to 50°C 1 (TYPE | 1): –10 | to 40°C | | | | | |
| Condi | | Humidity | 95% o | r less (no | on-conde | ensing) | | | | | | | | |
| Environmental Conditions | Stora | ige Temperature*8 | −20 to 60°C | | | | | | | | | | | |
| ronme | | Location | Indoor (free from corrosive gases or dust) | | | | | | | | | | | |
| Envi | | Elevation | 1,000 m or less | | | | | | | | | | | |
| | | Vibration | Up to 9.8 m/s ² (1G) at 10 to less than 20 Hz, up to 2 m/s ² (0.2G) at 20 to 50 Hz | | | | | | | | | | | |

- * 1. Based on a standard 4-pole motor for max. applicable motor output.
- * 2. Shows deceleration torque for uncoupled motor decelerating from 60 Hz with the shortest possible deceleration time.
- * 3. The operation level becomes approx. 50% of Inverter rated output current in case of Inverters of 5.5 kW or 7.5 kW
- * 4. The ground fault here is one which occurs in the motor wiring while the motor is running. A ground fault may not be detected in the following cases.
 - A ground fault with low resistance which occurs in motor cables or terminals.
 - A ground fault occurs when the power is turned ON.
- * 5. Minimum permissible load: 5 VDC, 10 mA (as reference value)
- * 6. 0P1 to 3P7 are of IP20. Be sure to remove the top and bottom covers when Inverter 5P5 or 7P5 of open chassis mounting type is used.


- * 7. NEMA 1 of 0P1 to 3P7 is optional, while NEMA 1 of 5P5 and 7P5 is provided as standard.
- * 8. Temperature during shipping (for short period).

■ Standard Wiring

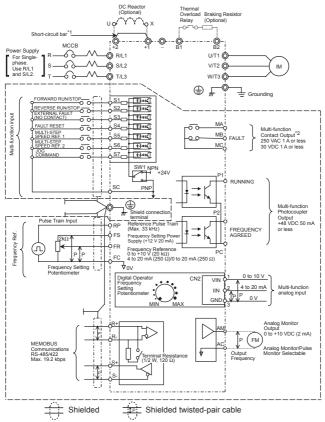

- !:::::: Only basic insulation (protective class 1, overvoltage category II) is provided for the control circuit terminals. Additional insulation may be necessary in the end product to conform to CE requirements.
- *1. Short-circuit bar should be removed when connecting a DC reactor.
- *2. Minimum permissible load: 5 VDC, 10 mA (as reference value)

Connection Example of Braking Resistor

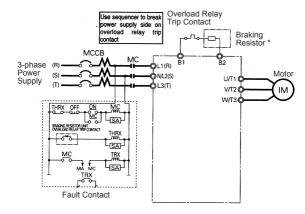

* Disable stall prevention during deceleration by setting n092 to 1 when using a Braking Resistor Unit. The motor may not stop within the deceleration time if this setting is not changed.

Terminal Descriptions

| Type | Terminal | Name | Function (Signal Level) |
|--------------|---------------------|----------------------------------|--|
| | R/L1, S/L2, T/L3 | AC power supply input | Use main circuit power input. (Use terminals R/L1 and S/L2 for single-phase Inverters. Never use terminal T/L3.) |
| | U/T1, V/T2, W/T3 | Inverter output | Inverter output |
| Main Circuit | B1, B2 | Braking resistor con- nection | Braking resistor connection |
| Main (| +2, +1 | DC reactor connection | When connecting optional DC reactor, remove the main circuit short-circuit bar between +2 and +1. |
| | +1, - | DC power supply input | DC power supply input (+1: positive -: negative)*1 |
| | (| Grounding | For grounding (according to the local grounding codes) |


| Ту | /ре | Term | ninal | Name | Functi | on (Signal Le | vel) |
|-----------------|--------|-------------------------------|-------|---------------------------------------|--|------------------------------|---|
| | | | S1 | Multi-function input selection 1 | Factory setting closed:FV open: Sto | VD run | Photocoupler insulation, 24 VDC, 8 mA |
| | | | S2 | Multi-function input selection 2 | Factory setting closed:RE open: Sto | | 150, 5 |
| | | | S3 | Multi-function input selection 3 | Factory setting: Extern (NO contact) | al fault | |
| | | Sequence | S4 | Multi-function input selection 4 | Factory setting: Fault re | eset | |
| | | Sedu | S5 | Multi-function input selection 5 | Factory setting: Multi-s reference 1 | tep speed | |
| | Input | | S6 | Multi-function input selection 6 | Factory setting: Multi-s reference 2 | tep speed | |
| | Inp | | S7 | Multi-function input selection 7 | Factory Setting: JOG of | ommand | |
| | | | SC | Multi-function input selection common | For control signal | | _ |
| cnit | | ээг | RP | Master reference pulse train input | 33 kHz max. | | |
| Control Circuit | | Frequency reference | FS | Power for frequency setting | +12 V (permissible cur | rent 20 mA m | ax.) |
| S | | (canenca) | FR | Master frequency ref- erence | 0 to +10 VDC (20 kΩ) o mA (250 Ω) (1/1000 re | or 4 to 20 mA solution) | (250 kΩ) or 0 to 20 |
| | | Fre | FC | Frequency reference common | 0 V | | |
| | | 5 | MA | NO contact output | Factory setting: fault | Contact cap | |
| | | outpi | MB | NC contact output | | 250 VAC 1 . 30 VDC 1 A | or less |
| | | Multi-function contact output | MC | Contact output common | | | |
| | | ction | P1 | Photocoupler output 1 | Factory setting: Run | | Photocoupler output +48 VDC, |
| | Output | fr. | P2 | Photocoupler output 2 | Factory setting: Freque | ency agree | 50 mA or less |
| | O | M | PC | Photocoupler output common | 0 V | | |
| | | Al | М | Analog monitor output *2 | Factory setting: Output frequency 0 to +10 V | 0 to +10 VE 8-bit resolut | OC, 2 mA or less, tion |
| | | A | С | Analog monitor common | 0 V | | |

9. Specifications


| Туре | Term | ninal | Name | Functi | ion (Signal Level) |
|--------------------------------|----------------|-------|---------------------------|---|--|
| minal | ions | R+ | Communications input (+) | MEMOBUS communications Run through RS-485 | RS-485/422 MEMOBUS protocol 19.2 kbps max. |
| rcuit Tel | communications | R- | Communications input (-) | or RS-422. | |
| ation Ci | | S+ | Communications output (+) | | |
| Communication Circuit Terminal | MEMOBUS | S- | Communications output (-) | | |

- * 1. DC power supply input terminal is not applied to CE/UL standard.
- * 2. Can be switched to pulse monitor output.
- * 3. Minimum permissible load: 5 VDC, 10 mA (as reference value)


Sequence Input Connection with NPN/PNP Transistor

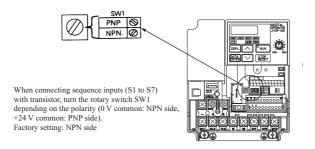

Sequence Connection with NPN Transistor (0 V Common)

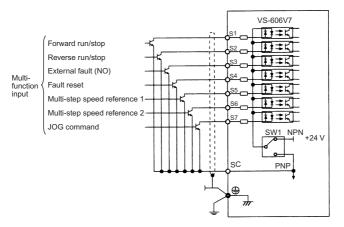

Sequence Connection with PNP Transistor (+24 V Common)

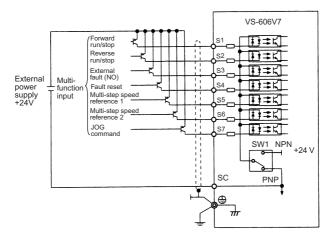

■ Dimensions/Heat Loss

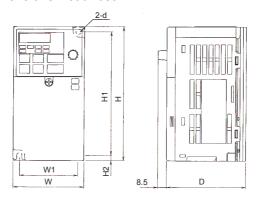


Fig. 1

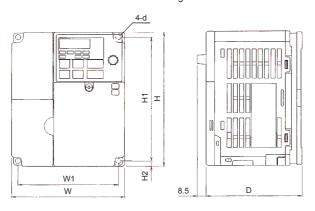


Fig. 2

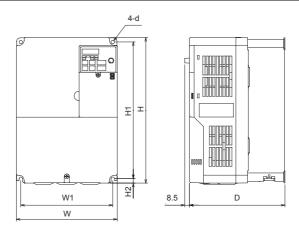


Fig. 3

Dimensions in mm/Mass in kg/Heat Loss (W)

| Voltage class | Capaci- ty (kW) | W | Н | D | W1 | H1 | H2 | d | Mass | Hea | at Loss | (W) | Fig. |
|------------------|--------------------|-----|-----|-----|-----|-----|----|----|------|---------------|---------|-------|------|
| Ciass | ty (KVV) | | | | | | | | | Heat- sink | Unit | Total | |
| 200 V 3-phase | 0.1 | 68 | 128 | 76 | 56 | 118 | 5 | M4 | 0.6 | 3.7 | 9.3 | 13.0 | 1 |
| о-риазс | 0.2 | 68 | 128 | 76 | 56 | 118 | 5 | M4 | 0.6 | 7.7 | 10.3 | 18.0 | 1 |
| | 0.4 | 68 | 128 | 108 | 56 | 118 | 5 | M4 | 0.9 | 15.8 | 12.3 | 28.1 | 1 |
| | 0.75 | 68 | 128 | 128 | 56 | 118 | 5 | M4 | 1.1 | 28.4 | 16.7 | 45.1 | 1 |
| | 1.5 | 108 | 128 | 131 | 96 | 118 | 5 | M4 | 1.4 | 53.7 | 19.1 | 72.8 | 2 |
| | 2.2 | 108 | 128 | 140 | 96 | 118 | 5 | M4 | 1.5 | 60.4 | 34.4 | 94.8 | 2 |
| | 3.7 | 140 | 128 | 143 | 128 | 118 | 5 | M4 | 2.1 | 96.7 | 52.4 | 149.1 | 2 |
| | 5.5 | 180 | 260 | 170 | 164 | 244 | 8 | M5 | 4.6 | 170.4 | 79.4 | 249.8 | 3 |
| | 7.5 | 180 | 260 | 170 | 164 | 244 | 8 | M5 | 4.8 | 219.2 | 98.9 | 318.1 | 3 |

| Voltage class | Capaci- ty (kW) | W | Н | D | W1 | H1 | H2 | d | Mass | Hea | at Loss | (W) | Fig. |
|------------------|--------------------|-----|-----|-----|-----|-----|----|----|------|---------------|---------|-------|------|
| Class | ty (KVV) | | | | | | | | | Heat- sink | Unit | Total | |
| 200 V single- | 0.1 | 68 | 128 | 76 | 56 | 118 | 5 | M4 | 0.6 | 3.7 | 10.4 | 14.1 | 1 |
| phase | 0.2 | 68 | 128 | 76 | 56 | 118 | 5 | M4 | 0.7 | 7.7 | 12.3 | 20.0 | 1 |
| | 0.4 | 68 | 128 | 131 | 56 | 118 | 5 | M4 | 1.0 | 15.8 | 16.1 | 31.9 | 1 |
| | 0.75 | 108 | 128 | 140 | 96 | 118 | 5 | M4 | 1.5 | 28.4 | 23.0 | 51.4 | 2 |
| | 1.5 | 108 | 128 | 156 | 96 | 118 | 5 | M4 | 1.5 | 53.7 | 29.1 | 82.8 | 2 |
| | 2.2 | 140 | 128 | 163 | 128 | 118 | 5 | M4 | 2.2 | 64.5 | 49.1 | 113.6 | 2 |
| | 3.7 | 170 | 128 | 180 | 158 | 118 | 5 | M4 | 2.9 | 98.2 | 78.2 | 176.4 | 2 |
| 400 V 3-phase | 0.2 | 108 | 128 | 92 | 96 | 118 | 5 | M4 | 1.0 | 9.4 | 13.7 | 23.1 | 2 |
| о риазс | 0.4 | 108 | 128 | 110 | 96 | 118 | 5 | M4 | 1.1 | 15.1 | 15.0 | 30.1 | 2 |
| | 0.75 | 108 | 128 | 140 | 96 | 118 | 5 | M4 | 1.5 | 30.3 | 24.6 | 54.9 | 2 |
| | 1.5 | 108 | 128 | 156 | 96 | 118 | 5 | M4 | 1.5 | 45.8 | 29.9 | 75.7 | 2 |
| | 2.2 | 108 | 128 | 156 | 96 | 118 | 5 | M4 | 1.5 | 50.5 | 32.5 | 83.0 | 2 |
| | 3.0 | 140 | 128 | 143 | 128 | 118 | 5 | M4 | 2.1 | 58.2 | 37.6 | 95.8 | 2 |
| | 3.7 | 140 | 128 | 143 | 128 | 118 | 5 | M4 | 2.1 | 73.4 | 44.5 | 117.9 | 2 |
| | 5.5 | 180 | 260 | 170 | 164 | 244 | 8 | M5 | 4.8 | 168.8 | 87.7 | 256.5 | 3 |
| | 7.5 | 180 | 260 | 170 | 164 | 244 | 8 | M5 | 4.8 | 209.6 | 99.3 | 308.9 | 3 |

Note: Remove the top and bottom covers so that Inverters of 5.5/7.5 kW (200/ 400-V Classes) can be used as IP00.

■ Recommended Peripheral Devices

It is recommended that the following peripheral devices be mounted between the AC main circuit power supply and VS-606V7 input terminals R/L1, S/L2, and T/L3.

 MCCB (Molded-case Circuit Breaker)/Fuse: Always connect for wiring protection.

· Magnetic Contactor:

Mount a surge suppressor on the coil. (Refer to the table shown below.) When using a magnetic contactor to start and stop the Inverter, do not exceed one start per hour.

Recommended MCCB Magnetic Contactors and Fuses

• 200 V 3-phase

| VS-606V7 Mod | lel | V7** 20P1 | V7** 20P2 | V7** 20P4 | V7** 20P7 | V7** 21P5 | V7** 22P2 | V7** 23P7 | V7** 25P5 | V7** 27P5 |
|---|-----------------|--------------|----------------|--------------|--------------|-----------------|-----------------|----------------|---------------------|---------------------|
| Capacity (kVA) | | 0.3 | 0.6 | 1.1 | 1.9 | 3.0 | 4.2 | 6.7 | 9.5 | 13.0 |
| Rated Output Current | (A) | 8.0 | 1.6 | 3 | 5 | 8 | 11 | 17.5 | 25.0 | 33.0 |
| MCCB type NF30 (MITSUBISHI) | | | 5 A | 5 A | 10 A | 20 A | 20 A | 30 A | 50 A | 60A |
| Magnetic contactor (Fuji Electric FA Components & | Without reactor | | SC-03 (11A) | | | SC-4-0 (18A) | SC-N1 (26A) | SC-N2 (35A) | SC- N2S (50A) | SC-N3 (65A) |
| Systems) | With reactor | | SC-03 (11A) | | | SC-03 (11A) | SC-4-0 (18A) | SC-N1 (26A) | SC-N2 (35A) | SC- N2S (50A) |
| Fuse (UL Class RK5) | | 5 A | 5 A | 5 A | 10 A | 20 A | 20 A | 30 A | 50 A | 60 A |

· 200 V Single-phase

| VS-606V7 Mo | del | V7** B0P1 | V7** B0P2 | V7** B0P4 | V7** B0P7 | V7** B1P5 | V7** B2P2 | V7** B3P7 |
|---|-----------------|----------------|----------------|----------------|-----------------|----------------|----------------|-----------------|
| Capacity (kVA) | | 0.3 | 0.6 | 1.1 | 1.9 | 3.0 | 4.2 | 6.7 |
| Rated Output Current | (A) | 0.8 | 1.6 | 3 | 5 | 8 | 11 | 17.5 |
| MCCB type NF30, NF50 (MITSUBISHI) | | 5 A | 5 A | 10 A | 20 A | 30 A | 40 A | 50 A |
| Magnetic contactor (Fuji Electric FA | Without reactor | SC-03 (11A) | SC-03 (11A) | SC-03 (11A) | SC-4-0 (18A) | SC-N2 (35A) | SC-N2 (35A) | SC-N2S (50A) |
| Components & Systems) | With reactor | SC-03 (11A) | SC-03 (11A) | SC-03 (11A) | SC-4-0 (18A) | ` ' ' ' | | SC-N2S (50A) |

| VS-606V7 Model | V7** |
|---------------------|------|------|------|------|------|------|------|
| | B0P1 | B0P2 | B0P4 | B0P7 | B1P5 | B2P2 | B3P7 |
| Fuse (UL Class RK5) | 5 A | 5 A | 10 A | 20 A | 20 A | 40 A | 50 A |

400 V 3-phase

| VS-606V7 Mod | lel | V7** 40P2 | V7** 40P4 | V7** 40P7 | V7** 41P5 | V7** 42P2 | V7** 43P0 | V7** 43P7 | V7** 45P5 | V7** 47P5 |
|---|-----------------|--------------|----------------|--------------|----------------|-----------------|-----------------|-----------------|----------------|----------------|
| Capacity (kVA) | | 0.9 | 1.4 | 2.6 | 3.7 | 4.2 | 5.5 | 6.6 | 11.0 | 14.0 |
| Rated Output Current | (A) | 1.2 | 1.8 | 3.4 | 4.8 | 5.5 | 7.2 | 8.6 | 14.8 | 18.0 |
| MCCB type NF30, NF50 (MIT- SUBISHI) | | 5 A | 5 A | 5 A | 10 A | 20 A | 20 A | 20 A | 30 A | 30 A |
| Magnetic contactor (Fuji Electric FA | Without reactor | | SC-03 (11A) | | SC-03 (11A) | SC-4-0 (18A) | SC-4-0 (18A) | SC-N1 (26A) | SC-N2 (35A) | SC-N2 (35A) |
| Components & Systems) | With reactor | | | | SC-03 (11A) | SC-03 (11A) | SC-03 (11A) | SC-4-0 (18A) | SC-N1 (26A) | SC-N2 (35A) |
| Fuse (UL Class RK5) | | 5 A | 5 A | 5 A | 10 A | 10 A | 20 A | 20 A | 30 A | 30 A |

Surge Suppressors

| Coils and R | Surge Suppressors elays | Model DCR2- | Specifications | Code No. |
|-------------------|---|----------------|-------------------------|----------|
| 200 V to 230 V | Large size magnetic contactors | 50A22E | 250 VAC 0.5 μF 200 Ω | C002417 |
| | Control relays MY-2, -3 (OMRON) HH-22, -23 (FUJI) MM-2, -4 (OMRON) | 10A25C | 250 VAC 0.1 μF 100 Ω | C002482 |

· Ground Fault Interrupter:

Select a ground fault interrupter not affected by high frequencies. To prevent malfunctions, the current should be 200 mA or higher and the operating time 0.1 s or longer.

Example:

- NV series by Mitsubishi Electric Co., Ltd. (manufactured in 1988 and after)
- EGSG series by Fuji Electric Co., Ltd. (manufactured in 1984 and after)

· AC and DC Reactor:

Install an AC reactor to connect to a power supply transformer of large capacity (600 kVA or more) or to improve power factor on the power supply side.

· Noise Filter:

Use a noise filter exclusively for Inverter if radio noise generated from the Inverter causes other control devices to malfunction.



- Never connect a general LC/RC noise filter to the Inverter output circuit.
- Do not connect a phase-advancing capacitor to the I/O sides and/or a surge suppressor to the output side.
- When a magnetic contactor is installed between the Inverter and the motor, do not turn it ON/OFF during operation.

For the details of the peripheral devices, refer to the catalog.

■ Constants List

 Addition of Constants Accompanied by the Upgraded Software Version

#1: Applicable for software version Nos.VSP010028, VSP010106 or later.

First Functions (Constants n001 to n049)

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|---|----------------------------|--------------|--------------------------|------------------------------------|----------------------|--------------|
| 001 | 0101H | Password | 0 to 6, 8, 9 | = | 1 | No | | 55 |
| 002 | 0102 | Control Mode Selection (Note 6) | 0, 1 | i | 0 (Note 1) | No | | 60 |
| 003 | 0103 | RUN Command Selection | 0 to 3 | - | 0 | No | | 65 |
| 004 | 0104 | Frequency Reference Selection | 0 to 9 | = | 0 (Note 5) | No | | 66 |
| 005 | 0105 | Stopping Method Selection | 0, 1 | - | 0 | No | | 87 |
| 006 | 0106 | Reverse Run Prohibit | 0, 1 | - | 0 | No | | 67 |
| 007 | 0107 | Stop Key Selection | 0, 1 | - | 0 | No | | 86 |
| 800 | 0108 | Frequency Reference Selection in Local Mode | 0, 1 | ш | 0 (Note 5) | No | | 66 |
| 009 | 0109 | Frequency Reference Setting Method From Digital Operator | 0, 1 | ш | 0 | No | | 66 |
| 010 | 010A | Detecting Fault Contact of Digital Operator | 0, 1 | ш | 0 | No | | 65 |
| 011 | 010B | Max. Output Frequency | 50.0 to 400.0 Hz | 0.1 Hz | 60.0 Hz | No | | 57 |
| 012 | 010C | Max. Voltage | 0.1 to 255.0 V (Note 2) | 0.1 V | 200.0 V (Note 2) | No | | 57 |
| 013 | 010D | Max. Voltage Output Frequency | 0.2 to 400.0 Hz | 0.1 Hz | 60.0 Hz | No | | 57 |
| 014 | 010E | Mid. Output Frequency | 0.1 to 399.9 Hz | 0.1 Hz | 1.5 Hz (Note 6) | No | | 57 |
| 015 | 010F | Mid. Output Frequency Voltage | 0.1 to 255.0 V (Note 2) | 0.1 V | 12.0 V (Note 2, 6) | No | | 57 |
| 016 | 0110 | Min. Output Frequency | 0.1 to 10.0 Hz | 0.1 Hz | 1.5 Hz (Note 6) | No | | 57 |
| 017 | 0111 | Min. Output Frequency Voltage | 0.1 to 50.0 V (Note 2) | 0.1 V | 12.0 V (Note 2, 6) | No | | 57 |

9. Specifications

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|---|---------------------|---|--------------------|------------------------------------|----------------------|--------------|
| 018 | 0112 | Selecting Setting Unit for Acceleration/deceleration Time | 0, 1 | - | 0 | No | | 72 |
| 019 | 0113 | Acceleration Time 1 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 020 | 0114 | Deceleration Time 1 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 021 | 0115 | Acceleration Time 2 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 022 | 0116 | Deceleration Time 2 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 023 | 0117 | S-curve Selection | 0 to 3 | - | 0 | No | | 73 |
| 024 | 0118 | Frequency Reference 1 (Master Frequency Reference) | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 6.00 Hz | Yes | | 67 |
| 025 | 0119 | Frequency Reference 2 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 026 | 011A | Frequency Reference 3 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 027 | 011B | Frequency Reference 4 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 028 | 011C | Frequency Reference 5 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 029 | 011D | Frequency Reference 6 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 030 | 011E | Frequency Reference 7 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----------|--|---|--|---|--------------------|------------------------------------|----------------------|--------------|
| 031 | 011F | Frequency Reference 8 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 032 | 0120 | Jog Frequency | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/ 0.1 Hz (100 Hz or more) | 6.00 Hz | Yes | | 68 |
| 033 | 0121 | Frequency Reference Upper Limit | 0% to 110% | 1% | 100% | No | | 70 |
| 034 | 0122 | Frequency Reference Lower Limit | 0% to 110% | 1% | 0% | No | | 70 |
| 035 | 0123 | Setting/displaying Unit Selection for Frequency Reference | 0 to 3999 | ı | 0 | No | | 150 |
| 036 | 0124 | Motor Rated Current | 0% to 150% of Inverter rated current | 0.1 A | (Note 3) | No | | 107 |
| 037 | 0125 | Electronic Thermal Motor Protection Selection | 0 to 2 | ш | 0 | No | | 107 |
| 038 | 0126 | Electronic Thermal Motor Protection Time Constant Setting | 1 to 60 min | 1 min | 8 min | No | | 107 |
| 039 | 0127 | Selecting Cooling Fan Operation | 0, 1 | ш | 0 | No | | 109 |
| 040 | 0128 | Motor Rotation Direction | 0, 1 | - | 0 | No | | 43 |
| 041 | 0129 | Acceleration Time 3 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 042 | 012A | Deceleration Time 3 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 043 | 012B | Acceleration Time 4 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 044 | 012C | Deceleration Time 4 | 0.00 to 6000 s | Depend on n018 setting | 10.0 s | Yes | | 71 |
| 045 #1 | 012D | Frequency reference bias step amount (UP/DOWN command 2) | 0.00 Hz to 99.99 Hz | 0.01 Hz | 0.00 Hz | Yes | | - |
| 046 #1 | 012E | Frequency reference bias accel/decel rate (UP/DOWN command 2) | 0, 1 | - | 0 | Yes | | - |
| 047 #1 | 012F | Frequency reference bias operation mode selection (UP/DOWN command 2) | 0, 1 | - | 0 | Yes | | - |

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----------|--|---|--|--------------|--------------------|------------------------------------|----------------------|--------------|
| 048 #1 | 0130 | Frequency reference bias value (UP/DOWN command 2) | -99.9% to 100.0% (n011/ 100%) | 0.1% | 0.0% | No | | - |
| 049 #1 | 0131 | Analog frequency reference fluctuation limit level (UP/ DOWN command 2) | 0.1% to 100.0% (n011/100%) | 0.1% | 1.0% | Yes | | - |

Second Functions (Constants n050 to n079)

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|--|-----------------------------------|--------------|--------------------|------------------------------------|----------------------|--------------|
| 050 | 0132 | Multi-function Input Selection 1 (Terminal S1) | 1 to 25, 26, 27 | = | 1 | No | | 90 |
| 051 | 0133 | Multi-function Input Selection 2 (Terminal S2) | 1 to 25, 26, 27 | - | 2 | No | | 90 |
| 052 | 0134 | Multi-function Input Selection 3 (Terminal S3) | 1 to 25, 26, 27 | - | 3 | No | | 90 |
| 053 | 0135 | Multi-function Input Selection 4 (Terminal S4) | 1 to 25, 26, 27 | - | 5 | No | | 90 |
| 054 | 0136 | Multi-function Input Selection 5 (Terminal S5) | 1 to 25, 26, 27 | - | 6 | No | | 90 |
| 055 | 0137 | Multi-function Input Selection 6 (Terminal S6) | 1 to 25, 26, 27 | - | 7 | No | | 90 |
| 056 | 0138 | Multi-function Input Selection 7 (Terminal S7) | 1 to 25, 26, 27, 34, 35, 36#1 | - | 10 | No | | 90 |
| 057 | 0139 | Multi-function Output Selection 1 | 0 to 7, 8, 9, 10 to 19, 20, 21 | - | 0 | No | | 97 |
| 058 | 013A | Multi-function Output Selection 2 | 0 to 7, 8, 9, 10 to 19, 20, 21 | - | 1 | No | | 97 |
| 059 | 013B | Multi-function Output Selection 3 | 0 to 7, 8, 9, 10 to 19, 20, 21 | - | 2 | No | | 97 |
| 060 | 013C | Analog Frequency Reference Gain | 0 % to 255 % | 1 % | 100 % | Yes | | 69 |
| 061 | 013D | Analog Frequency Reference Bias | -100 % to 100 % | 1 % | 0 % | Yes | | 69 |
| 062 | 013E | Filter Time Constant for Ana- log Frequency Reference | 0.00 to 2.00 s | 0.01 s | 0.10 s | Yes | | - |
| 063 | 013F | Watchdog Error Operation Selection (For SI-T/V7) | 0 to 4 | - | 0 | No | | 159 |

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|---|--------------------|--------------|--------------------|------------------------------------|----------------------|--------------|
| 064 | 0140 | Frequency Reference Loss Detection Selection | 0, 1 | - | 0 | No | | 151 |
| 065 | 0141 | Monitor Output Type | 0, 1 | - | 0 | No | | 80 |
| 066 | 0142 | Monitor Item Selection | 0 to 6 | - | 0 | No | | 79 |
| 067 | 0143 | Monitor Gain | 0.00 to 2.00 | 0.01 | 1.00 | Yes | | 80 |
| 068 | 0144 | Analog Frequency Reference Gain (Voltage input from Oper- ator) | -255% to 255% | 1% | 100% | Yes | | 137 |
| 069 | 0145 | Analog Frequency Reference Bias (Voltage input from Oper- ator) | -100% to 100% | 1% | 0% | Yes | | 137 |
| 070 | 0146 | Analog Frequency Reference Filter Time Constant (Voltage input from Operator) | 0.00 to 2.00 s | 0.01 s | 0.10 s | Yes | | 137 |
| 071 | 0147 | Analog Frequency Reference Gain (Voltage input from Operator) | -255% to 255% | 1% | 100% | Yes | | 137 |
| 072 | 0148 | Analog Frequency Reference Bias (Current input from Operator) | -100% to 100% | 1% | 0% | Yes | | 137 |
| 073 | 0149 | Analog Frequency Reference Filter Time Constant (Current input from Operator) | 0.00 to 2.00 s | 0.01 s | 0.10 s | Yes | | 137 |
| 074 | 014A | Pulse Train Frequency Reference Gain | 0 % to 255 % | 1 % | 100 % | Yes | | - |
| 075 | 014B | Pulse Train Frequency Reference Bias | -100 % to 100 % | 1 % | 0 % | Yes | | i |
| 076 | 014C | Pulse Train Frequency Filter Time Constant | 0.00 to 2.00 s | 0.01 s | 0.10 s | Yes | | i |
| 077 | 014D | Multi-function Analog Input Function | 0 to 4 | - | 0 | No | | 95 |
| 078 | 014E | Multi-function Analog Input Signal Selection | 0, 1 | = | 0 | No | | 94 |
| 079 | 014F | Frequency Reference Bias (FBIAS) Value | 0 % to 50 % | 1 % | 10 % | No | | 94 |

Third Functions (Constants n080 to n119)

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|---|---------------------|--|--------------------|------------------------------------|----------------------|--------------|
| 080 | 0150 | Carrier Frequency Selection | 1 to 4, 7 to 9 | i | (Note 4) | No | | 83 |
| 081 | 0151 | Momentary Power Loss Ridethrough Method | 0 to 2 (Note 10) | ı | 0 | No | | 72 |
| 082 | 0152 | Automatic Retry Attempts | 0 to 10 times | - | 0 | No | | 77 |
| 083 | 0153 | Jump Frequency 1 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | No | | 76 |
| 084 | 0154 | Jump Frequency 2 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | No | | 76 |
| 085 | 0155 | Jump Frequency 3 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | No | | 76 |
| 086 | 0156 | Jump Frequency Range | 0.00 to 25.50 Hz | 0.01 Hz | 0.00 Hz | No | | 76 |
| 087 | 0157 | Cumulative operation time function selection (Note 9) | 0, 1 | - | 0 | No | | - |
| 880 | 0158 | Cumulative operation time (Note 9) | 0 to 6550 | 1 = 10H | 0H | No | | - |
| 089 | 0159 | DC Injection Braking Current | 0 to 100% | 1% | 50% | No | | 78 |
| 090 | 015A | DC Injection Braking Time at Stop | 0.0 to 25.5 s | 0.1 s | 0.5 s | No | | 88 |
| 091 | 015B | DC Injection Braking Time at Startup | 0.0 to 25.5 s | 0.1 s | 0.0 s | No | | 78 |
| 092 | 015C | Stall Prevention During Deceleration | 0, 1 | Ü | 0 | No | | 105 |
| 093 | 015D | Stall Prevention Level During Acceleration | 30% to 200% | 1% | 170% | No | | 102 |
| 094 | 015E | Stall Prevention Level During Running | 30% to 200% | 1% | 160% | No | | 105 |
| 095 | 015F | Frequency Detection Level | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | No | | 75 |

| No. | Register | Name | Setting Range | Setting Unit | Factory | Change | User | Ref. |
|------|------------------------------|---|---------------------|--|----------|--------------------------|--------------|------|
| 140. | No. for Trans- mission | Nume | octaing rainge | octaing office | Setting | during Opera- tion | Set- ting | Page |
| 096 | 0160 | Overtorque Detection Function Selection 1 | 0 to 4 | - | 0 | No | | 74 |
| 097 | 0161 | Overtorque/Undertorque Detection Function Selection 2 | 0, 1 | = | 0 | No | | 75 |
| 098 | 0162 | Overtorque Detection Level | 30% to 200% | 1% | 160% | No | | 75 |
| 099 | 0163 | Overtorque Detection Time | 0.1 to 10.0 s | 0.1 s | 0.1 s | No | | 75 |
| 100 | 0164 | Hold Output Frequency Sav- ing Selection | 0, 1 | - | 0 | No | | 94 |
| 101 | 0165 | Speed Search Deceleration Time | 0.1 to 10.0 s | 0.1 s | 2.0 s | No | | 78 |
| 102 | 0166 | Speed Search Operation Level | 0 % to 200 % | 1 % | 150 % | No | | 78 |
| 103 | 0167 | Torque Compensation Gain | 0.0 to 2.5 | 0.1 | 1.0 | Yes | | 59 |
| 104 | 0168 | Torque Compensation Time Constant | 0.0 to 25.5 s | 0.1 s | (Note 6) | No | | 59 |
| 105 | 0169 | Torque Compensation Iron Loss | 0.0 to 6550 | 0.01 W (less than 1000 W)/1 W (1000 W or more) | (Note 3) | No | | 59 |
| 106 | 016A | Motor Rated Slip | 0.0 to 20.0 Hz | 0.1 Hz | (Note 3) | Yes | | 61 |
| 107 | 016B | Motor Line-to-neutral Resistance | 0.000 to 65.50 Ω | 0.001 W (less than 10 W)/0.01 W (10 W or more) | (Note 3) | No | | 61 |
| 108 | 016C | Motor Leakage Inductance | 0.00 to 655.0 mH | 0.01 mH (less than 100 mH)/0.1 mH (100 mH or more) | (Note 3) | No | | 62 |
| 109 | 016D | Torque Compensation Voltage Limiter | 0% to 250% | 1% | 150% | No | | 1 |
| 110 | 016E | Motor No-load Current | 0% to 99% | 1% | (Note 3) | No | | 60 |
| 111 | 016F | Slip Compensation Gain | 0.0 to 2.5 | 0.1 | (Note 6) | Yes | | 106 |
| 112 | 0170 | Slip Compensation Time Constant | 0.0 to 25.5 s | 0.1 s | (Note 6) | No | | 106 |
| 113 | 0171 | Slip Compensation During Regenerative Operation | 0, 1 | = | 0 | No | | - |

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|--|---------------|--------------|--------------------|------------------------------------|----------------------|--------------|
| 114 | 0172 | Number of Transmission Cycle Error Detection (For SI-T/V7) | 2 to 10 | ı | 2 | No | | 159 |
| 115 | 0173 | Stall Prevention Above Base Speed During Run | 0, 1 | - | 0 | No | | 104 |
| 116 | 0174 | Acceleration/deceleration Time during Stall Prevention | 0, 1 | - | 0 | No | | 105 |
| 117 | 0175 | Undertorque Detection Func- tion Selection 1 | 0 to 4 | - | 0 | No | | 154 |
| 118 | 0176 | Undertorque Detection Level | 0% to 200% | 1% | 10% | No | | 154 |
| 119 | 0177 | Undertorque Detection Time | 0.1 to 10.0 s | 0.1 s | 0.1 s | No | | 154 |

Fourth Functions (Constants n120 to n179)

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|------------------------|---------------------|--|--------------------|------------------------------------|----------------------|--------------|
| 120 | 0178 | Frequency Reference 9 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 121 | 0179 | Frequency Reference 10 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 122 | 017A | Frequency Reference 11 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 123 | 017B | Frequency Reference 12 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 124 | 017C | Frequency Reference 13 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 125 | 017D | Frequency Reference 14 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |

| No. | Register | Name | Setting Range | Setting Unit | Factory | Change | User | Ref. |
|-----|------------------------------|---|---------------------|--|-----------|--------------------------|--------------|------|
| | No. for Trans- mission | | | | Setting | during Opera- tion | Set- ting | Page |
| 126 | 017E | Frequency Reference 15 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 127 | 017F | Frequency Reference 16 | 0.00 to 400.0 Hz | 0.01 Hz (less than 100 Hz)/0.1 Hz (100 Hz or more) | 0.00 Hz | Yes | | 67 |
| 128 | 0180 | PID Control Selection | 0 to 8 | - | 0 | No | | 131 |
| 129 | 0181 | PID Feedback Gain | 0.00 to 10.00 Hz | 0.01 | 1.00 | Yes | | 134 |
| 130 | 0182 | Proportional Gain (P) | 0.0 to 25.0 | 0.1 | 1.0 | Yes | | 133 |
| 131 | 0183 | Integral Time (I) | 0.0 to 360.0 s | 0.1 s | 1.0 s | Yes | | 133 |
| 132 | 0184 | Derivative Time (D) | 0.00 to 2.50 s | 0.01 s | 0.00 | Yes | | 133 |
| 133 | 0185 | PID Offset Adjustment | -100% to 100% | 1% | 0% | Yes | | 133 |
| 134 | 0186 | Upper Limit of Integral Values | 0% to 100% | 1% 100% | | Yes | | 133 |
| 135 | 0187 | Primary Delay Time Constant for PID Output | 0.0 to 10.0 s | 0.1 s | 0.0 s | Yes | | 134 |
| 136 | 0188 | Selection of PID Feedback Loss Detection | 0 to 2 | - | 0 | No | | 135 |
| 137 | 0189 | PID Feedback Loss Detection Level | 0% to 100% | 1% | 0% | No | | 135 |
| 138 | 018A | PID Feedback Loss Detection Time | 0.0 to 25.5 s | 0.1 s | 1.0 s | No | | 135 |
| 139 | 018B | Energy-saving Control Selection (V/f Control Mode) | 0, 1 | - | 0 | No | | 125 |
| 140 | 018C | Energy-saving Coefficient K2 | 0.0 to 6550 | 0.1 | (Note 7) | No | | 125 |
| 141 | 018D | Energy-saving Control Voltage Lower Limit at 60 Hz | 0% to 120% | 1% | 50% | No | | 126 |
| 142 | 018E | Energy-saving Control Voltage Lower Limit at 6 Hz | 0% to 25% | 1% | 12% | No | | 126 |
| 143 | 018F | Power Average Time | 1 to 200 | 1 = 24 ms | 1 (24 ms) | No | | 127 |
| 144 | 0190 | Search Operation Voltage Limit | 0% to 100% | 1% | 0% | No | | 127 |
| 145 | 0191 | Search Operation Voltage Step at 100% | 0.1% to 10.0% | 0.1% | 0.5% | No | | 127 |

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----|--|--|----------------------------------|--------------|--------------------|------------------------------------|----------------------|--------------|
| 146 | 0192 | Search Operation Voltage Step at 5% | 0.1% to 10.0% | 0.1% | 0.2% | No | | 127 |
| 149 | 0195 | Pulse Train Input Scaling | 100 to 3300 | 1 = 10 Hz | 2500 (25 kHz) | No | | 101 |
| 150 | 0196 | Pulse Monitor Output Frequency Selection | 0, 1, 6, 12, 24, 36, 40 to 45 | - | 0 | No | | 81 |
| 151 | 0197 | MEMOBUS Timeover Detection | 0 to 4 | =· | 0 | No | | 111 |
| 152 | 0198 | MEMOBUS Frequency Reference and Frequency Monitor Unit | 0 to 3 | - | 0 | No | | 111 |
| 153 | 0199 | MEMOBUS Slave Address | 0 to 32 | - | 0 | No | | 112 |
| 154 | 019A | MEMOBUS BPS Selection | 0 to 3 | - | 2 | No | | 112 |
| 155 | 019B | MEMOBUS Parity Selection | 0 to 2 | - | 0 | No | | 112 |
| 156 | 019C | Transmission Waiting Time | 10 to 65 ms | 1 ms | 10 ms | No | | 112 |
| 157 | 019D | RTS Control | 0, 1 | - 0 | | No | | 112 |
| 158 | 019E | Motor Code (Energy-saving Control) | 0 to 70 | - | (Note 7) | No | | 125 |
| 159 | 019F | Upper Voltage Limit for Ener- gy-saving Control at 60 Hz | 0% to 120% | 1% | 120% | No | | 126 |
| 160 | 01A0 | Upper Voltage Limit for Ener- gy-saving Control at 6 Hz | 0% to 25% | 1% | 16% | No | | 126 |
| 161 | 01A1 | Search Operation Power Detection Hold Width | 0% to 100% | 1% | 10% | No | | 128 |
| 162 | 01A2 | Time Constant of Power Detection Filter | 0 to 255 | 1 = 4 ms | 5 (20 ms) | No | | 128 |
| 163 | 01A3 | PID Output Gain | 0.0 to 25.0 | 0.1 | 1.0 | No | | 134 |
| 164 | 01A4 | PID Feedback Value Selection | 0 to 5 | - | 0 | No | | 132 |
| 165 | 01A5 | Externally-mounting type braking resistor overheat protection selection (Note 8) | 0, 1 | - | 0 | No | | - |
| 166 | 01A6 | Input Open-phase Detection Level | 0% to 100% | 1% | 0% | No | | 152 |
| 167 | 01A7 | Input Open-phase Detection Time | 0 to 255 s | 1 s | 0 s | No | | 152 |
| 168 | 01A8 | Output Open-phase Detection Level | 0% to 100% | 1% | 0% | No | | 152 |

| No. | Register No. for Trans- mission | Name | Setting Range | Setting Unit | Factory Setting | Change during Opera- tion | User Set- ting | Ref. Page |
|-----------|--|--|--|---------------------|-----------------------|------------------------------------|----------------------|--------------|
| 169 | 01A9 | Output Open-phase Detection Time | 0.0 to 2.0 s | 0.1 s | 0.0 s | No | | 152 |
| 170 #1 | 01AA | ENTER command operation selection (MEMOBUS communications) | 0, 1 | ı | 0 | No | | 121 |
| 171 #1 | 01AB | Frequency reference bias up- per limit (UP/DOWN com- mand 2) | 0.0 to 100.0% (n011/100%) | 0.1% | 0.0% | Yes | | i |
| 172 #1 | 01AC | Frequency reference bias low- er limit (UP/DOWN command 2) | -99.9 to 0.0% (n011/100%) | 0.1% | 0.0% | Yes | | - |
| 173 | 01AD | DC Injection Braking Proportional Gain | 1 to 999 | 1 = 0.001 | 83 (0.083) | No | | i |
| 174 | 01AE | DC Injection Braking Integral Time Constant | 1 to 250 | 1 = 4 ms | 25 (100 ms) | No | | 1 |
| 175 | 01AF | Reducing Carrier Frequency Selection at Low Speed | 0, 1 | ш | 0 ^(Note 9) | No | | 86 |
| 176 | 01B0 | Constant Copy Function Selection | rdy, rEd, Cpy, vFy, vA, Sno | - | rdy | No | | 138 |
| 177 | 01B1 | Constant Read Selection Prohibit | 0, 1 | ш | 0 | No | | 139 |
| 178 | 01B2 | Fault History | Stores, dis- plays most recent 4 alarms | Setting disabled | i | No | | 51 |
| 179 | 01B3 | Software Version No. | Displays lower-place 4 digits of soft- ware No. | Setting disabled | - | No | | - |

- Note: 1. Not initialized by constant initialization.
 - Upper limit of setting range and factory setting are doubled for 400 V Class.
 - 3. Depends on Inverter capacity. Refer to the next page.
 - 4. Depends on Inverter capacity, Refer to page 84.
 - Factory setting of the model with JVOP-147 Digital Operator (without potentiometer) is 1. Setting can be set to 0 by constant initialization.
 - When control mode selection (n002) is changed, factory setting corresponds to the control mode. Refer to the next page.
 - 7. Depends on Inverter capacity. Refer to page 125.
 - Constant that is provided for 5.5 kW and 7.5 kW Inverters of 200-V and 400-V classes
 - 9. 1 (Enabled) for 5.5 kW and 7.5 kW Inverters of 200-V and 400-V classes
 - 10. Do not select 3 to 100 as they are reserved for future use.

| No. | Name | V/f Control Mode (n002 = 0) | Vector Con- trol Mode (n002 = 1) |
|------|--------------------------------------|-----------------------------------|--|
| n014 | Mid. Output Frequency | 1.5 Hz | 3.0 Hz |
| n015 | Mid. Output Frequency Voltage | 12.0 V*1 *2 | 11.0 V*1 |
| n016 | Min. Output Frequency | 1.5 Hz | 1.0 Hz |
| n017 | Min. Output Frequency Voltage | 12.0 V*1 *2 | 4.3 V*1 |
| n104 | Torque Compensation Time Constant | 0.3 s | 0.2 s |
| n111 | Slip Compensation Gain | 0.0 | 1.0 |
| n112 | Slip Compensation Gain Time Constant | 2.0 s | 0.2 s |

^{* 1.} Values are doubled for 400 V Class.

Factory Settings That Change with the Inverter Capacity

· 200 V Class 3-phase

| No. | Name | Unit | | Factory Setting | | | | | | | |
|------|--------------------------------------|------|-----------|-----------------|-----------|------------|-----------|-----------|-----------|-----------|-----------|
| - | Inverter Capacity | kW | 0.1 kW | 0.2 kW | 0.4 kW | 0.75 kW | 1.5 kW | 2.2 kW | 3.7 kW | 5.5 kW | 7.5 kW |
| n036 | Motor Rated Current | Α | 0.6 | 1.1 | 1.9 | 3.3 | 6.2 | 8.5 | 14.1 | 19.6 | 26.6 |
| n105 | Torque Compensation Iron Loss | W | 1.7 | 3.4 | 4.2 | 6.5 | 11.1 | 11.8 | 19 | 28.8 | 43.9 |
| n106 | Motor Rated Slip | Hz | 2.5 | 2.6 | 2.9 | 2.5 | 2.6 | 2.9 | 3.3 | 1.5 | 1.3 |
| n107 | Motor Line-to-neutral Resistance* | Ω | 17.99 | 10.28 | 4.573 | 2.575 | 1.233 | 8.0 | 0.385 | 0.199 | 0.111 |
| n108 | Motor Leakage Inductance | mΗ | 110.4 | 56.08 | 42.21 | 19.07 | 13.4 | 9.81 | 6.34 | 4.22 | 2.65 |
| n110 | Motor No-load Current | % | 72 | 73 | 62 | 55 | 45 | 35 | 32 | 26 | 30 |

^{*} Sets the value of the motor resistance for one phase.

^{* 2.} $10.0\ V$ for 5.5 kW and 7.5 kW Inverters of 200-V Class and 20.0 V of 400-V Class.

• 200 V Class Single-phase

| No. | Name | Unit | | | Fac | ctory Sett | ing | | |
|------|-----------------------------------|------|--------|--------|--------|------------|--------|--------|--------|
| - | Inverter Capacity | kW | 0.1 kW | 0.2 kW | 0.4 kW | 0.75 kW | 1.5 kW | 2.2 kW | 3.7 kW |
| n036 | Motor Rated Current | Α | 0.6 | 1.1 | 1.9 | 3.3 | 6.2 | 8.5 | 14.1 |
| n105 | Torque Compensation Iron Loss | W | 1.7 | 3.4 | 4.2 | 6.5 | 11.1 | 11.8 | 19 |
| n106 | Motor Rated Slip | Hz | 2.5 | 2.6 | 2.9 | 2.5 | 2.6 | 2.9 | 3.3 |
| n107 | Motor Line-to-neutral Resistance* | Ω | 17.99 | 10.28 | 4.573 | 2.575 | 1.233 | 0.8 | 0.385 |
| n108 | Motor Leakage Inductance | mH | 110.4 | 56.08 | 42.21 | 19.07 | 13.4 | 9.81 | 6.34 |
| n110 | Motor No-load Current | % | 72 | 73 | 62 | 55 | 45 | 35 | 32 |

^{*} Sets the value of the motor resistance for one phase.

· 400 V Class 3-phase

| No. | Name | Unit | Factory Setting | | | | | | | | |
|------|--------------------------------------|------|-----------------|--------|------------|-----------|-----------|-----------|-----------|-----------|-----------|
| - | Inverter Capacity | kW | 0.2 kW | 0.4 kW | 0.75 kW | 1.5 kW | 2.2 kW | 3.0 kW | 3.7 kW | 5.5 kW | 7.5 kW |
| n036 | Motor Rated Current | Α | 0.6 | 1.0 | 1.6 | 3.1 | 4.2 | 7.0 | 7.0 | 9.8 | 13.3 |
| n105 | Torque Compensation Iron Loss | W | 3.4 | 4.0 | 6.1 | 11.0 | 11.7 | 19.3 | 19.3 | 28.8 | 43.9 |
| n106 | Motor Rated Slip | Hz | 2.5 | 2.7 | 2.6 | 2.5 | 3.0 | 3.2 | 3.2 | 1.5 | 1.3 |
| n107 | Motor Line-to-neutral Resistance* | Ω | 41.97 | 19.08 | 11.22 | 5.044 | 3.244 | 1.514 | 1.514 | 0.797 | 0.443 |
| n108 | Motor Leakage Inductance | mH | 224.3 | 168.8 | 80.76 | 53.25 | 40.03 | 24.84 | 24.84 | 16.87 | 10.59 |
| n110 | Motor No-load Current | % | 73 | 63 | 52 | 45 | 35 | 33 | 33 | 26 | 30 |

^{*} Sets the value of the motor resistance for one phase.

10 Conformance to CE Markings

Points regarding conformance to CE markings are given below.

CE Markings

CE markings indicate conformance to safety and environmental standards that apply to business transactions (including production, imports, and sales) in Europe. There are unified European standards for mechanical products (Machine Directive), electrical products (Low Voltage Directive), and electrical noise (EMC Directive). CE markings are required for business transactions in Europe (including production, imports, and sales).

The VS-606V7 Series Inverters bear CE markings indicating conformance to the Low Voltage Directive and the EMC Directive.

- Low Voltage Directive: 73/23/EEC 93/68/EEC
- EMC Directive: 89/336/EEC 92/31/EEC 93/68/EEC

Machinery and installations that incorporate the Inverter are also subject to CE markings. It is ultimately the responsibility of customers making products incorporating the Inverter to attach CE markings to the finished products. The customer must confirm that the finished products (machines or installations) conform to the European Standards.

■ Requirements for Conformance to CE Markings

☐ Low Voltage Directive

VS-606V7 Series Inverters satisfy testing for conformance to the Low Voltage Directive under the conditions described in European Standard EN50178.

Requirements for Conformance to the Low Voltage Directive VS-606V7 Series Inverters must satisfy the following conditions in order to conform to the Low Voltage Directive.

 Only basic insulation to meet the requirements of protection class 1 and overvoltage category II is provided with control circuit terminals. Additional insulation may be necessary in the end product to conform to CE requirements. For 400 V Class Inverters, always ground the supply neutral to conform to CE requirements.

□ EMC Directive

VS-606V7 Series Inverters satisfy testing for conformance to the EMC Directive under the conditions described in European Standard EN61800-3.


Installation Method

In order to ensure that the machinery or installation incorporating the Inverter conforms to the EMC Directive, perform installation according to the method below.


- Install a noise filter that conforms to European Standards on the input side. (Refer to EMC Noise Filter on page 217.)
- Use a shielded line or metal piping for wiring between the Inverter and Motor. Make the wiring as short as possible.
- For details of installation method, refer to Installation Manual (document No. EZZ008390.)

Installation and Wiring of Inverter and Noise Filter (Model: CIMR-V7□□20P1 to 27P5),

(Model: CIMR-V7 40P1 to 45P5)

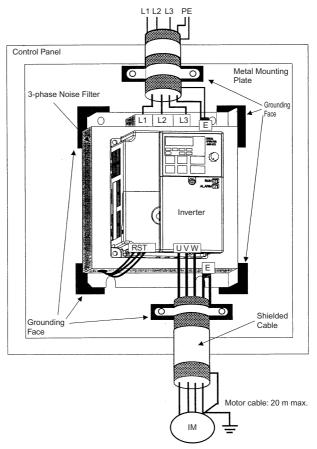


Installation and Wiring of Inverter and Noise Filter (Model: CIMR-V7□□B0P1 to B4P0)

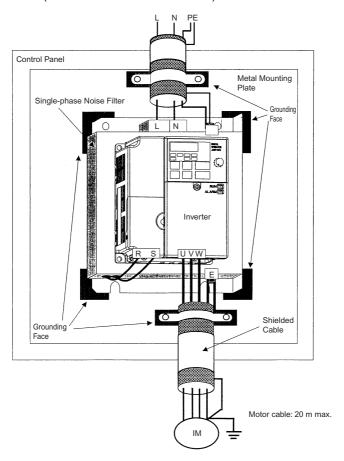

EMC Noise Filter


| Volt- | Inverter Model | | N | loise Filter (N | /lanufactu | ırer: RASMI) | | |
|--------------|-------------------|-----------|--------------------------|-------------------------|--------------|------------------------|-----------|-----|
| age Class | CIMR- V7*□□ | Model No. | Num- ber of Phases | Rated Current (A) | Mass (kg) | Dimensions W×L×H | Y×X | φd |
| 200 V | B0P1 | RS1010-V7 | 1 | 10 | 0.6 | $71\times169\times45$ | 51 × 156 | 5.0 |
| | B0P2 | | | | | | | |
| | B0P4 | | | | | | | |
| | B0P7 | RS1020-V7 | 1 | 20 | 1.0 | 111 × 169 × 50 | 91 × 156 | 5.0 |
| | B1P5 | | | | | | | |
| | B2P2 | RS1030-V7 | 1 | 30 | 1.1 | 144 × 174 × 50 | 120 × 161 | 5.0 |
| | B3P7 | RS1040-V7 | 1 | 40 | 1.2 | 174 × 174 ×50 | 150 × 161 | 5.0 |
| | B4P0 | | | | | | | |
| | 20P1 | RS2010-V7 | 3 | 10 | 8.0 | $82\times194\times50$ | 62 × 181 | 5.0 |
| | 20P2 | | | | | | | |
| | 20P4 | | | | | | | |
| | 20P7 | | | | | | | |
| | 21P5 | RS2020-V7 | 3 | 16 | 1.0 | 111 × 169 × 50 | 91 × 156 | 5.0 |
| | 22P2 | | | | | | | |
| | 23P7 | RS2030-V7 | 3 | 26 | 1.1 | $144\times174\times50$ | 120 × 161 | 5.0 |
| | 24P0 | | | | | | | |
| | 25P5 | RS2050-V7 | 3 | 50 | 2.3 | $184\times304\times56$ | 150 × 264 | 6.0 |
| | 27P5 | | | | | | | |
| 400 V | 40P2 | RS3005-V7 | 3 | 5 | 1.0 | 111 × 169 × 45 | 91 × 156 | 5.0 |
| | 40P4 | | | | | | | |
| | 40P7 | RS3010-V7 | 3 | 10 | 1.0 | 111 × 169 × 45 | 91 × 156 | 5.0 |
| | 41P5 | | | | | | | |
| | 42P2 | | | | | | | |
| | 43P0 | RS3020-V7 | 3 | 15 | 1.1 | $144\times174\times50$ | 120 × 161 | 5.0 |
| | 43P7 | | | | | | | |
| | 44P0 | | | | | | | |
| | 45P5 | RS3030-V7 | 3 | 30 | 2.3 | 184 × 304 × 56 | 150 × 264 | 6.0 |
| | 47P5 | | | | | | | |

The EMC-compliant V7 Series noise filter is footprint type.

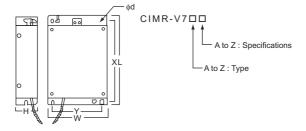

Revision History

The revision dates and numbers of the revised manuals are given on the bottom of the back cover.

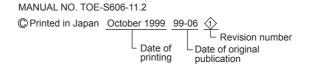

| Date of Printing | Rev. No. | Section | Revised Content |
|---------------------|-------------|-----------------------------|---|
| June 1999 | - | | First edition |
| October 1999 | 1> | | Partly revised |
| December 1999 | 2 > | | Revision: Layout |
| April 2000 | 3> | Chapter 6 | Partly revised |
| April 2001 | 4> | Notes for Safe Operation | Revision: Warning/Caution mark |
| | | | Revision: Changed "enclosed wall- mounted type NEMA 1" to "enclosed wall-mounted type NEMA 1 (TYPE 1)" |
| September 2001 | (5) | Chapter 1 | Addition: Description of Inverters for Japan domestic standards |
| May 2002 | 6 > | Chapter 8 | Addition: Troubleshooting |
| July 2002 | ♦ | | Partly deleted |
| September | <u>(8)</u> | Front cover | Deletion: CE and UL marks |
| 2002 | , v | Notes for Safe Operation | Addition: Warnings for CE Markings |

| Date of Printing | Rev. No. | Section | Revised Content |
|---------------------|-------------|--------------------------|--|
| June 2003 | 9 > | Chapter 6 | Addition: Description of overtorque/ undertorque detection func- tion selection 2 |
| | | | Addition: Description of undertorque detection |
| January 2004 | ₫0> | Endsheet on back cover | Addition: Revision history |
| August 2004 | ₫\$ | | Addition: Details of 5.5/7.5 kW Inverters |
| August 2004 | 12 > | Back cover | Addition: Safety Precautions |
| January 2005 | 13> | Notes for safe operation | Addition: OPERATION Precaution if n001=5. |
| | | Chapter 4 | Addition: Note in the Wiring the Control Circuit section |
| | | Chapter 5 | Addition: • Table in the Description of Status Indicators • Flowchart in the Function Indicator Description • Additional information for when LOCAL/REMOTE Selection and Constant No./data are selected |
| | | Chapter 6 | Addition: • Settings needed before operation after wiring • *3 in the n081 Setting table • Settings 28 to 33 for multifunction input selection • Using MECHATROLINK Communications Revision: Setting 5 of Constant Selection/Initialization (n001) |
| | | Chapter 8 | Addition: • Alarm display description for OP6 • Note if inputting power during a GF Deletion: RR (Bullt-in braking transistor fault) |

| Date of Printing | Rev. No. | Section | Revised Content |
|---------------------|-------------|------------|--|
| January 2005 | ₫3> | Chapter 9 | Addition: • Following items in the Standard Wiring diagram • Part that describes sequence input as open collector • Multi-function analog input CN2 • Following constants in the constant list • n063 • n114 Revision: Note for software version for large-capacity Inverters in the constant list |
| April 2005 | 14> | Chapter 5 | Revision: Explanations of status indicators Function Indicator Description Reference page number for multi-function monitoring. |
| | | Chapter 9 | Revision: No. *4 in the Standards Specifications (400 V Class) table. |
| July 2005 | 15 | Back cover | Revision: Address |
| November 2005 | 16> | Chapter 5 | Addition: Note on the fault history display method in Function Indicator Description. |
| | | Chapter 8 | Revision: Cause and corrective action for OH. |
| January 2006 | ₫⁄> | Chapter 9 | Revision: Max. Output Voltage (V) |

VS-606V7 Series INSTRUCTION MANUAL

Safety Precautions



This Inverter is for variable-speed applications with three-phase AC motors for general industrial use

· This Inverter was not designed or manufactured for use in devices or systems that may directly affect or threaten human lives or health. Customers who intend to use the product described in this manual for devices or systems relating to transportation, health care, space aviation, atomic or electric power, or underwater use must contact their Yaskawa representatives or the nearest Yaskawa sales office beforehand. · This product has been manufactured under strict quality-control guidelines. However,

if this product is to be installed in any location where failure of this product could involve or result in a life-and-death situation or loss of human life or in a facility where failure may cause a serious accident or physical injury, safety devices must be installed to minimize the likelihood of any accident.

· Wiring must be performed by an authorized person qualified in electrical work. · Do not use this product with any load other than a three-phase AC motor.

IRUMA BUSINESS CENTER (SOLUTION CENTER) 480, Kamifujisawa, Iruma, Saitama 358-8555, Jap Phone 81-4-2962-5696 Fax 81-4-2962-6138

YASKAWA ELECTRIC AMERICA, INC.

2121 Norman Drive South, Waukegan, IL 60085, U.S.A. Phone 1-847-887-7000 Fax 1-847-887-7370

YASKAWA ELÉTRICO DO BRASIL COMÉRCIO LTD.A. Avenida Fagundes Filho, 620 Bairro Saude-Sao Paulo-SP, Brazil CEP: 04304-000

Phone 55-11-5071-2552 Fax 55-11-5581-8795 YASKAWA ELECTRIC EUROPE GmbH

Am Kronberger Hang 2, 65824 Schwalbach, Germa Phone 49-6196-569-300 Fax 49-6196-569-312

YASKAWA ELECTRIC UK LTD.

uld, G68 9LF. United Kingdom

Phone 44-1236-735000 Fax 44-1236-458182

YASKAWA ELECTRIC KOREA CORPORATION

7F, Doore Bldg. 24, Yeoido-dong, Youngdungpo-Ku, Seoul 150-877, Kores Phone 82-2-784-7844 Fax 82-2-784-8495

YASKAWA ELECTRIC (SINGAPORE) PTE. LTD.

151 Lorong Chuan, #04-01, New Tech Park 556741, Singapore Phone 65-6282-3003 Fax 65-6289-3003

YASKAWA ELECTRIC (SHANGHAI) CO., LTD. No.18 Xizang Zhong Road. Room 1702-1707, Harbour Ring Plaza Shanghai 200001, China

Phone 86-21-5385-2200 Fax 86-21-5385-3299

YASKAWA ELECTRIC (SHANGHAI) CO., LTD. BEIJING OFFICE

Room 1011A, Tower W3 Oriental Plaza, No.1 East Chang An Ave. Dong Cheng District, Beijing 100738, China Phone 86-10-8518-4086 Fax 86-10-8518-4082

YASKAWA ELECTRIC TAIWAN CORPORATION

9F, 16, Nanking E. Rd., Sec. 3, Taipei, Taiwan Phone 886-2-2502-5003 Fax 886-2-2505-1280

YASKAWA ELECTRIC CORPORATION

nt that the end user of this product is to be the military and said product is to be employed in any weapons systems or the manufacture thereof, the export will fall under the relevant regulations as stipulated in the Foreign Exchange and Foreign Trade Regulations. Therefore, be sure to follow all procedures and submit all relevant documentation according to any and all rules, regulations and laws that may apply ecifications are subject to change without notice for ongoing product modifications and improvements @ 1999-2006 YASKAWA ELECTRIC CORPORATION. All rights reserved.

MANUAL NO. TOE-S606-11.2H Printed in Japan January 2006 99-6 1>0 05.7(7)